


INTRODUCTION

- ❑ These operating instructions and description of device functions are provided as part of the scope of supply.
- ❑ They could be modified without prior notice. The improper use, possible tampering of the instrument or parts of it and substitutions of any components not original, renders the warranty automatically void.
- ❑ The flow meter realizes a measure with liquids of conductivity greater than $5\mu\text{S}/\text{cm}$ in closed conduits, and is composed of a converter (described in this manual) and a sensor (refer to the specific manual).
- ❑ The converter could be coupled directly on the sensor (compact version) or coupled to the sensor by cable supplied with it (remote version).

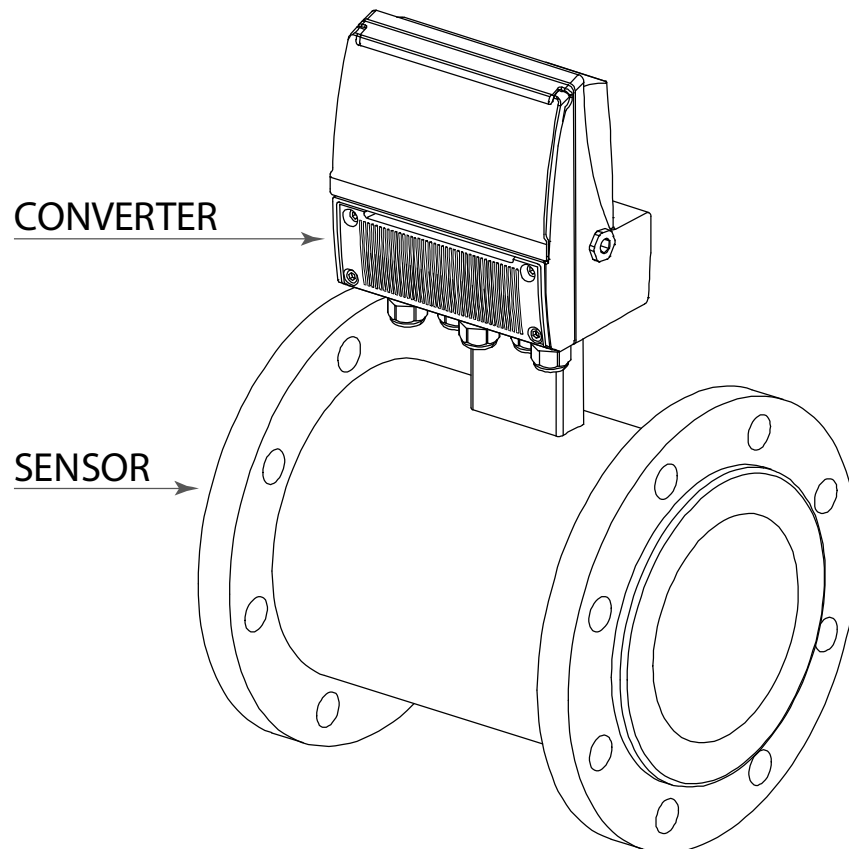

SAFETY INFORMATION

Any use other than described in this manual affects the protection provided by the manufacturer and compromises the safety of people and the entire measuring system and is, therefore, not permitted. The manufacturer is not liable for damaged caused by improper or non-designated use.

- ❑ Transport the measuring device to the measuring point in the original packaging. Do not remove covers or caps until immediately before installation. In case of cartons packaging it is possible to place one above the other but no more than three cartons. In case of wooden packaging do not place one above the other.
- ❑ Disposal of this product or parts of it must be carried out according to the local public or private waste collection service regulations.
- ❑ The converter must only be installed, connected and maintained by qualified and authorized specialists (e.g. electrical technicians) in full compliance with the instructions in this Operating Instruction, the applicable norms, legal regulations and certificates (depending on the application).

- The specialists must have read and understood these Operating Instructions and must follow the instructions it contains. The Operating Instructions provide detailed information about the converter. If you are unclear on anything in these Operating Instructions, you must call the ISOIL service department.
- The converter should only be installed after have verified technical data provided in these operating instructions and on the data plate.
- Specialists must take care during installation and use personal protective equipment as provided by any related security plan or risk assessment.
- Never mount or wire the converter while it is connected to the power supply and avoid any liquid contact with the instrument's internal components. To connect remove the terminals from the terminal block.
- Before connecting the power supply check the functionality of the safety equipment.
- Repairs may only be performed if a genuine spare parts kit is available and this repair work is expressly permitted.
- For the cleaning of the device use only a damp cloth, and for the maintenance/repairs contact the service center (for details see the last page).



Before starting up the equipment please verify the following:

- Power supply voltage must correspond to that specified on the data plate
- Electric connections must be completed as described
- Ground (earth) connections must be completed as specified

Verify periodically (every 3-4 months):

- The power supply cables integrity, wiring and other connected electrical parts
- The converter housing integrity
- The suitable tightness of the sealing elements
- The front panel integrity (display and keyboard)
- The mechanical fixing of the converter to the pipe or wall stand

SAFETY CONVENTION

 DANGER ELECTRIC SHOCK	 WARNING	 PRECAUTIONS	 ATTENTION
--	--	---	--

TECHNICAL CHARACTERISTICS

ELECTRICAL CHARACTERISTIC



Converter classification: class I, IP67/68 for aluminum and PA6 housing, installation category (overvoltage) II, rated pollution degree 2.

Power supply versions	Power supply voltage	Power supply frequency	Min Power	Max power
HV	100-240V~	45-66HZ	1,5 W (Sensor only)	5 W (all Loads)
LV	24-36V---	//		
	24-36V~	45-66HZ		
LLV	12-48V---	//		

- Voltage variations must not exceed $\pm 10\%$ of the nominal one.
- Input/output insulated up to 500V.
- The output 4-20mA (optional) is electrically connected to the ON/OFF outputs and the output power supply (24V ---).
- Version LV/LLV : inrush current < 20A
Version HV : inrush current < 25A

ENVIRONMENTAL USE CONDITIONS



- The converter can be installed internally or externally
- Altitude: from -200m to 4000m (from -656 to 6560 feet)
- Humidity range: 0-100%

AMBIENT TEMPERATURE		
	Min*	Max
°C	-10	60
°F	14	140



ATTENTION

The battery will not be charged outside the below limits :

- T board MV110 < 0 °C
- T board MV110 > 50 °C


If the converter is supplied in compact version (converter over the sensor), consider the ambient temperatures more restrictive, otherwise refer to the relevant manuals.

* For discontinuous use, a thermostat heat source installation may be necessary.





DATA PLATE

The instrument label contain the following information:



- MODEL: Convert Model
- S/N: Serial Number of the converter
- SUPPLY: Main power supply
- Hz: Supply frequency (AC)
- POWER: Maximum power consumption
- IP: Protection grade
- T: Operation temperature
- COUPLING: Serial number of sensor coupled
- ITEM: Free for user

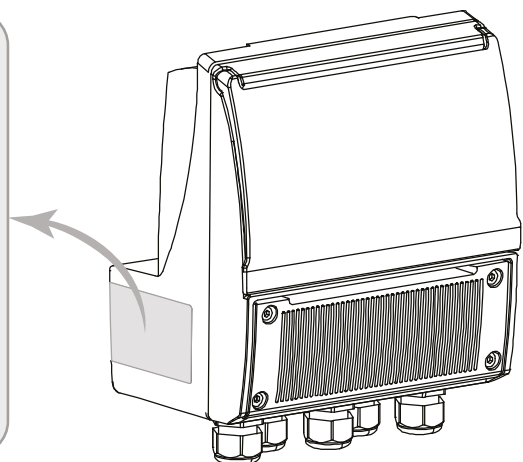


DIMENSIONS

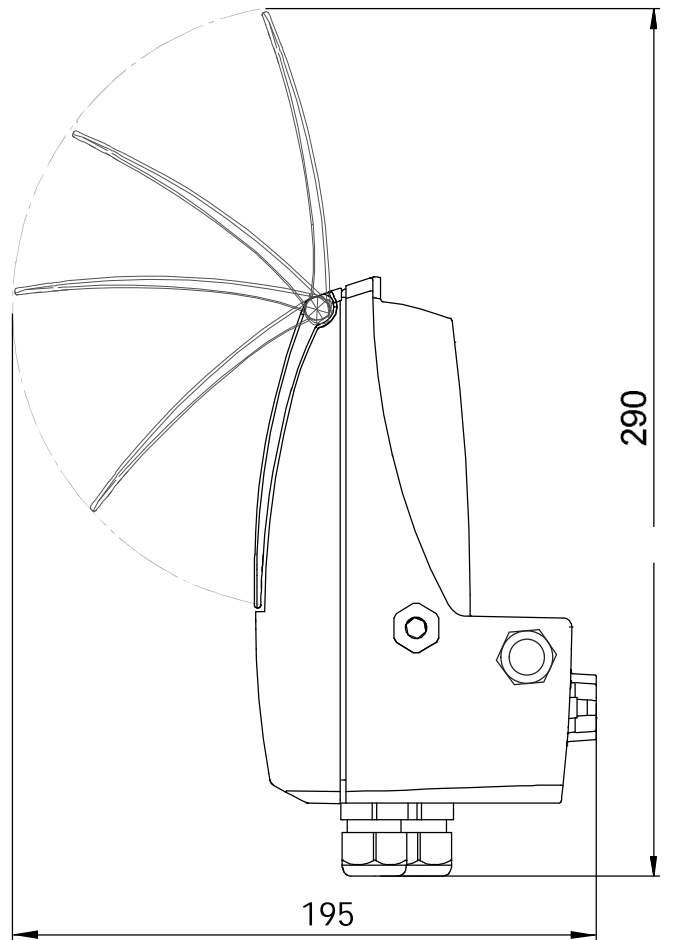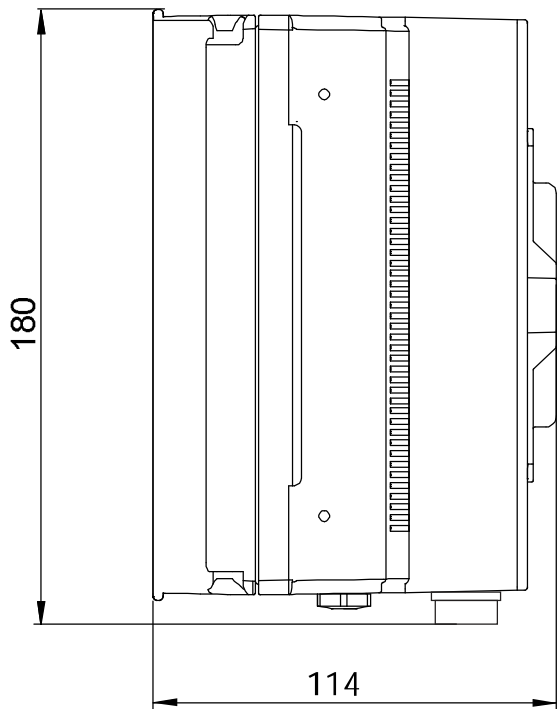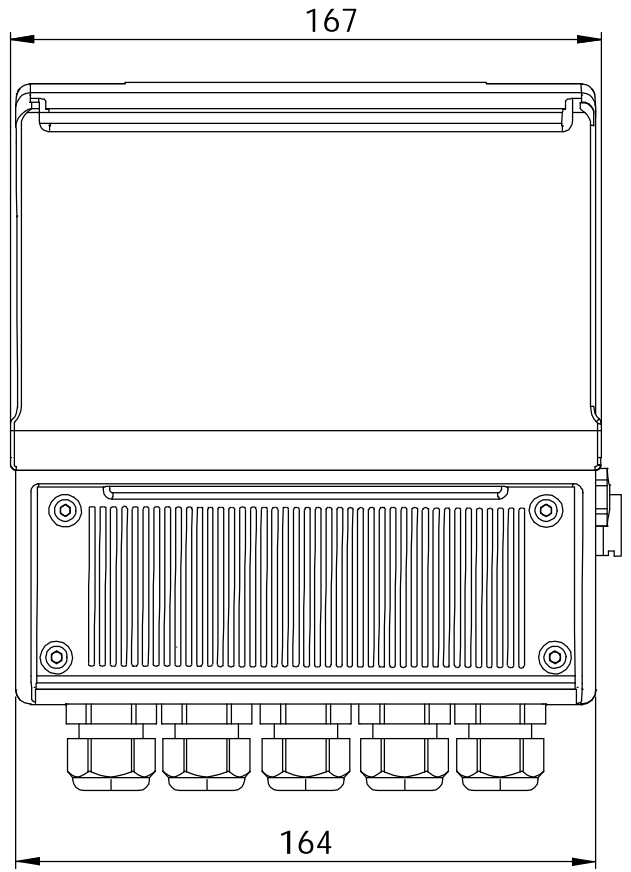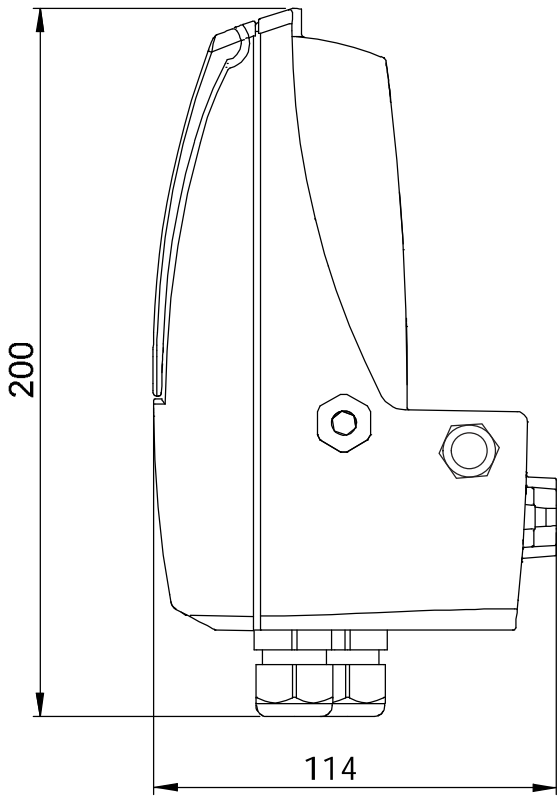


SEPARATE VERSION

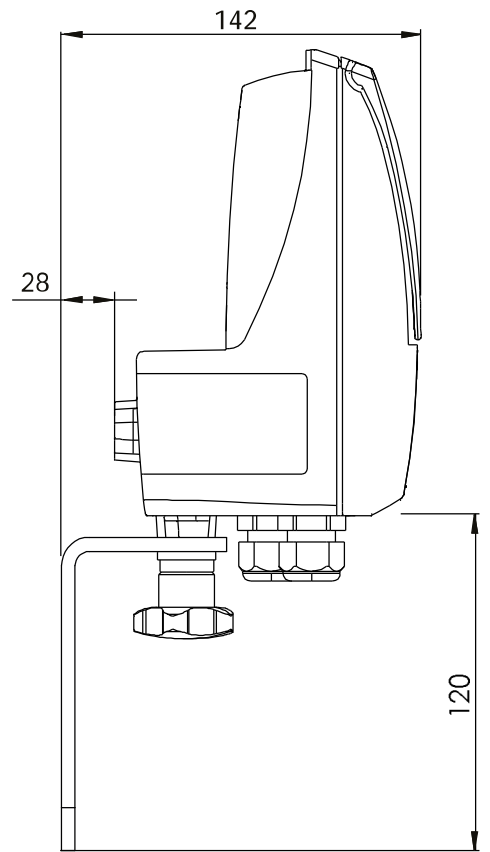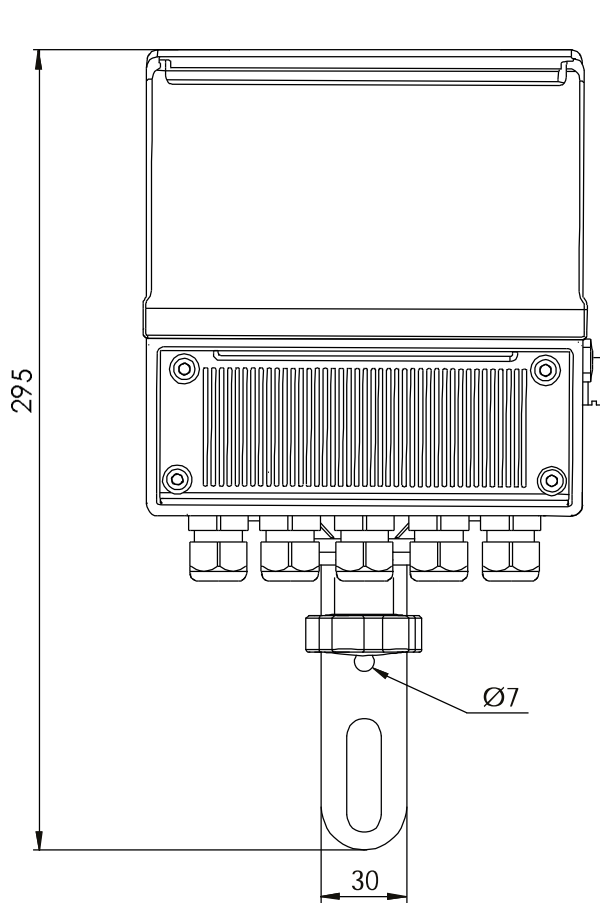

HORIZONTAL VERSION

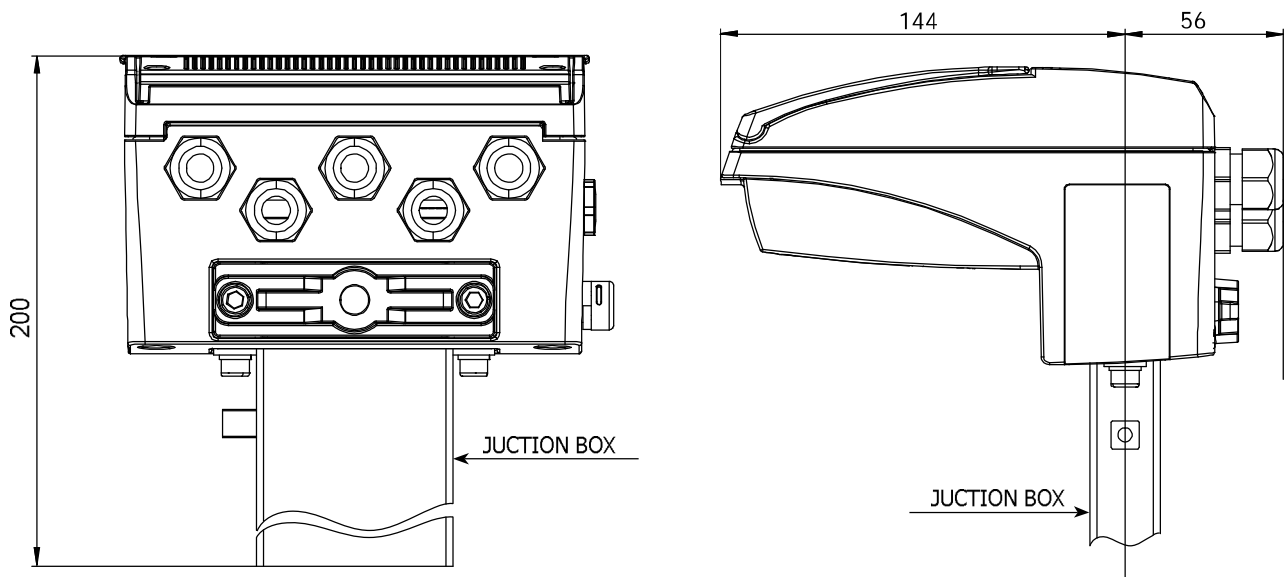



VERTICAL VERSION

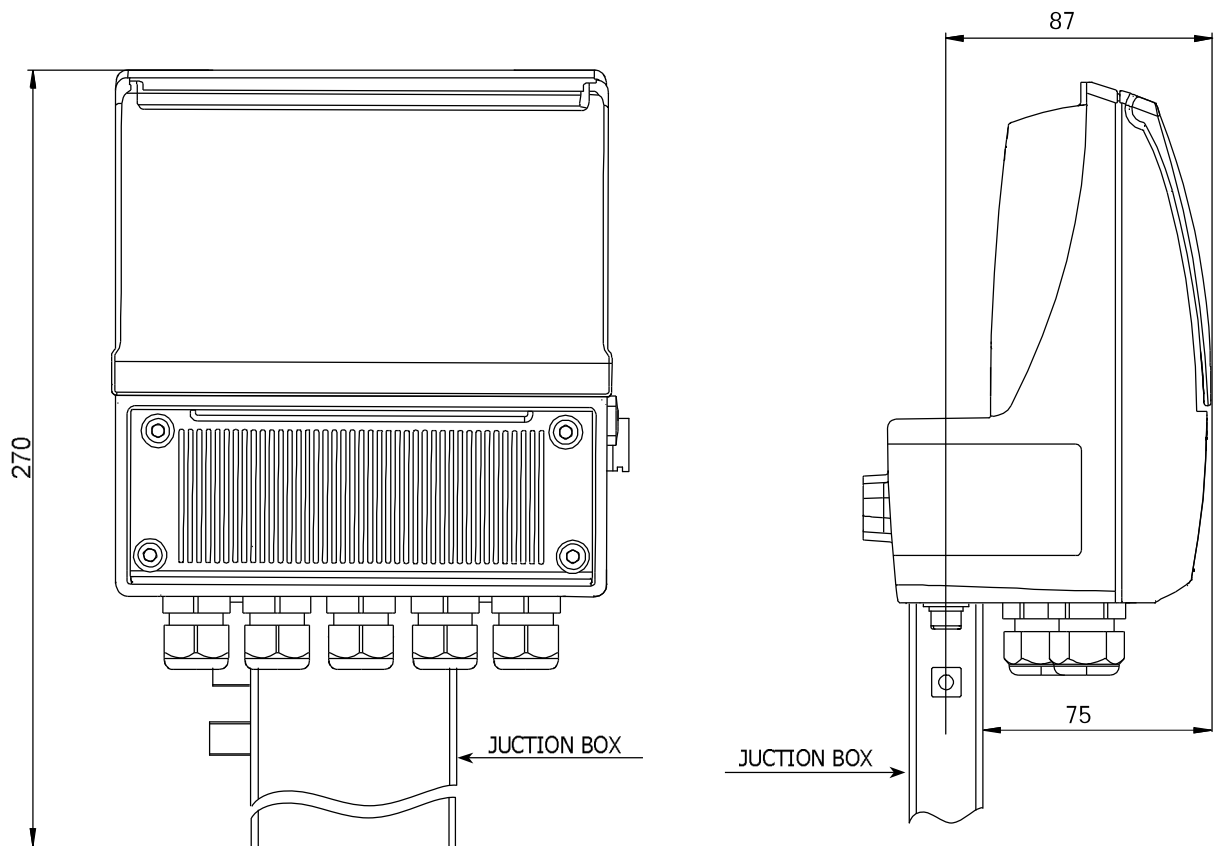


TORQUES

To guarantee the housing's IP degree the following torques are required:

	Housing screw (1)	Cover terminal block screw (2)	Fixing Display Frame	PCB Screw	Version Cap (3)	Cable Glands (4)	Cap USB-B (5)
ALUMINIUM HOUSING	6 Nm	5.5 Nm	3 Nm	0.8 Nm	8 Nm	4 Nm	4 Nm
PLASTIC HOUSING	2 Nm	2 Nm	2.5 Nm	0.8 Nm	7 Nm	4 Nm	4 Nm

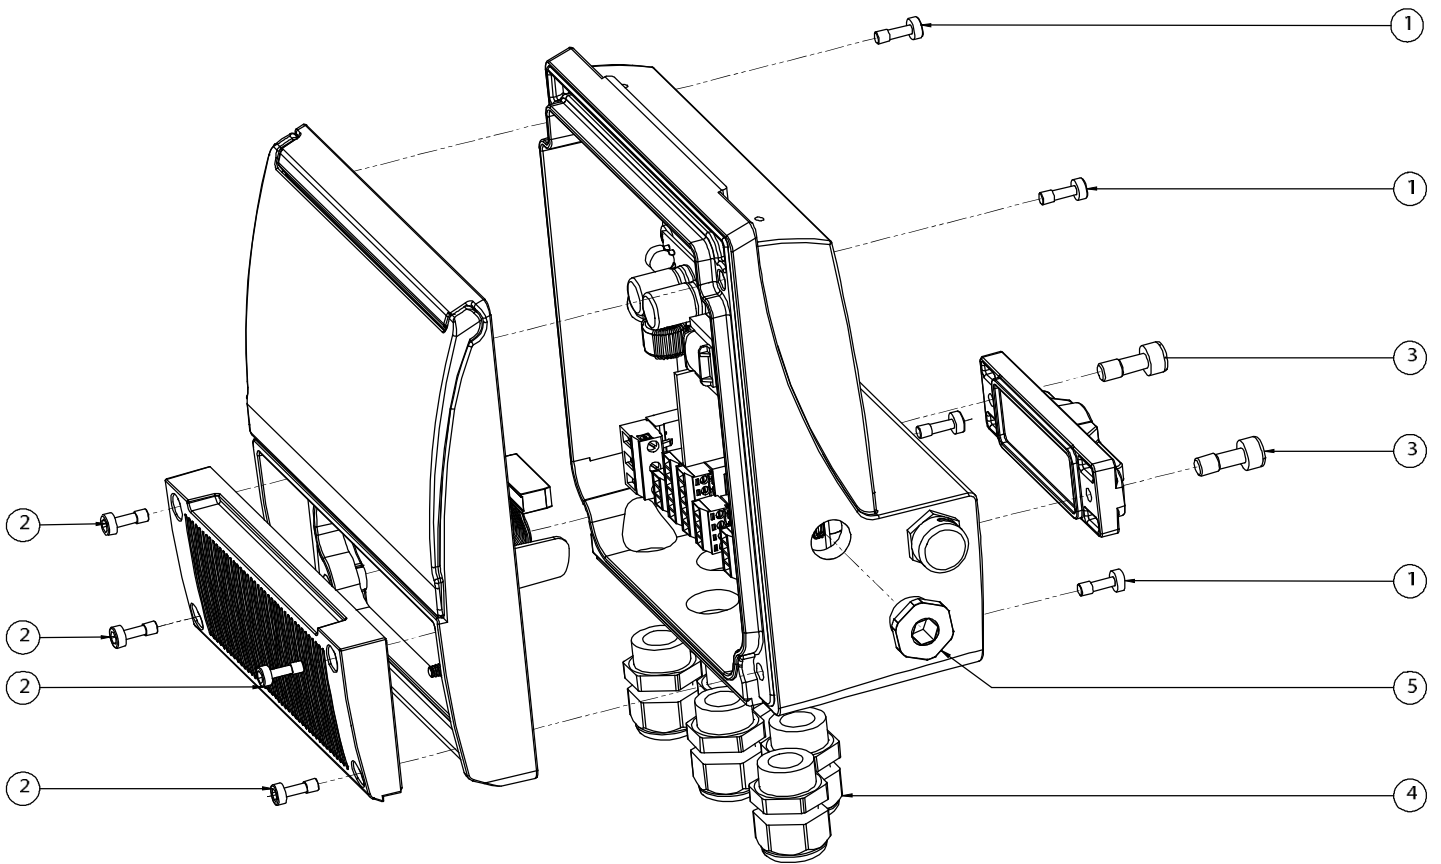

MV110 CONSTRUCTION


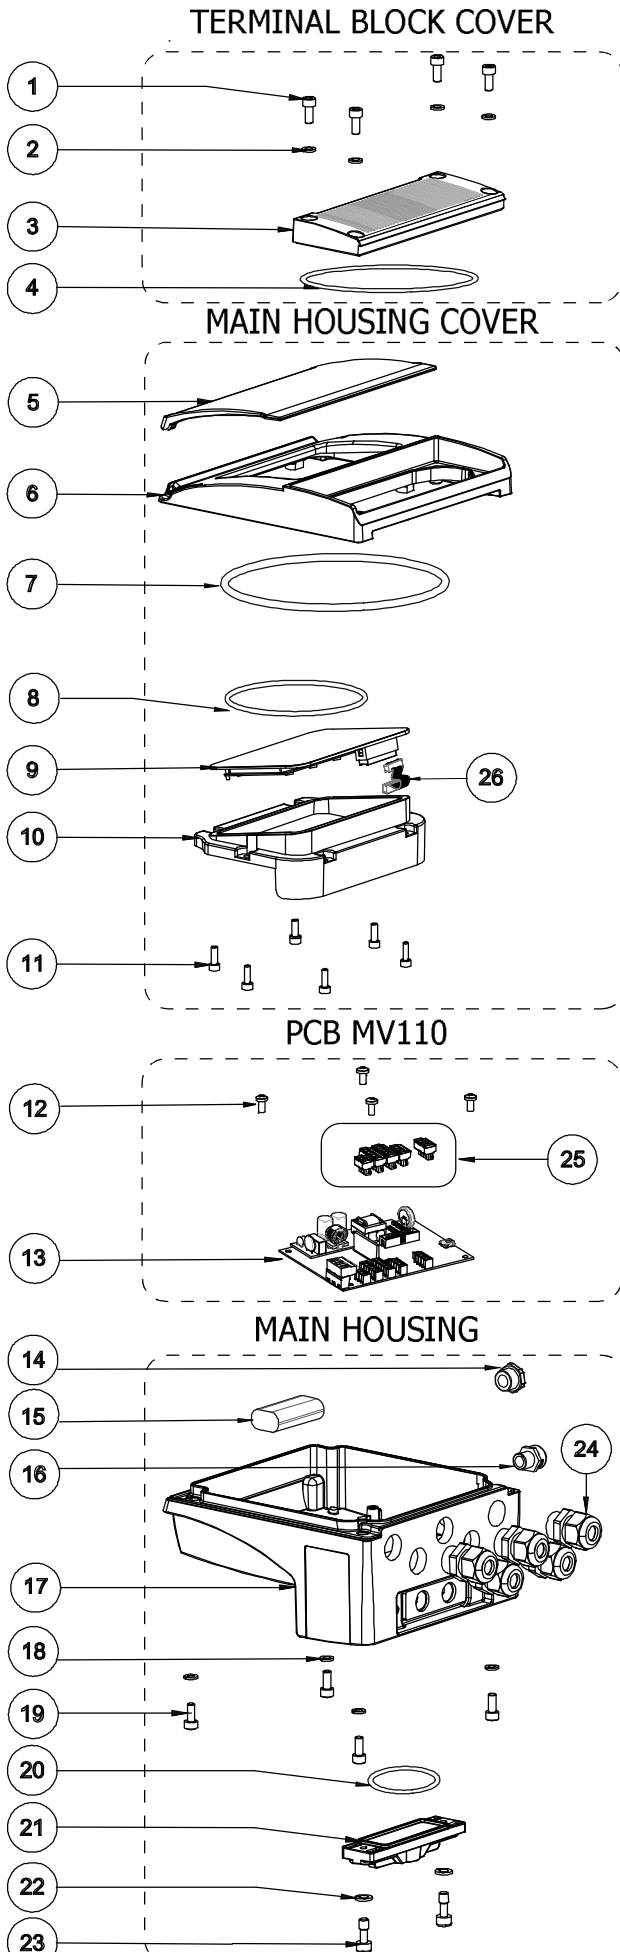


POS.	DESCRIPTION	
	<i>PA6 VERSION</i>	<i>ALUMINIUM VERSION</i>
1	SCREW M4x12	SCREW M5x12
2	GROWER Ø4	GROWER Ø5
3	TERMINAL BLOCK COVER	TERMINAL BLOCK COVER
4	O-RING-4400	
5	PROTECTION COVER	
6	HOUSING COVER	HOUSING COVER
7	ORING-4700	
8	ORING-117x3	
9	DISPLAY	
10	FIXING DISPLAY FRAME (MATERIAL PA06)	
11	SELF-TAPPING SCREW 4x10	TRILOBO SCREW 4x10
12	SELF-TAPPING SCREW 4x10	TRILOBO SCREW 4x10
13	PCB MV110	
14	PG9 CAP	
15	LITHIUM BATTERY	
16	ANTICONDENSE CAP	
17	PA6 MAIN HOUSING	ALUMINIUM MAIN HOUSING
18	GROWER Ø4	GROWER Ø5
19	SCREW M4x12	SCREW M5x12
20	O-RING-155	
21	VERSION CAP (MATERIAL PA06)	
22	SCREW M6x16	
23	GROWER Ø6	
24	PG11 CABLE GLAND CABLE DIAMETER: Ø5-Ø10mm	
25	TERMINAL BLOCK SOLID WIRE: 26-16 AWG / 0.129-1.31 mm ² STRANDED WIRE: 26-16 AWG / 0.129-1.31 mm ² TORQUE: 3.0 Lb.In / 0.34 Nm	
26	FLAT CABLE	

INTERNAL LAYOUT

INTERNAL CONVERTER VIEWS


Remove the main housing cover by removing the 4 screws as shown here below.

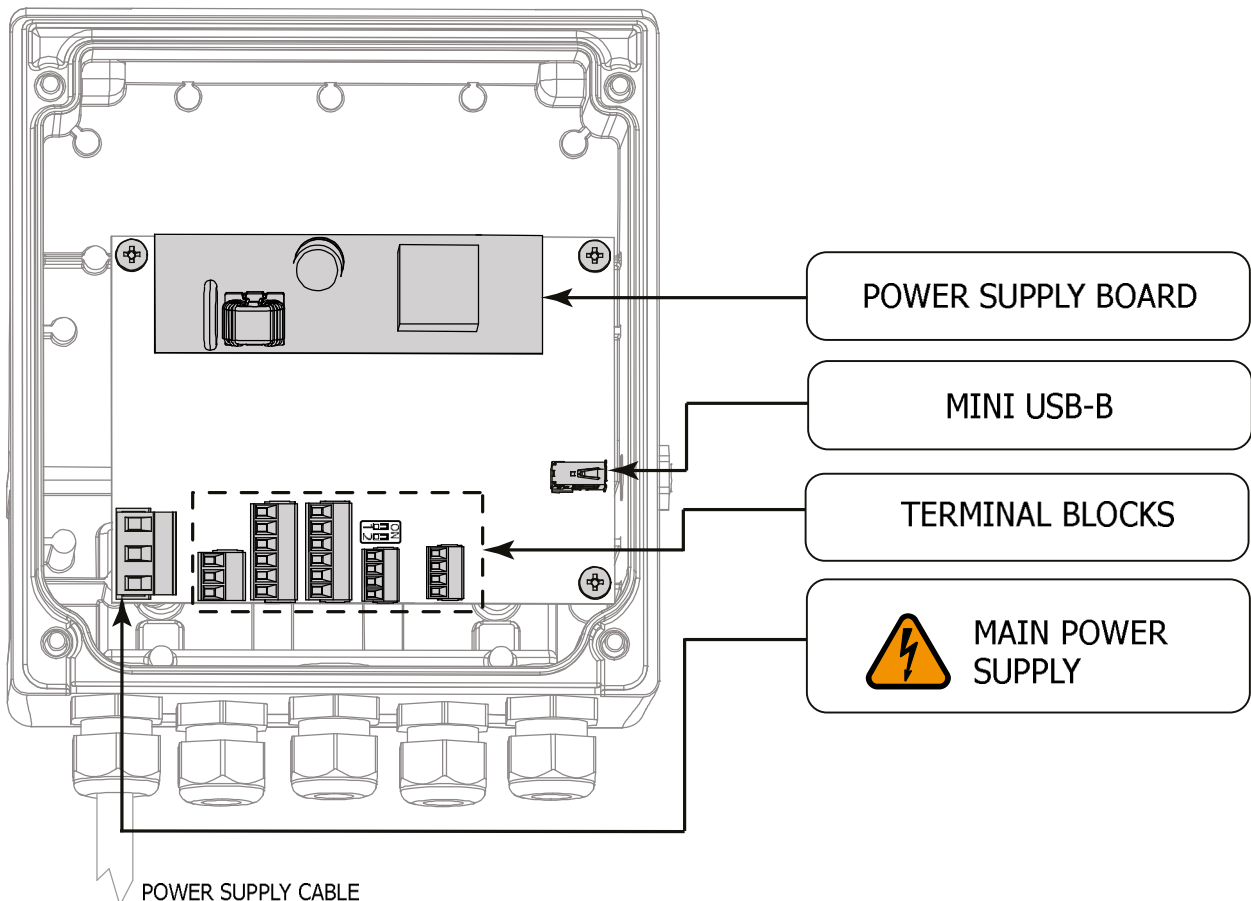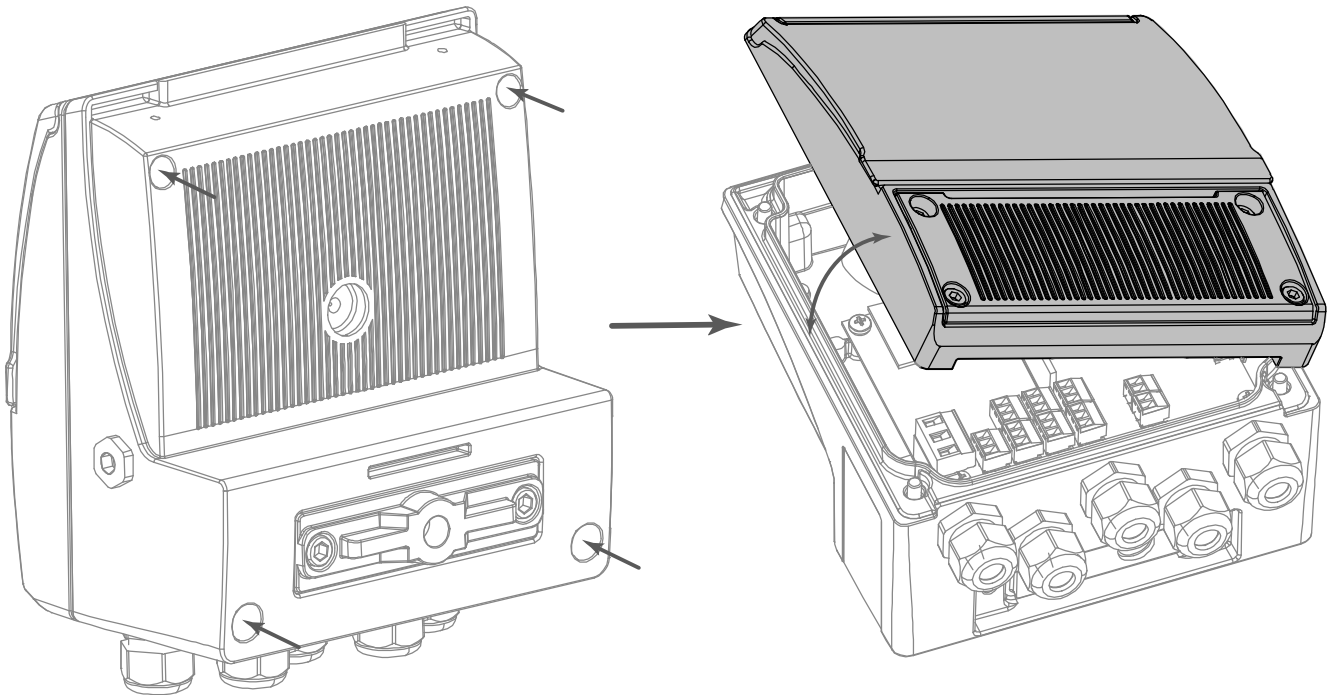

ELECTRICAL CONNECTION AND GROUNDING INSTRUCTIONS




Always ensure that the converter and the sensor are grounded (earthed) correctly. The grounding of the sensor and converter **must** ensure that the instrument and liquid are equipotential.

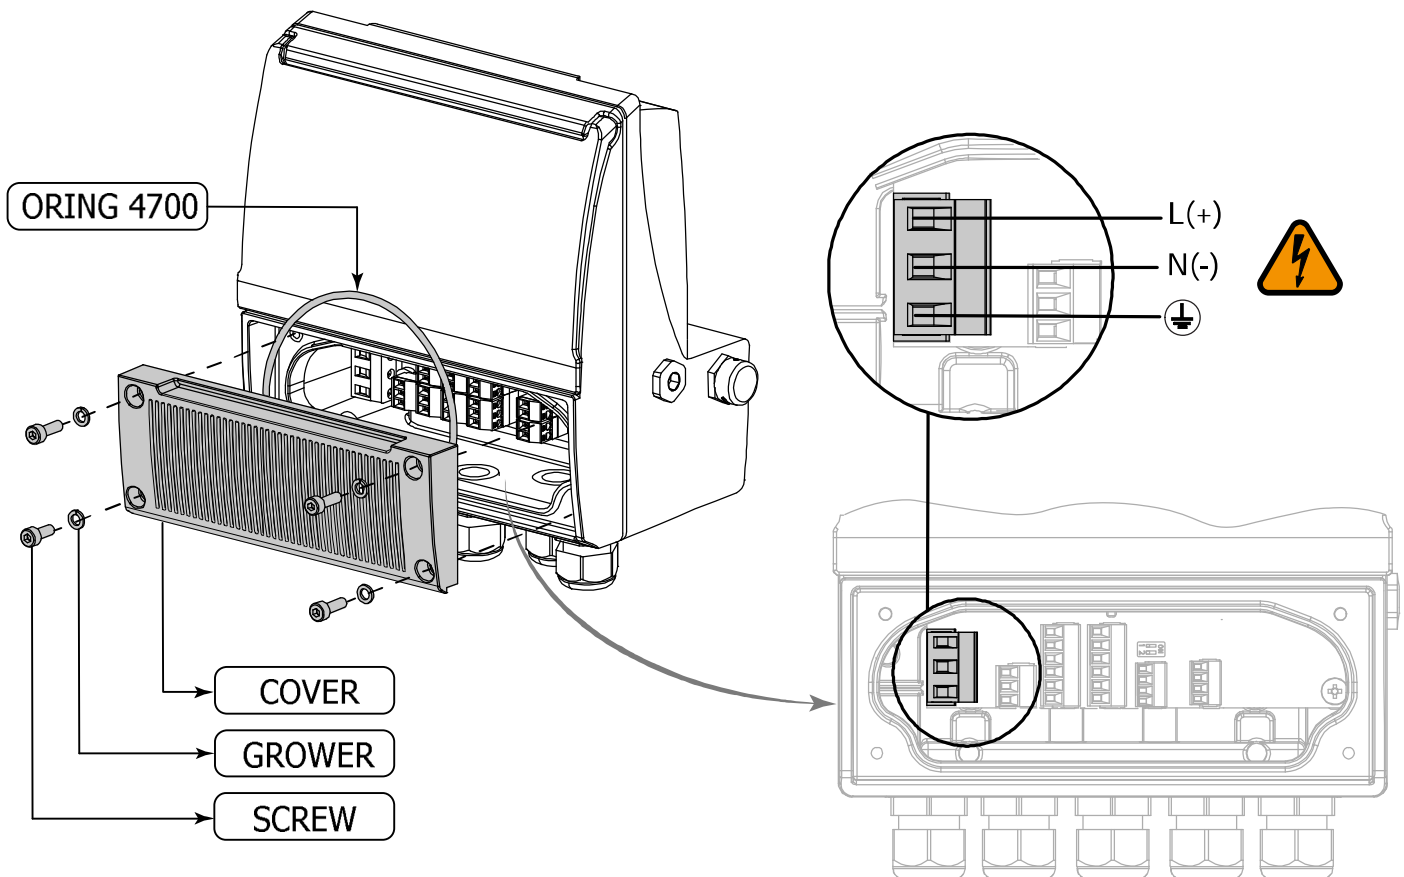

- ❑ Before connecting the power supply, verify that the mains voltage is within the limits indicated on data plate.
- ❑ For the connections use only approved conductors, with fire-proof properties, whose section varies from 0.25mm² to 1.50mm², based on distance/power; additionally fix the power supply wires with a additional fastening system located close to the terminal.
- ❑ The power supply line must be equipped with an external protection for overload current (fuse or automatic line breaker).
- ❑ Provide in close proximity the converter a circuit breaker easily accessible for the operator and clearly identified; whose symbols must conform to the electrical safety and local electrical requirements.
- ❑ Ensure that the component complies with the requirements of the standard for electrical safety distance.
- ❑ Check chemical compatibility of materials used in the connection security systems in order to minimize electrochemical corrosion. In the aluminum housing it should avoid direct contact between the ground connection cable and the aluminum housing. It is therefore recommended to connect the safety ground cable, by placing it between the washer and the metal bracket on the related terminal or use an eyelet terminal crimped on the ground protection cable.
- ❑ The sensor, hardwired inputs and outputs are connected to the converter through terminal blocks located inside the converter.
- ❑ To locate the terminal block loosen the 4 screws on the terminal block cover. When the front cover is lifted, the terminal block is visible. The terminal block is the hardwire connection of the converter to external equipment, including the sensor.

The following pages give informations on the terminal block numbering, and the respective connecting of the sensor cables, and inputs/outputs.

INTERNAL LITHIUM BATTERY

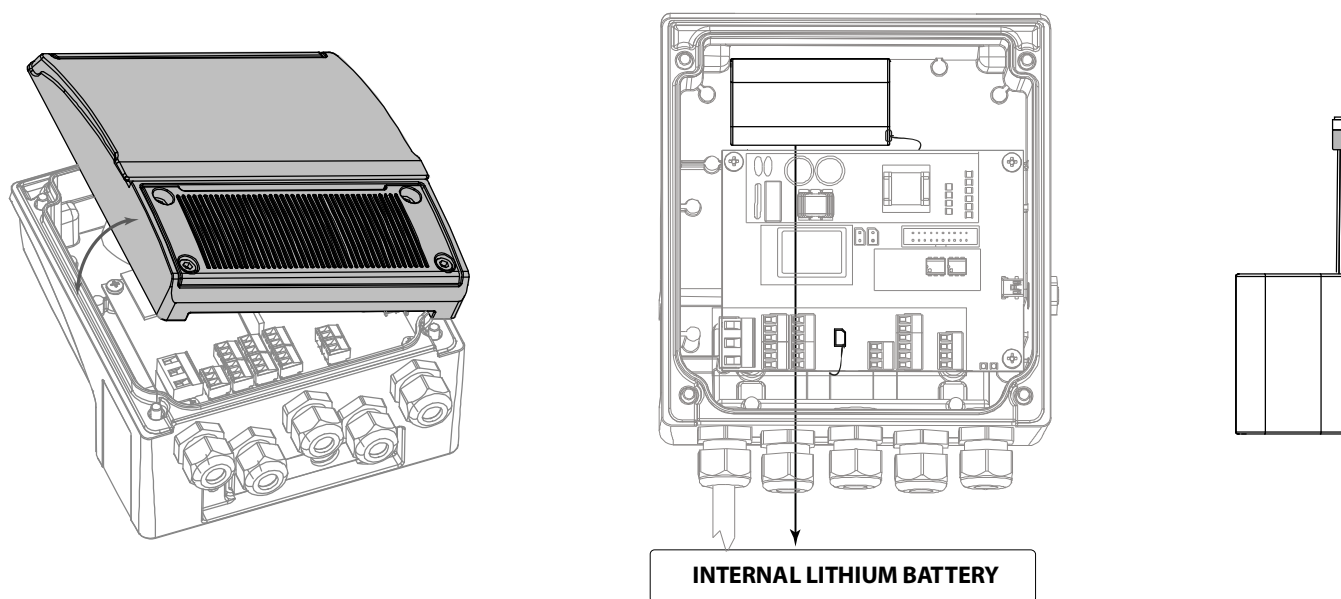

- ❑ The internal lithium battery is rechargeable and should never be disconnected from the converter card when it is powered by the mains voltage. If this operation should be carried out it could irreparably damage the converter board.
- ❑ The internal lithium battery is recharged only when the converter is connected to the mains supply (LV, LLV, HV), battery charging condition, and not with the USB connection.
- ❑ During charging, the battery symbol appears on the MCP display and flashes blue; see "MEANING OF FLAGS" page 21 (the colors of the symbols can only be viewed in the virtual display of the MCP interface)
- ❑ When the battery charge falls below the minimum potential, battery low, the fixed red battery symbol appears; see "MEANING OF FLAGS" page 21 (the symbol colors can only be displayed in the virtual display of the MCP interface). Furthermore, in this charging condition below the minimum potential, the measurement does not start when the USB cable is connected.
- ❑ The thresholds that identify the condition of Battery low and battery charging are established by the system according to the use and settings assigned and therefore there is no fixed value..
- ❑ The two Battery low and battery charging icons can both be present as each one indicates a different condition.

GENERAL OPERATING NOTES


- ❑ If the mains voltage is disconnected from the converter with HV power supply, the flashing blue icon indicating the charging status can remain active for tens of seconds. This is due to the energy stored in the HV power supply and in the capacities of the circuit that discharge slowly.
- ❑ The battery voltage during charging does not rise immediately but gradually. This is related to the parameters set in the converter and detected by the controller chip.
- ❑ When the battery is physically disconnected the potential measured by the system is not true because the charging circuit checks the battery status by emitting impulses. These load the capacities in the circuit and the average value detected is not to be considered a reliable real value.
- ❑ The MCP command [SBCHS] indicates the percentage of charge and is not linear with respect to the battery voltage, however approximately it reads 0% with a voltage equal to about 3.2 V, while 100% occurs with about 4.1 V. These values are influenced by the temperature and the total operating time that worked the battery.

ELECTRICAL CONNECTION CONVERTER- SENSOR




Sudden movements of the electrodes cable could introduce noise.

SH = SHIELD OF CABLE internally connected to ground.

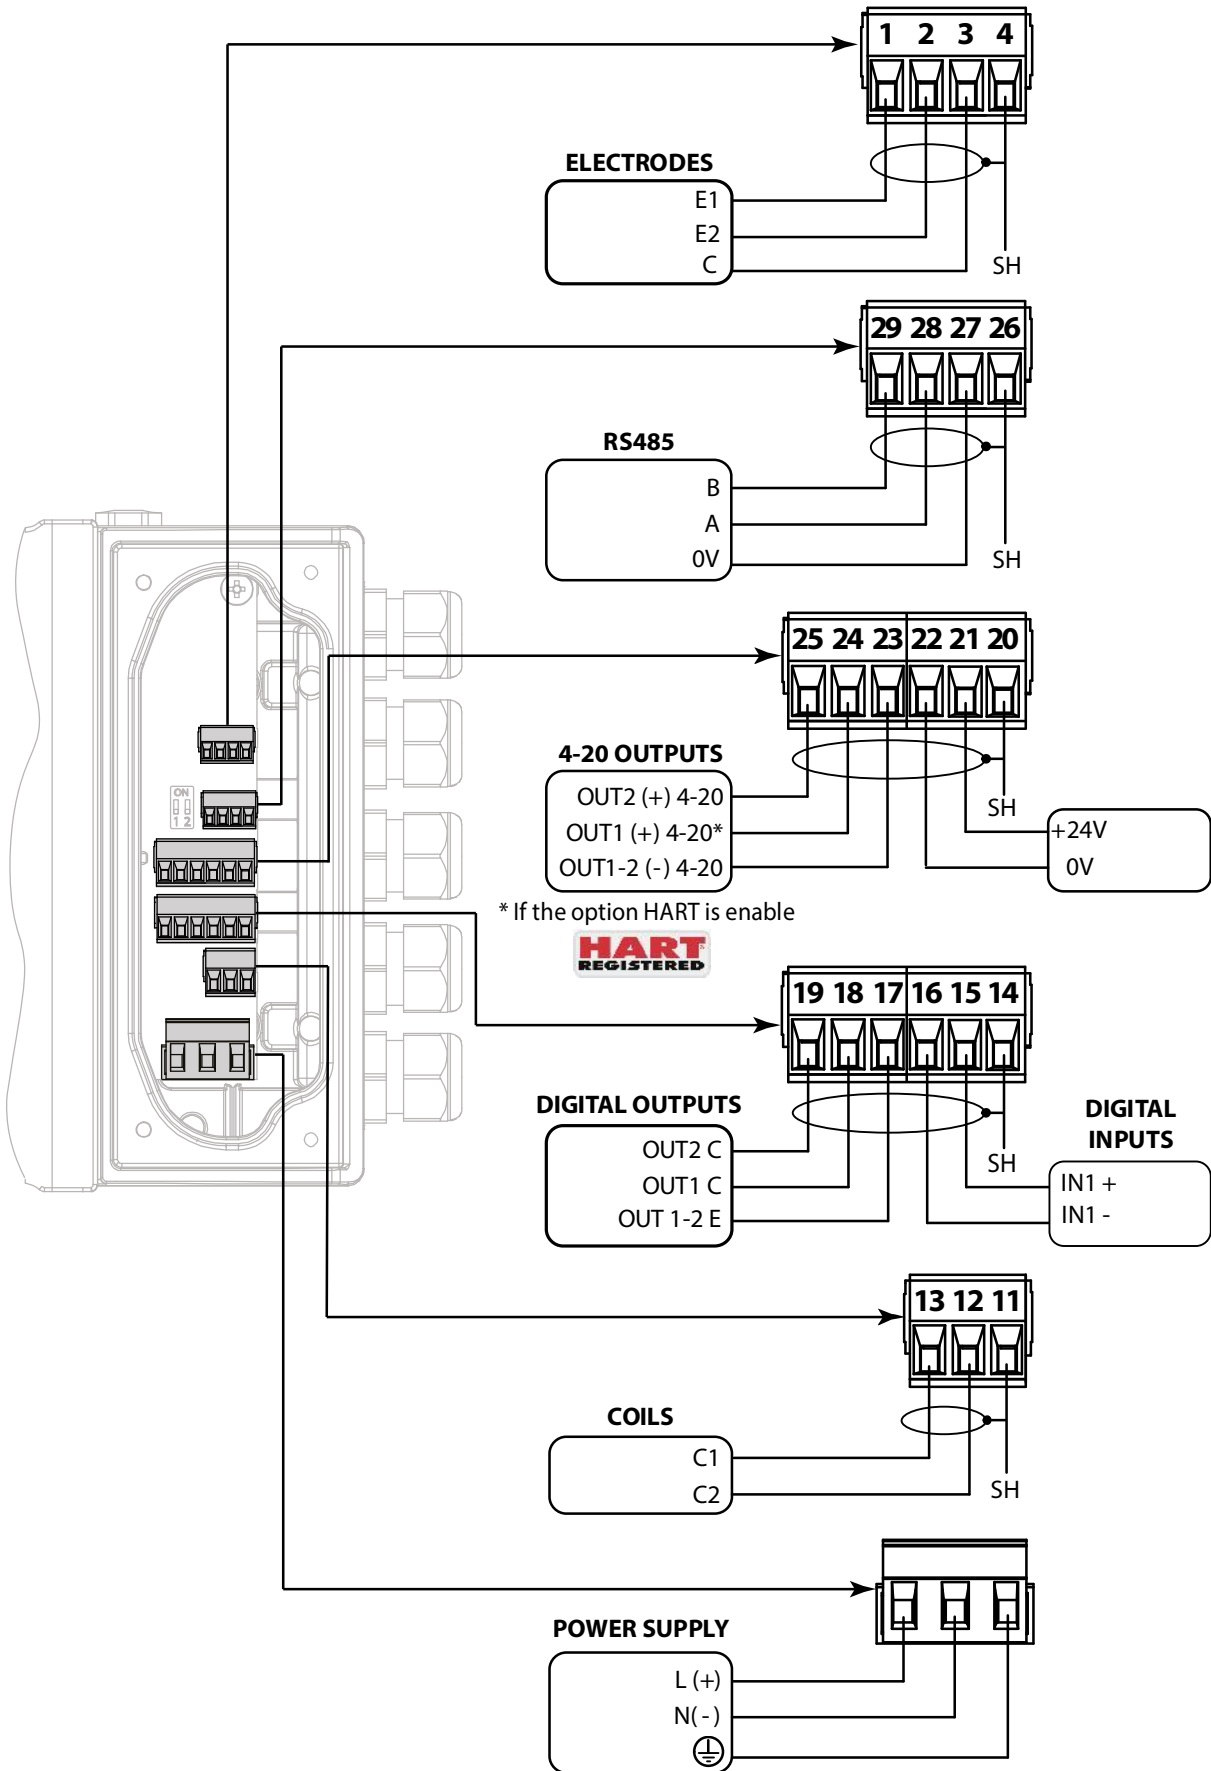


DIGITAL INPUT ON/OFF OPERATION


EXTERNAL POWER SUPPLY

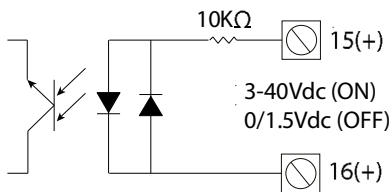

INTERNAL POWER SUPPLY

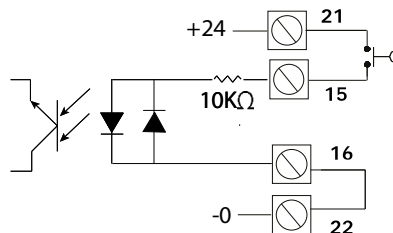


RESET TOTALIZERS

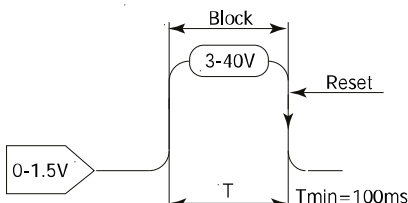

Necessary conditions for enabling the function

- POS. 6.1 see page 28 (T+; total direct positive set on)
- POS. 6.2 see page 28 (P+; partial direct positive set on)
- POS. 6.3 see page 28 (T-; total direct negative set on)
- POS. 6.4 see page 28 (P-; total direct negative set on)


BLOCK TOTALIZERS

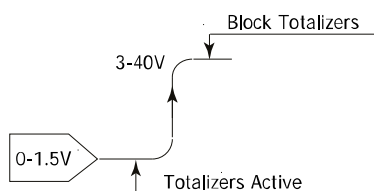

Necessary conditions for enabling the function

- POS. 6.5 see page 28 (Totalizer counting lock command set on)


RANGE CHANGE

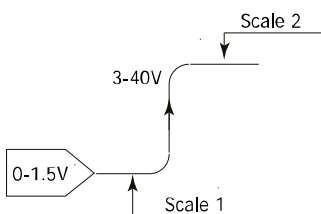

Necessary conditions for enabling the function

- POS. 6.8 see page 28 (Range change set on)

MEASURE LOCK

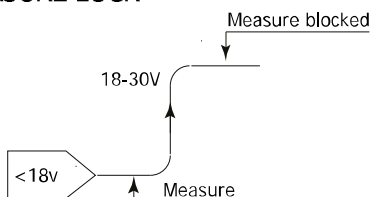

Necessary conditions for enabling the function

- POS. 6.6 see page 28 (Totalizer counting lock command set on)




SAMPLE RATE	Tmin
10HZ	220ms
20HZ	110ms
50HZ	45ms

MUST BE
T > Tmin


OUTPUTS WIRING

DIGITAL OUTPUTS

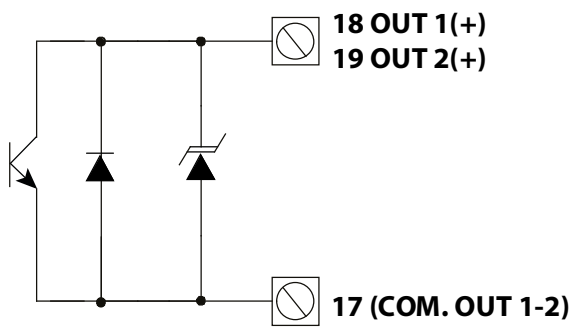

- Opto-insulated output with floating collector and emitter terminals freely connectable
- Maximum switching voltage: 40V \approx
- Maximum switching current: 150mA
- Maximum saturation voltage between collector and emitter @150mA: 1.2V
- Maximum switching frequency (load on the collector or emitter, $R_L=470\Omega$, $V_{OUT}=24V \approx$): 1250Hz
- Maximum reverse current bearable on the input during and accidental polarity reversion (VEC): 100mA
- Insulation from other secondary circuits: 500V \approx


ANALOG OUTPUTS

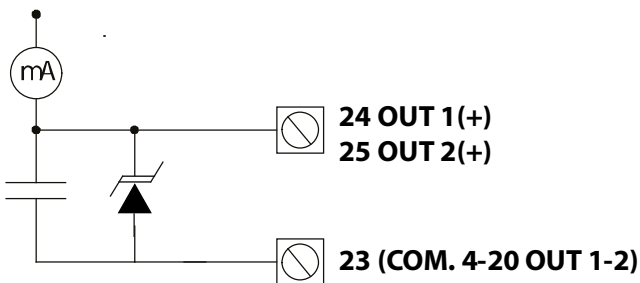

- Opto-insulated output
- Maximum load: 1000 Ω
- Maximum voltage without load: 27V
- Refresh frequency is the same of the sample frequency of the connected sensor
- Protected against persistent over voltages to maximum 30V


RS485 MODBUS MODULE (OPTIONAL)

Positioning to 'ON' the termination switches 1 and 2, a 120Ω résistance is activated in the RS485 circuit (see terminal block).

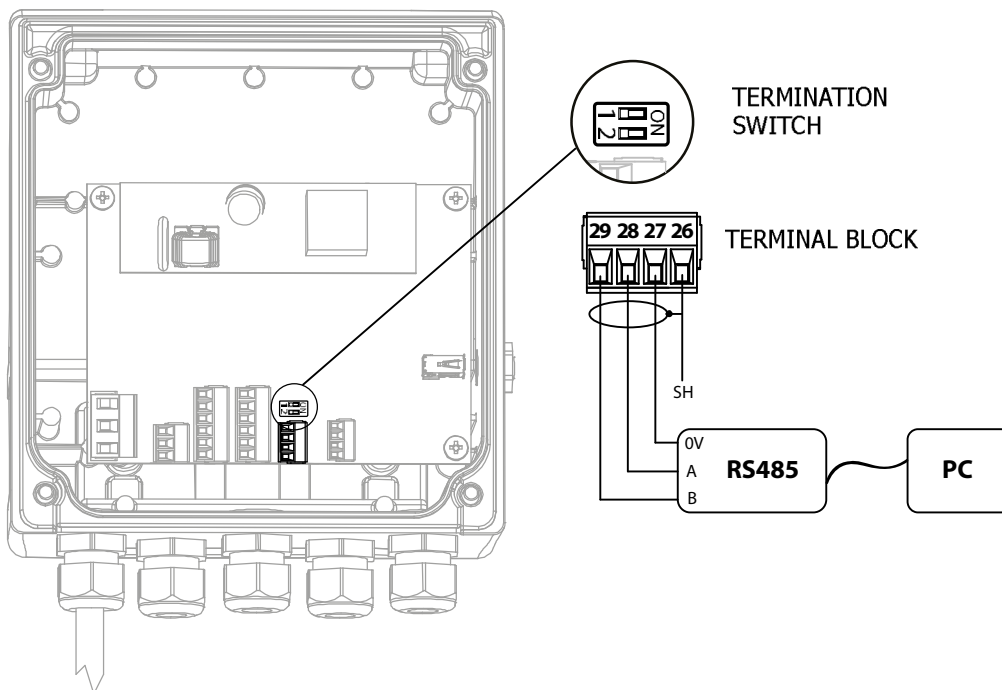

CONNECTORS MIL


THE following are the links of the MIL connectors IP68

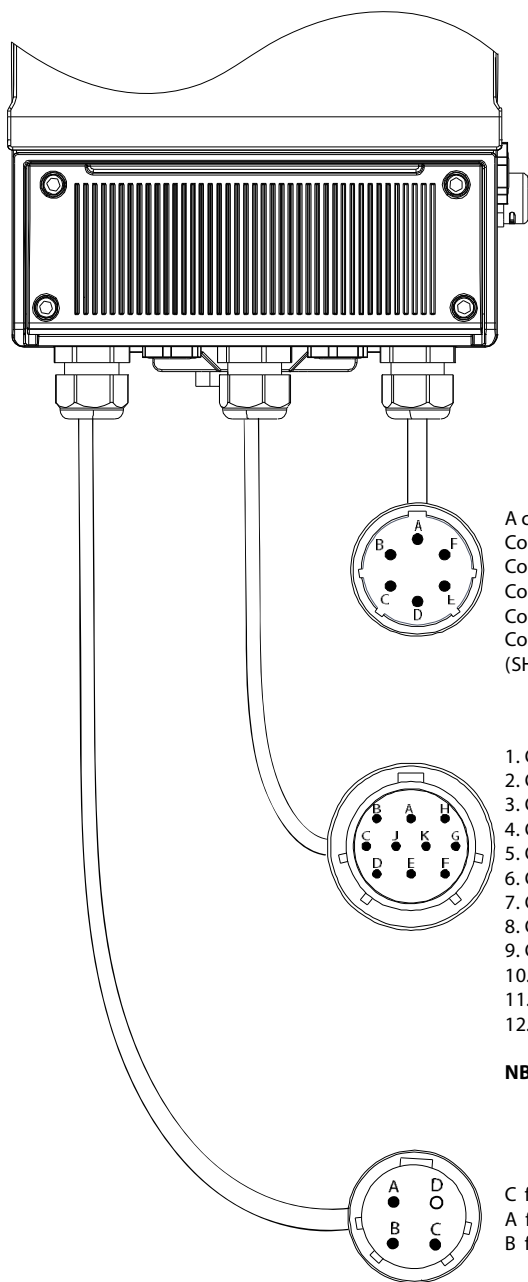

SENSOR SIGNALS

- A contact from terminal 1 of the converter (electrode 1)
- Contact F from terminal 2 of the converter (electrode 2)
- Contact And from terminal 3 of the converter (COM. Elec.)
- Contact B from terminal 13 of the converter (COIL 1)
- Contact C from terminal 12 of the converter (COIL 2)
- Contact D from terminal 4 and 11 of converter (SHIELD electrodes - COILS)


Connector
6 poles



INPUT/OUTPUT

1. Contact B from terminal 24 of the converter (Out1 4-20 +)
2. Contact A from terminal 25 of the converter (Out2 4-20 +)
3. Contact H from terminal 23 of the converter (Out1-2 4-20 -)
4. Contact C from terminal 21 of the converter (+ 24V)
5. Contact J from terminal 22 of the converter (0V)
6. Contact K from terminal 15 of the inverter (IN1 +)
7. Contact G from terminal 16 of the converter (IN1-)
8. Contact D from terminal 19 of the converter (C Out2)
9. Contact E from terminal 18 of the converter (Out1 C)
10. Contact F from terminal 17 of the converter (Out1-2 E)
11. Contact C from terminal 28 of the converter (RS485 A)
12. Contact J from terminal 29 of the converter (RS485 B)

Connector
10 poles




NB: the connections 4 and 5 exclude the use connections 11 and 12.

POWER SUPPLY

- C from terminal L power converter (+ dc)
- A from terminal N power converter (-dc)
- B from terminal GROUND Power Converter

Connector
4 poles



NOTE: Military Connector 6 poles for sensor converter only provided in the separate version of the converter.


START VISUALIZATION PAGES



The direct exposure of the converter to the solar rays, could damage the liquid crystal display. The visualization pages can be change according to instrument's setup.



Push to change visualization

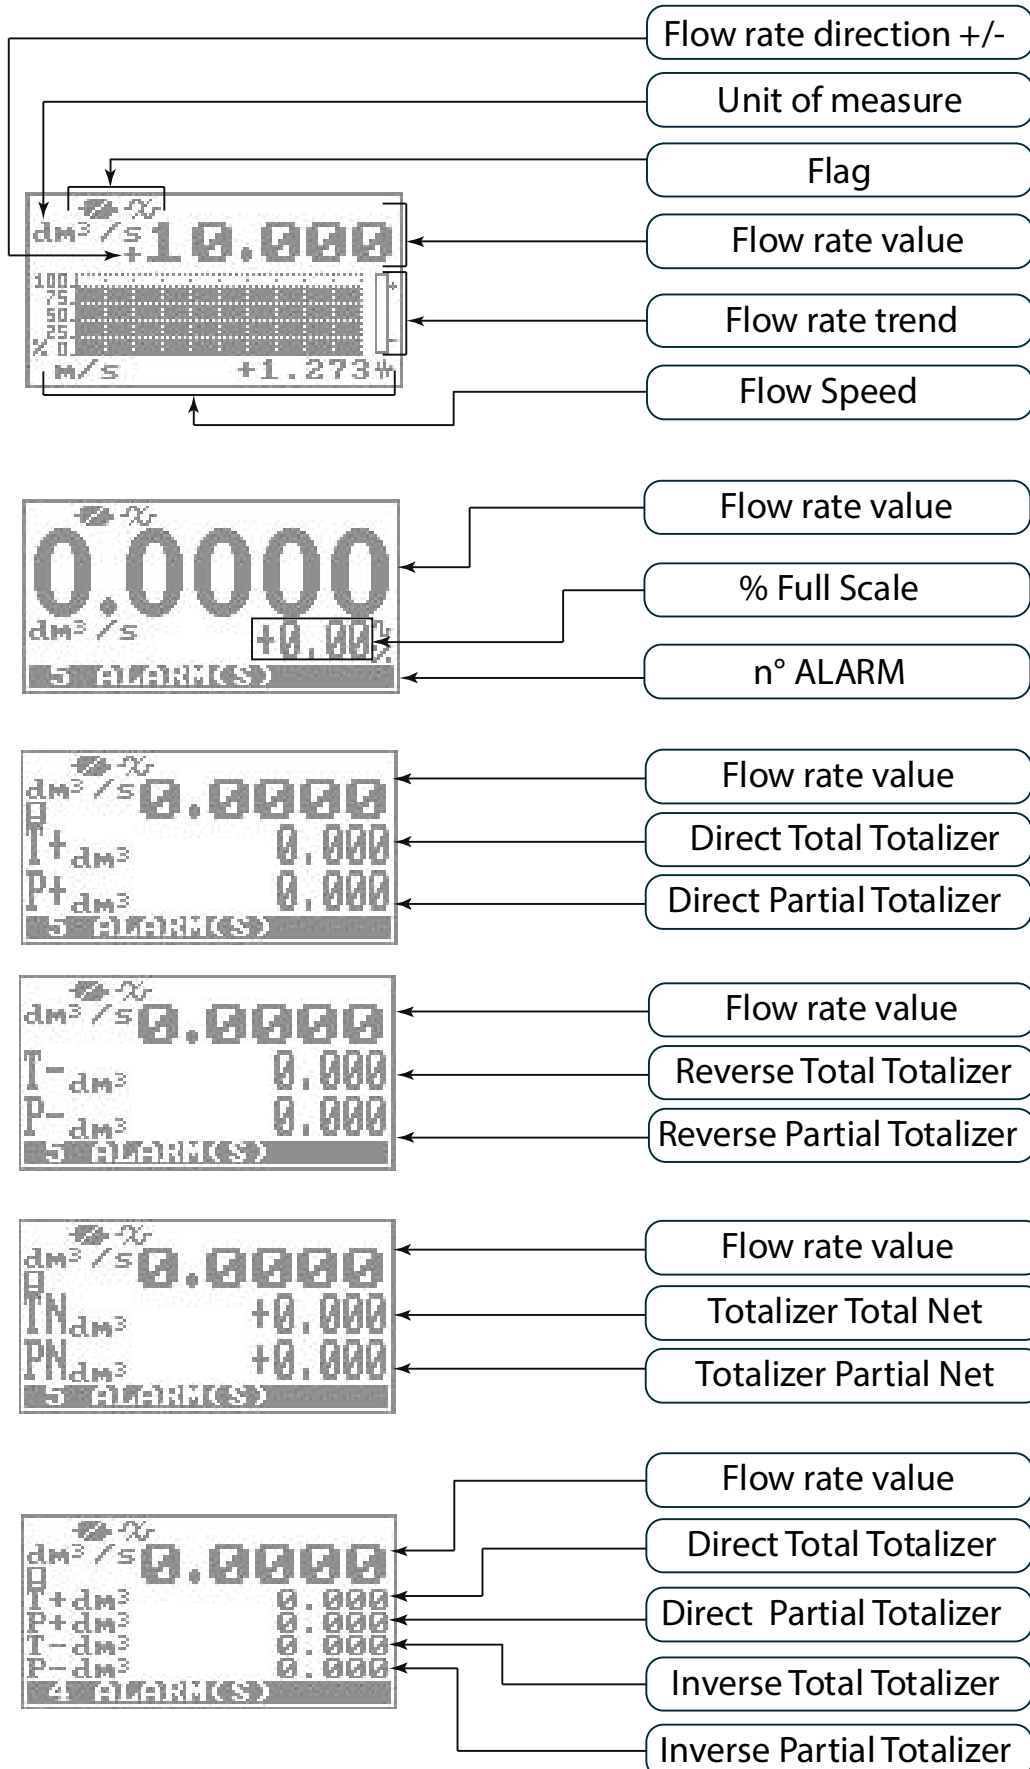

 Push to change visualization

T+dm ³	0.000
P+dm ³	0.000
T-dm ³	0.000
P-dm ³	0.000
4 ALARMS	

Totalizer Total +

Totalizer Partial +

Totalizer Total -

Totalizer Partial -

↖	
E1 V	0.001
E2 V	0.001
E1R kΩ	9.6
E2R kΩ	9.6
1 ALARMS	

Electrodes Voltage

Electrodes Resistance

4 ALARMS	
CLOCK NOT SET	
EXCITATION ERROR	
SIGNAL ERROR	
FL. SENSOR ERROR	
2000/01/01-01:14	

n°Alarm

Alarm List

Date and Time

↖	
T+dm ³	233627.258

Direct Total Totalizer

↖	
P+dm ³	233633.381

Direct Partial Totalizer

↖	
T-dm ³	14617.888

Reverse Total Totalizer


↖	
P-dm ³	14617.888

Reverse Partial Totalizer

MEANING OF FLAGS

FLAG	DESCRIPTION	FLAG	DESCRIPTION
	EMPTY PIPE		MIN FLOW ALARM
	FILE UPLOAD		MAX FLOW ALARM
	FILE DOWNLOAD		VIDEO TERMINAL CONNECTED
	BATTERY RECHARGE (FLASHING) LOW BATTERY (FIXED)		FLOW RATE OVERFLOW
	FLOW RATE SIMULATION (FLASHING)		PULSE 1 OVERFLOW
	CALIBRATION (FLASHING)		PULSE 2 OVERFLOW
	GENERIC ALARM (FLASHING)		POWERED DEVICE WITH ONE CHARGERS BATTERY (MID-DIRECTIVE)
	GENERAL ALARM ONLY ON PHYSICAL DISPLAY (FLASHING)		
	SIGNAL ERROR		
	EXCITATION ERROR		

MEANING OF LED COLORS

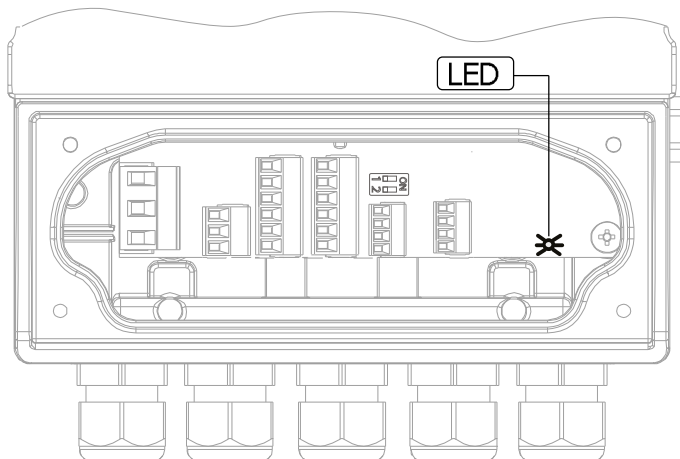


LED Red: Alarm signal
LED Blue: Usb communication enable
LED Green: Functioning system correctly

ACCESS TO THE CONFIGURATION MENU

The configuration can be done in two different ways:

- ❑ By keypad of converter
- ❑ By MCP interface (Virtual display of instrument)

ACCESS VIA KEYPAD

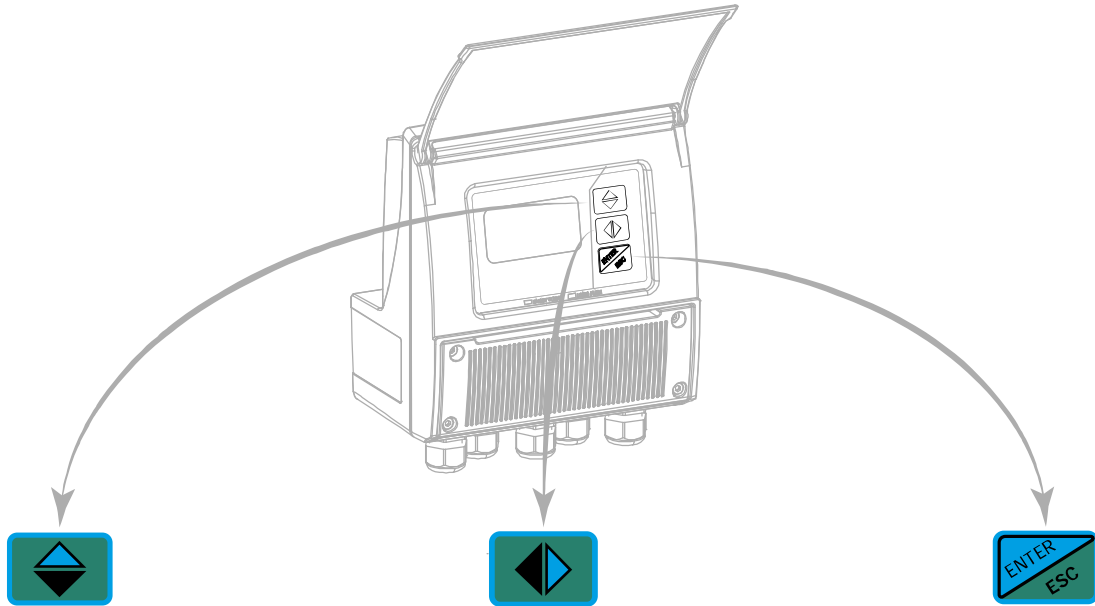

SHORT PRESSING (< 1 SECOND):
Increases the numeric figure or the parameter selected by the cursor
Returns to the previous subject on the menu.

LONG PRESSING (> 1 SECOND):
Decreases the numeric figure or the parameter selected by the cursor.
Proceeds to the next subject on the menu.

SHORT PRESSING (< 1 SECOND):
Moves/positions the cursor rightward on the input field. Proceeds to the following subject of the menu. Change the display of the process data


LONG PRESSING (> 1 SECOND):
Moves/positions the cursor leftward on the input field. Returns to the previous subject on the menu

SHORT PRESSING (< 1 SECOND):
Enter /leave the selected function
Enables the main menu for the instrument configuration
Cancels the selected function under progress


LONG PRESSING (> 1 SECOND):
Leaves the current menu
Enables the totalizer reset request (when enabled)
Confirms the selected function.

ACCESS VIA MCP INTERFACE (VIRTUAL DISPLAY)

MCP is a Windows® software that allows to set all the converter functions and personalize the menu. The MCP program is required for the blind version of the converter. To use MCP interface consult the relevant user manual.

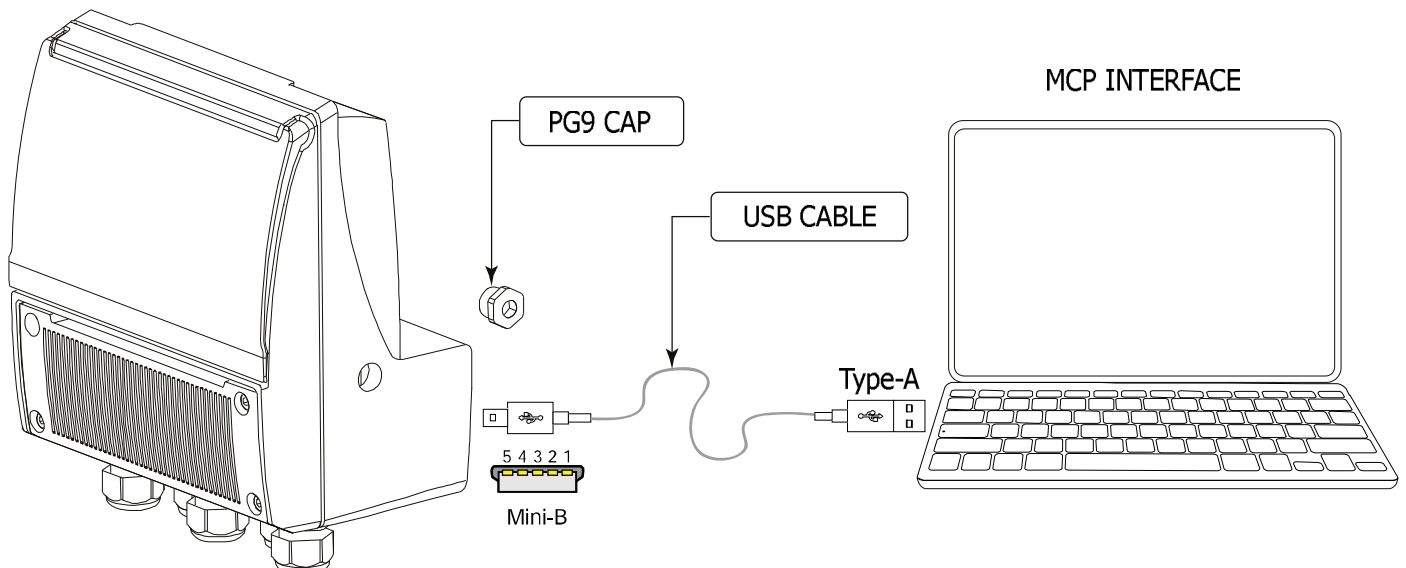

FLOW RATE VISUALIZATION

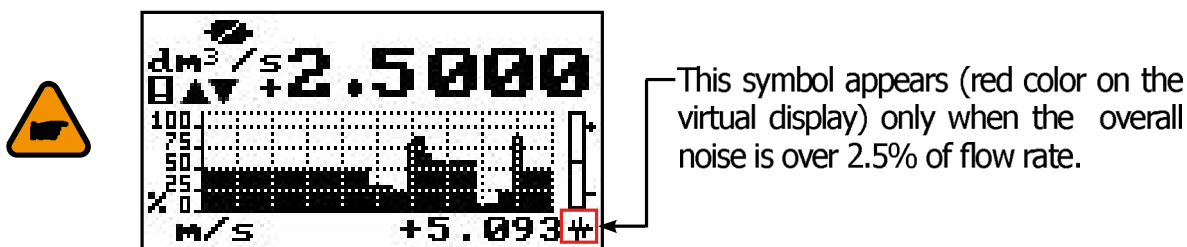


This symbol appears (red color on the virtual display) only when the overall noise is over 2.5% of flow rate.

The MV 110 can show a 5 digits display for flow rate units; this mean the maximum flow rate value that can be represented on the display is 99999 (no matter the positioning of the decimal point). The minimum is 0.0025. The representable measure unit depends on sensor flow rate and diameter; the permitted units are those, that permits the instrument full scale value not exceeding 99999.

Example for DN 300, Full scale value: 3m/s:

- PERMITTED measure unit** (example): l/s (216.00); m³/h (777.60); m³/s (0.2160)
- NOT PERMITTED measure unit** (example): l/h (777600)


FLOW RATE ALERT

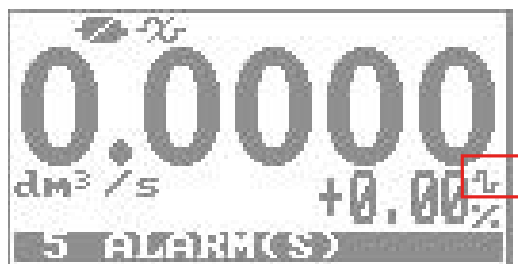

This FLAG becomes active when there is a flow variation (flow rate not stable).

QUICK START MENU

The QUICK START MENU allows to user immediate access to some of the most commonly used functions; through MCP software it possible customize this menu to make it suitable for the specific application.

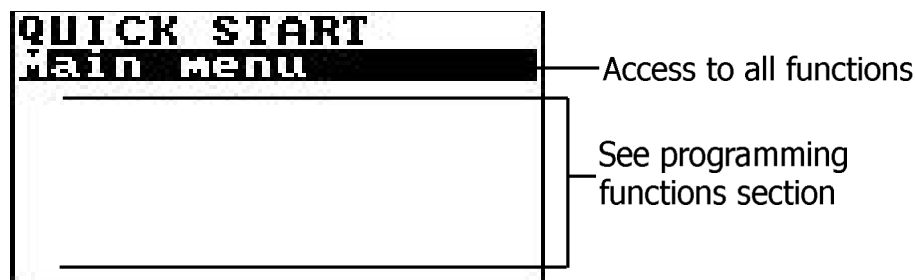

Access to all functions

See programming functions section

The user has immediate access to the Quick Start menu when the converter is powered up by pressing the Enter key. If access to the quick start menu does not occur, then it could be disabled using the function "9.11 Quick start menu visualization" page 29 .

CONVERTER ACCESS CODE

The access for programming the instrument is regulated by six access levels logically grouped. Every level is protected by a different code.

- ❑ Access Level 1-2-3-4 Freely programmable by user

ACCESS CODE SET : MENU 13 SYSTEM

```

SYSTEM
Dial.saving= ON
Time zone=h+01.00
2016/04/04-16:07
L1 code=*****
L2 code=*****
L3 code=*****
L4 code=*****
L5 code=*****
L6 code=*****
Restr.access= ON
010.011.012.013
010.011.012.014
255.255.255.000
KT= 0.96469
KS= 1.00000
KR= 1.00000
DAC1 4mA= 02460
DAC1 20mA= 11050
DAC2 4mA= 02460
DAC2 20mA= 11050
Stand-by
FW update
13-system
    
```

```

SYSTEM
L1 code=*****
L2 code=*****
L3 code=*****
L4 code=*****
L5 code=*****
L6 code=*****
04▶99999999
    
```

The CODE is Settable by keyboard or MCP interface. Depending on the level of access different display functions will be visible. (See section "FUNCTIONS DESCRIPTION" page 31) These access levels interact with the "Restricted access"

RESTRICTED ACCESS SET : MENU 13 SYSTEM

```

SYSTEM
L1 code=*****
L2 code=*****
L3 code=*****
L4 code=*****
L5 code=*****
L6 code=*****
Restr.access=011
    
```

Settable Values

ON

OFF

Restrict = ON: Access permitted only to functions provided for a specific level;
Example: If the operator has a code of access level 3, after having set it, he can change only the functions with level 3 access.

Restrict = OFF: It enables to change functions for the selected level and ALL the functions with lower access level.

Example: If the operator has the code of level 3, after having set it, he can change all the functions at level 3 and those at lower levels.


* **WARNING:** take careful note of the customized code, since there is no way for the user to retrieve or reset it if lost.

Factory preset access codes:

- ❑ L1: 10000000
- ❑ L2: 20000000
- ❑ L3: 30000000
- ❑ L4: 40000000

The following example shows how to change the Full scale by Quick Start menu; the second illustrates how to change the function by the Main menu.


EXAMPLE: modifying the full scale value from 4dm³/s to 5dm³/s, from the "Quick start menu"

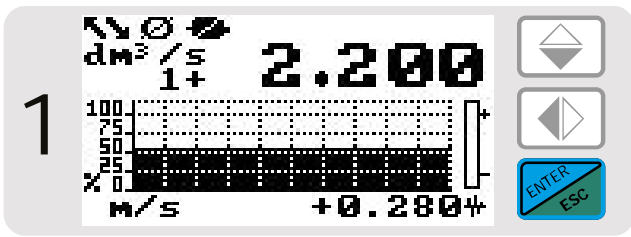


Press the ENTER button to access the Quick Start menu



Select this function in the list to be edited

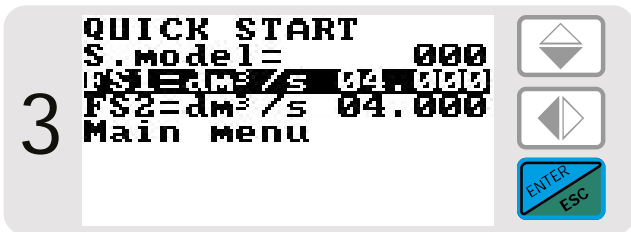


Press the ENTER button to select the function.

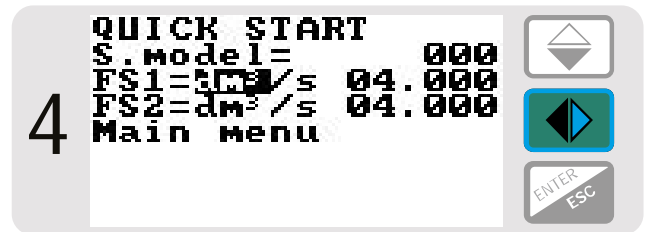

Select the value to be changed




Change the value

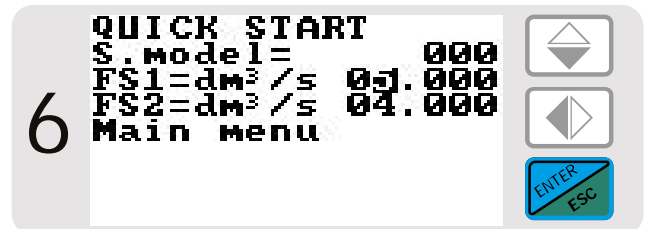

Confirm the new value




Long Push

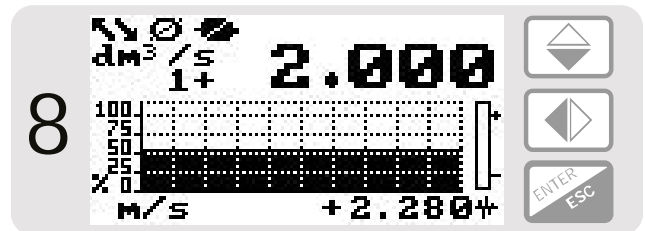


Main Page


EXAMPLE: modifying the full scale value from 4dm³/s to 5dm³/s, from the "Main Menu" (quick start menu enabled)

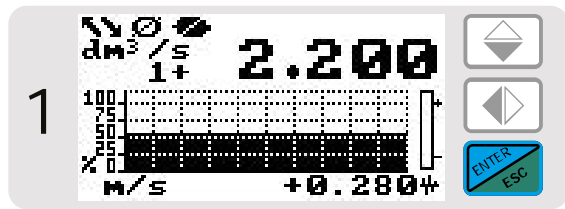

Press the ENTER button to access the Quick Start menu

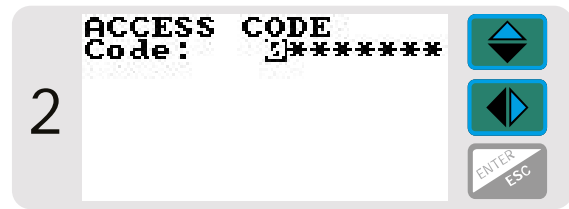

Press arrow keys to select the cell in which to insert the number of the access code.

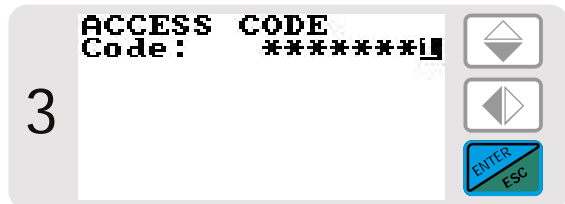


Press ENTER button to confirm value.




Select "Main Menu"




Press the ENTER button to access the Main Menu

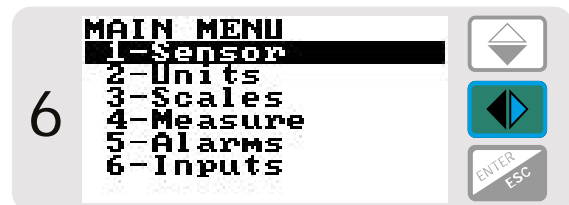


Select function

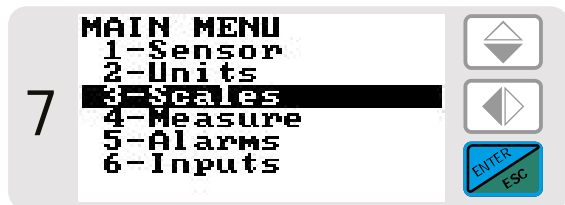


Press the ENTER button to access the "Scale Menu"

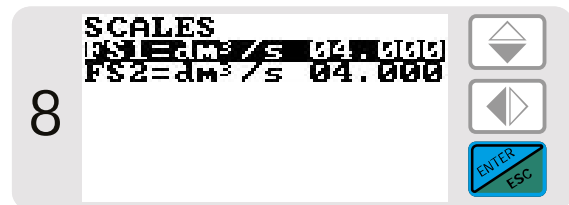


Press the ENTER button to access the "Fs1"

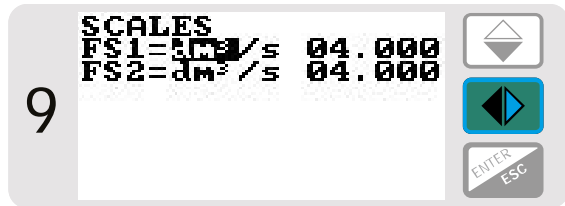


Select the value to be changed

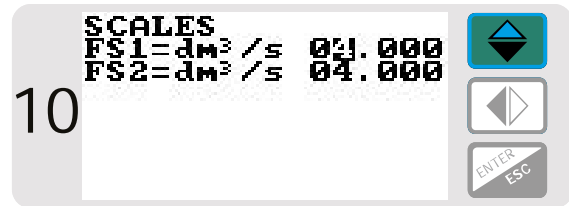


Change the value

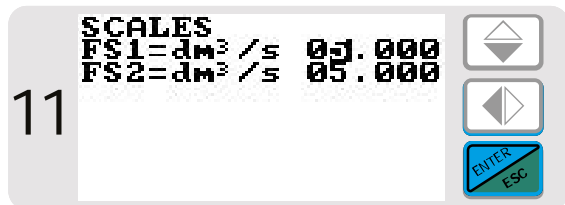


Press the ENTER button Confirm the new value

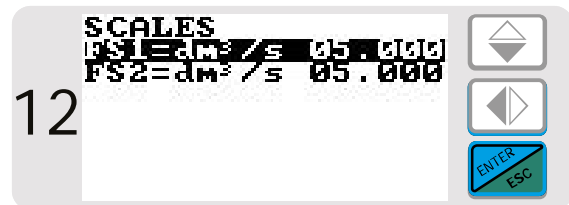

Press Esc

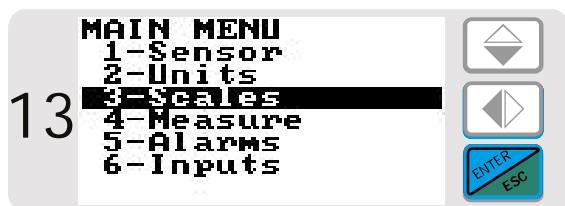


Press Esc

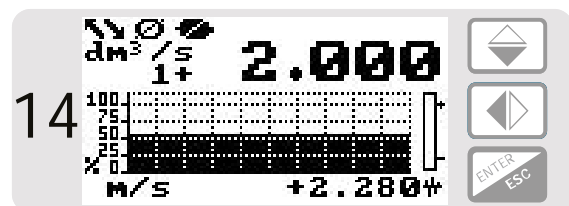

Main page

FUNCTIONS MENU

The main menu is selected from the Quick start menu by pressing the  key and entering the access code; enter the access code if required. Note: Functions in grey here below are displayed only with other functions active, or with optional modules.

```

MAIN MENU
1-Sensor
SENSOR
S.model=004
Lining= UNSPEC.
S.type=FULL BORE
U.type= METRIC
Diam.=MM 700
KA= +00.9637
KA- = -04.4904
KZ= -0018852
KD= +00.4014
Ins.position= 0
KP dynamic= OFF
Ki= +01.0000
Kp= +01.0000
KC= 1.00000
C.Curr.=mA 025.0
C.Reg.PB= 007
C.Reg.DK= 013
S.Freq.=Hz 50
E.P.Detect= ON
R.max=kohm 0500
El.cleaning=
S.cable=M
S.err.delay= 010
Sens.verify= OFF
Zero point cal.
KL= 00.00000000
    
```

- 1.1 Sensors model: Enter the first two characters of the serial number of the sensor
- 1.2 Flow sensor lining material type
- 1.3 Type of sensor: fullbore or insertion
- 1.4 Type of measure units for sensor parameter: metric or imperial
- 1.5 Sensor's nominal/real diameter DN (0-2500)
- 1.6 Calibration data of sensor
- 1.7 Calibration data of sensor for negative flow
- 1.8 Sensor coefficient KZ (zero point)
- 1.9 Sensor coefficient KD
- 1.10 Insertion position
- 1.11 KP dynamic, coefficient for insertion
- 1.12 Sensor coefficient Ki
- 1.13 Sensor coefficient Kp
- 1.14 Sensor coefficient KC
- 1.15 Sensor excitation current
- 1.16 Current regulator proportional band
- 1.17 Current regulator derivation constant
- 1.18 Measure sampling frequency
- 1.19 Enables the empty pipe detection feature
- 1.20 Empty pipe detection threshold
- 1.21 Electrode cleaning
- 1.22 Sensor connecting cable length
- 1.23 Signal error delay (n. sample)
- 1.24 Automatic sensor verify enable
- 1.25 Pipe hydraulic zero calibration
- 1.26 Linearization coefficient

```

MAIN MENU
1-Sensor
2-Units
UNITS
DIAM.= MM
S.cable= M
FR.unit= METRIC
Pl1 unit= METRIC
Pl2 unit= METRIC
T+ unit= METRIC
T+ unit= g
T+ D.P.= 3
P+ unit= METRIC
P+ unit= g
P+ D.P.= 3
T- unit= METRIC
T- unit= g
T- D.P.= 3
P- unit= METRIC
P- unit= g
P- D.P.= 3
Temp.unit= °C
Mass units= ON
Sg=kg/dm³ 1.0000
    
```

- 2.1 Nominal diameter measure unit
- 2.2 Cable length on separate version
- 2.3 Flowrate type measure unit: metric or imperial
- 2.4 Pulse 1 type measure unit: metric or not metric
- 2.5 Pulse 2 type measure unit: metric or not metric
- 2.6 Total direct totalizer measure unit type: metric or imperial
- 2.7 Total direct totalizer measure unit
- 2.8 Total direct totalizer decimal point position
- 2.9 Partial direct totalizer measure unit type: metric or not metric
- 2.10 Partial direct totalizer measure unit
- 2.11 Partial direct totalizer decimal point position
- 2.12 Total reverse totalizer measure unit type: metric or not metric
- 2.13 Total reverse totalizer measure unit
- 2.14 Total reverse totalizer decimal point position
- 2.15 Partial reverse totalizer measure unit type: metric or not metric
- 2.16 Partial reverse totalizer measure unit
- 2.17 Partial reverse totalizer decimal point position
- 2.18 Temperature measure unit
- 2.19 Enable/disable the selection of mass units on full scale set
- 2.20 Specific gravity coefficient

```

MAIN MENU
1-Sensor
2-Units
3-Scales
SCALES
FS1= g/s 4908.7
FS2= g/s 4908.7
Pls1=g 1000.00
Tpls1=ms 0050.0
Pls2=g 1000.00
Tpls2=ms 0050.0
Frq1=Hz 1000.0
Frq2=Hz 1000.0
    
```

- 3.1 Full scale flow rate 1
- 3.2 Full scale flow rate 2
- 3.3 Pulse value on channel 1
- 3.4 Duration of the pulse generated on channel 1
- 3.5 Pulse value on channel 2
- 3.6 Duration of the pulse generated on channel 2
- 3.7 Full scale frequency for channel 1 (0.1Hz-1000.0Hz)
- 3.8 Full scale frequency for channel 2 (0.1Hz-1000.0Hz)

```

MAIN MENU
1-Sensor
2-Units
3-Scales
4-Measure
MEASURE
Mapping= 0000
Cut-off=% 00.1
Cal.verify= ON
Autorange= ON
H.imm.inp.= OFF

```

- 4.1 Measure filter
- 4.2 Low flow zero threshold: 0-25% of full scale value
- 4.3 Automatic calibration verify
- 4.4 Automatic change of measurement range
- 4.5 High immunity inputs

```

MAIN MENU
1-Sensor
2-Units
3-Scales
4-Measure
5-alarms
ALARMS
Max+=dm³/s OFF
Max-=dm³/s OFF
Min+=dm³/s OFF
Min-=dm³/s OFF
Hysteresis=% 03
mA v.alarm=% 000
Hz v.alarm=% 000

```

- 5.1 Maximum value alarm set for direct flow rate
- 5.2 Maximum value alarm set for reverse flow rate
- 5.3 Minimum value alarm set for direct flow rate
- 5.4 Minimum value alarm set for reverse flow rate
- 5.5 Hysteresis threshold set for the minimum and maximum flow rate alarms
- 5.6 Current output value in case of failure
- 5.7 Frequency output value in case of alarms

```

MAIN MENU
1-Sensor
2-Units
3-Scales
4-Measure
5-alarms
6-Inputs
INPUTS
D+ reset= OFF
P+ reset= OFF
T- reset= OFF
P- reset= OFF
Count lock= OFF
Meas.lock= OFF
Calibration= OFF
Range change=OFF

```

- 6.1 Total direct (positive) flow totalizer reset enable
- 6.2 Partial direct (positive) flow totalizer reset enable
- 6.3 Total reverse (negative) flow totalizer reset enable
- 6.4 Partial reverse (negative) flow totalizer reset enable
- 6.5 Totalizer counting lock command
- 6.6 Measure zero lock command
- 6.7 Calibration external command
- 6.8 Range change external command

```

MAIN MENU
1-Sensor
2-Units
3-Scales
4-Measure
5-alarms
6-Inputs
7-Outputs
OUTPUTS
Out1= PULSES-
Out2= PULSES-
Out mA1=4.22 +/-
Out mA2=4.22 +/-
A1S= 1/s 4.9087
A2S= 1/s 4.9087

```

- 7.1 Output 1 functions
- 7.2 Output 2 functions
- 7.3 Choice of the function and the range of current output n.1
- 7.4 Choice of the function and the range of current output n.2
- 7.5 Full Scale value for analog out1
- 7.6 Full Scale value for analog out2

```

MAIN MENU
1-Sensor
2-Units
3-Scales
4-Measure
5-Alarms
6-Inputs
7-Outputs
8-Communication

```

```

COMMUNICATION
1 HART pr.= 05
1 HART O.C.= ON
1 Dev. Addr.= 001
1 Speed=bps 9600
1 Parity= NO
Delay=ms 00
C. timeout= 2

```

8.1 HART packet byte preambles
8.2 HART bus output control
8.3 Device communication address number
8.4 MODBUS link speed
8.5 MODBUS link parity
8.6 MODBUS reply delay
8.7 Maximum delay between chars (frames) MODBUS



```

DISPLAY
Language= EN
Contrast= 5
Disp. time=s 020
D. rate=Hz 5
Disp. fn.= 1
Disp. lock= ON
Part. tot.= ON
Neg. tot.= ON
Net tot.= ON
Disp. date= ON
Quick start= ON

```

9.1 Choice of the language
9.2 Display contrast
9.3 Display/keyboard inactivity time
9.4 Display updating frequency: 1-2-5-10 Hz
9.5 Display function number
9.6 Display function selection lock
9.7 Partial totalizer enable
9.8 Negative totalizer enable
9.9 Net totalizer enable
9.10 Time and date display enable
9.11 Quick start menu visualization

```

9-Display
10-Data logger
11-Functions
12-Diagnostic
13-System

```

```

DATA LOGGER
D. logger en.= ON
Meas. units= ON
Field separ.= ;
Decim separ.= .
Interv.= 01:01:00
Log T+= ON
Log P+= ON
Log T-= ON
Log P-= ON
Log IN= ON
Log PN= ON
Log Q(UM)= ON
Log Q(%)= ON
Log AL.EU= ON
Log STR= ON
Log BTS= ON
Log IBU= ON
Log EDC= ON
Log EAC= ON
Log EIZ= ON
Log SCU= ON

```

10.1 Data logger enabling
10.2 Measure unit recording enable
10.3 Field separator character
10.4 Decimal separator character
10.5 Sampling interval
10.6 Enable logging of total direct totalizer
10.7 Enable logging of partial direct totalizer
10.8 Enable logging of total reverse totalizer
10.9 Enable logging of partial reverse totalizer
10.10 Enable logging of total net totalizer
10.11 Enable logging of partial net totalizer
10.12 Enable logging of flow rate in measure unit
10.13 Enable logging of flow rate in percentage
10.14 Enable logging of alarm events
10.15 Enable logging of sensor test results
10.16 Enable logging of board temperature
10.17 Enable logging of internal board voltage
10.18 Enable logging of electrodes DC voltage
10.19 Enable logging of electrodes AC voltage
10.20 Enable logging of electrodes impedance
10.21 Enable logging of sensor coils value

```

10-Data logger
11-Functions
12-Diagnostic
13-System

```

```

FUNCTIONS
I+ reset
P+ reset
T- reset
P- reset
Load Sens.f.def
Load Conv.f.def
Save Sens.f.def
Save Conv.f.def
Calibration

```

11.1 Execute immediate reset of total direct totalizer
11.2 Execute immediate reset of partial direct totalizer
11.3 Execute immediate reset of total reverse totalizer
11.4 Execute immediate reset of partial reverse totalizer
11.5 Load sensor factory default
11.6 Load converter factory default
11.7 Save sensor factory default values
11.8 Save converter factory default values
11.9 Execute immediate internal circuit calibration

```

11-Functions
12-Diagnostic
13-System

```

```

DIAGNOSTIC
Self test
Test display
Sens.verify
Flow sim.= ON
Display measures
Disp.comm.vars
Display graphs
Gen.sens.set
SD card info
Firmware info
S/N= 999001
WT=0002:21:00:22
12-Diagnostic
13-System

```

- 12.1 Self test diagnostic function
- 12.2 Function tests physical display
- 12.3 Sensor verify diagnostic function
- 12.4 Flow rate simulation enabling
- 12.5 Display internal measured value
- 12.6 Display comm. diagnostic values
- 12.7 Display measure as graphs
- 12.8 Generic sensor parameters set
- 12.9 Sd card status informations
- 12.10 Firmware version/revision
- 12.11 Board serial number
- 12.12 Total working time

```

SYSTEM
Daylight saving= ON
Time zone=h+01.00
2016/04/04-16:07
L1 code=*****
L2 code=*****
L3 code=*****
L4 code=*****
L5 code=*****
L6 code=*****
Restr.access= ON
010.011.012.013
010.011.012.014
255.255.255.000
KT= 0.96469
KS= 1.00000
KR= 1.00000
DAC1 4mA= 02460
DAC1 20mA= 11050
DAC2 4mA= 02460
DAC2 20mA= 11050
Stand-by
FW update
13-System

```


- 13.1 Daylight saving time change
- 13.2 Localized time zone
- 13.3 System date and time
- 13.4 Access level 1 code
- 13.5 Access level 2 code
- 13.6 Access level 3 code
- 13.7 Access level 4 code
- 13.8 Access level 5 code
- 13.9 Access level 6 code
- 13.10 Restricted access level
- 13.11 Device IP network address
- 13.12 Client IP network address
- 13.13 Network mask
- 13.14 Calibration coefficient KT
- 13.15 Calibration coefficient KF
- 13.16 Calibration coefficient KR
- 13.17 DAC1 out 4mA calibration point
- 13.18 DAC1 out 20mA calibration point
- 13.19 DAC2 out 4mA calibration point
- 13.20 DAC2 out 20mA calibration point
- 13.21 Stand-by
- 13.22 firmware update

FUNCTIONS DESCRIPTION



Here below the explanation on how the rows of menu are described.

Menu visualized on the converter (from 1 to 13)
MENU 1 - SENSOR

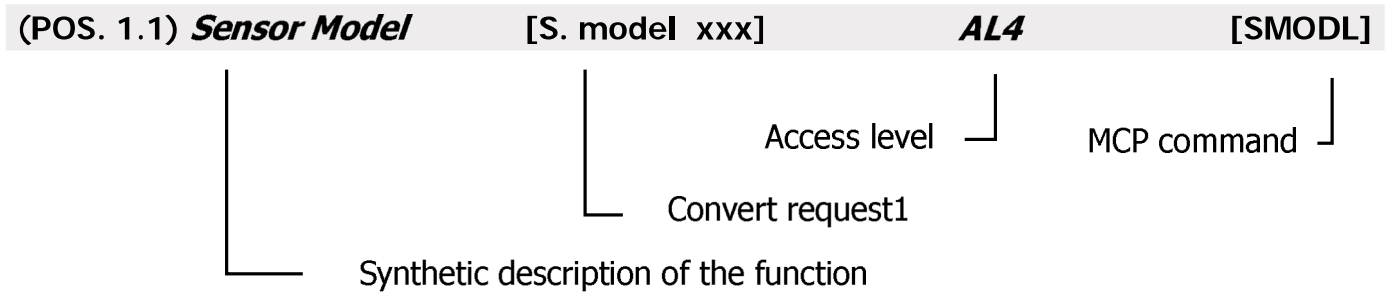

The following picture describes where to find the name of the MCP functions in MCP-software. More info see MCP manual.

Line editor for the insertion and execution of MCP commands.

MENU 1 - SENSOR

(POS. 1.1) <i>Sensor model</i>	[S. model xxx]	AL4	[SMODL]
---------------------------------------	----------------	------------	----------------

Enter the first two characters of the serial number of the sensor as on the sensor label.

(POS. 1.2) <i>Lining Type</i>	[Lining= UNSPEC.]	AL4	[LIMAT]
--------------------------------------	-------------------	------------	----------------

Flow sensor lining material type. (PFA; PU-TDI; ALON; PEEK; HR; PP; PA-11; PTFE-HT; PTFE)

(POS. 1.3) <i>Type of sensor</i>	[S. type= FULL BORE]	AL4	[STYPE]
---	----------------------	------------	----------------

Select the sensor type of full-bore or insertion.

(POS. 1.4) <i>Unit type</i>	[U.type= METRIC]	AL4	[SUTYP]
------------------------------------	------------------	------------	----------------

Select type of measure unit of sensor's parameter. Values metric or imperial (inch).

(POS. 1.5) <i>Diameter</i>	[Diam.= mm xxx]	AL4	[PDIMV]
-----------------------------------	-----------------	------------	----------------

Select the nominal diameter of the sensor (0-2500). ND is written on the sensor label.

(POS. 1.6) <i>KA</i>	[KA= + xx.xxx]	AL4	[CFFKA]
-----------------------------	----------------	------------	----------------

KA factor: calibration coefficient

(POS. 1.7) <i>KA -</i>	[KA= - xx.xxx]	AL4	[CFKAN]
-------------------------------	----------------	------------	----------------

KA factor: calibration coefficient for negative flow. This function is showed only if at least 1 negative KL value is set.

(POS. 1.8) <i>KZ</i>	[KZ= +/- xxxxx]	AL4	[CFFKZ]
-----------------------------	-----------------	------------	----------------

Calibration Factor. KZ

(POS. 1.9) <i>KD</i>	[KD= +/- xxxxx]	AL4	[CFFKD]
-----------------------------	-----------------	------------	----------------

Calibration Dynamic Factor.

(POS. 1.10) <i>Insertion position</i>	[Ins.position= x]	AL4	[SIPOS]
--	-------------------	------------	----------------

This function is active with POS.1.3 on "Insertion". See the insertion sensor manual for more details

(POS. 1.11) <i>KP dynamic</i>	[KP dynamic= ON/OFF]	AL4	[CFFKP]
--------------------------------------	----------------------	------------	----------------

This function is active with POS.POS. 1.3 see page 27 set on insertion. See manual of insertion sensor for more details

(POS. 1.12) <i>Ki</i>	[Ki= +/- xx.xxx]	AL4	[CFFKI]
------------------------------	------------------	------------	----------------

This function is active with POS. 1.3 see page 27 set on insertion. See manual of insertion sensor for more details

(POS. 1.13) <i>Kp</i>	[Kp = +/- xxxxx]	AL4	[SIDKP]
This function is active with POS. 1.3 see page 27 set on insertion. See manual of insertion sensor for more details			
(POS. 1.14) <i>KC</i>	[KC= +/- xx.xxx]	AL4	[CFFKC]
Calibration Factor. This function is activated if the sensor model is NOT present on the sensors table standard parameters			
(POS. 1.15) <i>Coils Ex.Current</i>	[C.Curr.= mA xxx.x]	AL4	[CEXCC]
Excitation coils current. This function is activated if the sensor model is NOT present on the sensors table standard parameters			
(POS. 1.16) <i>C. Reg. PB</i>	[C.Reg.PB= xxx]	AL4	[CRPRB]
Current regulator parameter. This function is activated if the sensor model is NOT present on the sensors table standard parameters			
(POS. 1.17) <i>C. Reg. DK</i>	[C.Reg. DK = xxx]	AL4	[CRDER]
Current regulator parameter. This function is activated if the sensor model is NOT present on the sensors table standard parameters			
(POS. 1.18) <i>S. Freq.</i>	[S.Freq.= Hz xx]	AL4	[SFREQ]
Measure sampling frequency. This function is activated if the sensor model is NOT present on the sensors table standard parameters			
(POS. 1.19) <i>Empty Pipe Detection</i>	[E.P.Detect= ON]	AL4	[EPDEN]
Enables the empty pipe detection function. This function is useful to keep the meter lock to zero when the pipe become empty.			
(POS. 1.20) <i>Empty pipe thr.</i>	[R max= Kohm xxxx]	AL4	[EPDTH]
Maximum resistance value at the inputs (electrodes) determine the empty pipe condition. This feature is enabled only if the "1.19 Enables the empty pipe detection feature" page 27 Empty Pipe Detection is ON.			
(POS. 1.21) <i>Electrodes cleaning</i>	[El. cleaning=AVG]	AL4	[ELCLN]
This function is useful to keep the electrodes clean; the allowed values are: OFF, minimum, average and maximum. It is not recommended to use this function when the liquid has a conductivity less than 100µS/cm (set to OFF).			
(POS. 1.22) <i>Sensor Cable</i>	[S.cable=m xxx]	AL4	[SCALN]
Lenght of cable between sensor and converter on separate version.			
(POS. 1.23) <i>Signal error delay</i>	[S.err.delay=m xxx]	AL4	[SEALT]
Delay before generating error. This function is useful to prevent unexpected lock to zero of measure caused by sporadic events (empty pipe, excitation error, signal error)			
(POS. 1.24) <i>Sensor verify</i>	[Sens. verify= OFF]	AL3	[ASVFE]
Enable the Automatic sensor verification (see BIV optional function).			

(POS. 1.25) Zero point calibration [Zero point cal.]

This feature appears only when the process conditions are as follow:

- measure filters recommended (Damping) set to SMART 2 second / 5 second
- stable flow rate and lower than 0.1% of the absolute scale (10 m/s)
- It must have elapsed at least 10 minutes after the last significant change of flow rate

When the above conditions are met, the zero point calibration function will appears on the display, press the "Enter / ESC" and automatically the procedure will start.

NOTICE: Be sure that the the sensor is completely full of liquid and perfectly still. Even subtle movements of the fluid can cause significant errors, therefore proceed with great care.

(POS. 1.26) Coefficient KL [KL=XX +/- XXXXXXXXX] AL4 [SETKL]

Linearization coefficient for negative flow, reserved to the service. This command is only showed if SMODL = 000.

MENU 1 - SENSOR: ONLY MCP FUNCTIONS

Sensor Coils Time A [MCP ONLY] AL4 [SCTMA]

Reference sensor coil time A

Sensor Coils Time B [MCP ONLY] AL4 [SCTMB]

Reference sensor coil time B

Sensor Coils Resistance [MCP ONLY] AL4 [SCRES]

Reference sensor coil resistance

Resistance E1 [MCP ONLY] AL4 [SE1RR]

Resistance value of E1 electrodes

Resistance E2 [MCP ONLY] AL4 [SE2RR]

Resistance value E2 electrodes

Sensor Coils Temperature Reference [MCP ONLY] AL4 [SCTRF]

sensor data reference temperature. Temperature measured on the coils of the sensor at the time of saving the instrument reference data for B.I.V. function The temperature value in degrees Celsius, which owns the sensor.

Note: the temperature must be estimated on the basis of the place of the sensor installation.

MENU 2 - UNITS

WARNING: The totalizer value is updated and changed depending on the setting of unit value. The scale change may cause accuracy loss depending of rounding up. For example, if T +=0,234 liters with 3 decimals, it become T +=0.001 m³ losing 0.234 liters in rounding up.

(POS. 2.1) <i>Diameter</i>	[Diam.= mm]	AL2	[SDIUM]
Sensor diameter unit of measure (mm or inch)			
(POS. 2.2) <i>S.cable length unit of m. type</i>	[S.Cable= m]	AL2	[SCAUM]
Sensor cable length for separate version. Select m or foot.			
(POS. 2.3) <i>Flow rate unit of m. type</i>	[FR unit= METRIC]	AL2	[FRMUT]
Flow rate type measure unit. Select metric or not metric (Imperial units)			
(POS. 2.4) <i>Pulse 1 unit of m. type</i>	[PL1 unit= METRIC]	AL2	[PL1UT]
This function is active with POS. 7.1 see page 28 enable. This function changes the choice of measure unit POS. 3.3 see page 27 Pulse 1 type measure unit: metric or not metric (Imperial units).			
(POS. 2.5) <i>Pulse 2 unit of m. type</i>	[PL2 unit= METRIC]	AL2	[PL2UT]
This function is active with POS. 7.2 see page 28 enable. This function changes the choice of measure unit POS. 3.5 see page 27 Pulse 2 type measure unit: metric or not metric Imperial units).			
(POS. 2.6) <i>Totalizer direct unit of m. type</i>	[T+ unit= METRIC]	AL2	[TTPUT]
Setting total direct totalizer measure unit type: metric or not metric Imperial units). This function changes the values measure unit on POS. 2.7 see page 27			
(POS. 2.7) <i>Totalizer direct unit of measure</i>	[T+ unit= dm ³]	AL2	[TTPUM]
Setting total direct totalizer measure unit. This function visualized on visualization pages.			
(POS. 2.8) <i>Totalizer direct Deci.Point pos.</i>	[T+ D.P.= x]	AL2	[TTPDP]
Setting total direct totalizer decimal point position. Example: T+D.P.= 3 visualized value T+dm ³ 0.000 / T+D.P.= 2 visualized value T+dm ³ 0.00			
(POS. 2.9) Total. <i>Part drect unit of m. type</i>	[P+ unit= METRIC]	AL2	[TPPUT]
This function is active with POS. 9.7 see page 29 enable. Setting partial direct totalizer measure unit type: metric or not metric (Imperial units). This function changes the values measure unit on POS. 2.10 see page 27 . It is visualized on visualization pages.			
(POS. 2.10) Total. <i>Partial+ unit of measure</i>	[P+ unit= dm ³]	AL2	[TPPUM]
Setting partial direct totalizer measure unit. This function visualized on visualization pages.			

(POS. 2.11) Total. *Part direct Dec. Point pos.* [P+ D.P.= x] **AL2** [TPPDP]

Setting partial direct totalizer decimal point position.

Example: P+D.P.= 3 visualized value P+dm³ 0.000 / P+D.P.= 2 visualized value P+dm³ 0.00

(POS. 2.12) Total. *T reverse unit of m. type* [T- unit= METRIC] **AL2** [TTNUT]

This function is active with POS. 9.8 see page 29, enabled.

Setting total reverse totalizer measure unit type: metric or not metric (Imperial units).

This function changes the values measure unit on POS. 2.13 see page 27.

It is visualized on visualization pages.

(POS. 2.13) Total. *T reverse unit of meas.* [T- unit= dm³] **AL2** [TTNUM]

Setting total reverse totalizer measure unit.

This function visualized on visualization pages.

(POS. 2.14) Total. *T reverse Dec. Point Pos.* [T- D.P.= x] **AL2** [TTNDP]

Setting total reverse totalizer decimal point position.

Example: T- D.P.= 3 visualized value T- dm³ 0.000
T- D.P.= 2 visualized value T- dm³ 0.00

(POS. 2.15) Total. *Part reverse unit of m. type* [P- unit= METRIC] **AL2** [TPNUT]

This function is active with POS. 9.8 see page 29, enable.

Setting partial reverse totalizer measure unit type: metric or not metric (Imperial units).

This function changes the values measure unit on POS. 2.16 see page 27

It is visualized on visualization pages.

(POS. 2.16) Total. *Part reverse unit of measure* [P- unit= dm³] **AL2** [TPNUM]

Setting partial reverse totalizer measure unit.

This function visualized on visualization pages.

(POS. 2.17) Tot *Part reverse Deci. Point Pos.* [P- D.P.= x] **AL2** [TPNDP]

Setting partial reverse totalizer decimal point position.

Example: P- D.P.= 3 visualized value P-dm³ 0.000
P- D.P.= 2 visualized value P-dm³ 0.00

(POS. 2.18) *Temperature unit of measure* [Temp. unit= C°] **AL2** [TMPUT]

Setting temperature measure unit.

(POS. 2.19) *Mass units enable* [Mass units= ON/OFF] **AL2** [MSSUE]

Enable or Disable the selection of mass unit of full scale set.

(POS. 2.20) *Specific Gravity coeffic.* [Sg= Kg/dm³ x.xxxx] **AL2** [VMSGC]

Setting specific gravity coefficient. This Function is active with POS. 2.19 see page 27, enable.

MENU 3 - SCALE

(POS. 3.1-2) Flow Rate Full Scale 1-2 [FS1-2= I/s xxxx.x] **AL2** [FRFS1-FRFS2]

The FS2 (full scale flow rate 2) is active with POS. 6.6 see page 28 ,enabled.

The full scale is used to indicate to the maximum meter's flow rate. The full scale should be chosen carefully as it's parameters are used for several other parameters. There are three fields to fill in order to set this parameter, from left to right: 1) measure unit, 2) time unit of measure and 3) numeric value. The selection is made by positioning the cursor on the field to modify. To change the type unit of measure (metric, Imperial units, mass or volume) see POS. 2.3 see page 27 and POS. 2.19 see page 27 and POS. 2.20 see page 27. The value of Fs1-2 depend nominal diameter POS. 1.4 see page 27. The following tables shown the units of measure available and the conversion factor by comparison with 1dm³ and 1kg. The converter accepts any kind of combination of units of measure satisfying both the following conditions:

- Numeric field value 99999
- $1/25 \text{ fsmax} \leq \text{numeric field value} \leq \text{fsmax}$.

Where fsmax is the maximum full scale value corresponding to the sensor, equal to a 10m/s liquid speed. The measure units are shown as appear on the display. The Imperial units units are diversified by using capital and small characters.

METRIC	
cm ³	Cubic centimeter
ml	Milliliter
l	Liter
dm ³	Cubic decimeter
dal	Decalitre
hl	Hectolitre
m ³	Cubic meter
ML	Mega Liter

NOT METRIC	
in ³	Cubic inch
Gal	American gallon
ft ³	Cubic foot
bbl	Standard barrel
BBL	Oil barrel
hf ³	Hecto cubic feet
KGL	American Kilo gallon
kf ³	Kilo cubic feet
ttG	Ten thousand gallons
IGL	Imperial gallon
IKG	Imperial Kilo gallon
Aft	Acre foot
MGL	Mega gallon
IMG	Imperial mega gallon

MASS UNIT NOT METRIC	
Oz	Ounce
Lb	Pound
Ton	Short tons

MASS UNIT METRIC	
g	Gram
kg	Kilogram
t	Ton

When a measure mass unit is set, the specific gravity function is automatically enabled by the system. Please, note that the mass measure is heavily affected by the temperature. With certain liquids this may cause significant measurement errors. The following measure of time units can be selected: s = second, m = minute, h = hour, d = day .

NOTES FOR USING THE MCP INTERFACE

The command FRFS1 =? and command FRS2 = ?, edited by MCP software, return a list of only the unit compatible with the nominal diameter set. If the sensor is insertion type and the diameter is zero, the only possible unit is m/s if the flow rate were chosen metric units, else f/s for the unit of measurement non metric.

(POS. 3.3-3.5) Output *Pulse 1-2* [Pls1-2= dm³ x.xxxxx] *AL2* [OP1PV-OP2PV]

Pls1 and Pls2 is active with POS. 7.1 see page 28 and POS. 7.2 see page 28, enable and setting pulse value on channel 1 and channel 2. This function allows the user to set a signal (a pulse) to be given from the converter when a defined amount of liquid has passed through the sensor. To set the parameter, complete the 2 fields, from left to right: 1) measure unit, 2) numeric value. The selection is performed by positioning the cursor in the field to be modified. To change the unit type (metric, British or American, mass or volume) see POS. 2.4 see page 27 and POS. 2.5 see page 27, POS. 2.19 see page 27 and POS. 2.20 see page 27. The value of Pls1-2 depends on nominal diameter POS. 1.4 see page 27. Only those units described (POS. 3.1 see page 27-POS. 3.2 see page 27) above are available to be selected.

(POS. 3.4-3.6) *Output1-2 Pulse Time* [Tpls1-2= ms x.xxxxx] *AL2* [OP1PT OP2PT]

Tpls1 and Tpls2 is active with POS. 7.1 see page 28 and POS. 7.2 see page 28 enable. Setting duration of the pulse generated on channel 1 and 2.

With the liquid volume to generate the pulse value (POS. 3.3 see page 27 POS. 3.5 see page 27) set by the user. The user must set the corresponding duration of the pulse to be outputted. This value is expressed in milliseconds and has to be between 0.4 and 9999.99. When the high frequency output is present, then the minimum value can type of device is connected to the converter, the user must verify that the set pulse duration is compatible with the external device processing such pulses. If, for example, an electro-mechanical pulse counter is connected, a minimum pulse time of 0.04 milliseconds can be set.

ATTENTION: The converter can not detect problems that may occur; firstly, the pulse is too long the coils may burn out, secondly, if the pulse is too short, the counter may not be able to function, causing damage of the output.

(POS. 3.7-3.8) Output full scale freq.1-2 [Frq1-2= x.xxxxx] *AL2* [OU1FF-OU2FF]

Frq1 and Frq2 are activated with POS. 7.1 see page 28 and POS. 7.2 see page 28 enabled and set to the value freq+/-/+-. Setting duration of the pulse generated on channel 1 and 2.

MENU 4 - MEASURE

(POS. 4.1) *Damping*


[Damping=OFF/SMART/(TIME)]

AL3


[MFDMP]

This section of manual is extremely important because the correct setting of the filters allows to obtain a proper response of the instrument to the measured flow rate and the specific requirements of use; as a general rule, consider that, starting from Damping = OFF (no filter applied to the measure), successive values, introduce increasing damping. The following diagrams show the instrument's response to changes in flow rate from 0 to 100%, using the different settings of the damping function.

The SMART is an adaptive filter that adapts automatically to most of the processes (recommended value), making the response of the meter very ready to fast changes of flow and at the same time extremely precise and stable for slow variations. It may be convenient to use a constant damping filter time, where there is a pulsating flow (for example generated by peristaltic pumps). With longer times you get a mean value stable, while with short times the measure will closely follow the flow pulses, but consequently more unstable. NOTE: If the rechargeable battery is active, the damping could be set only in "SMART".

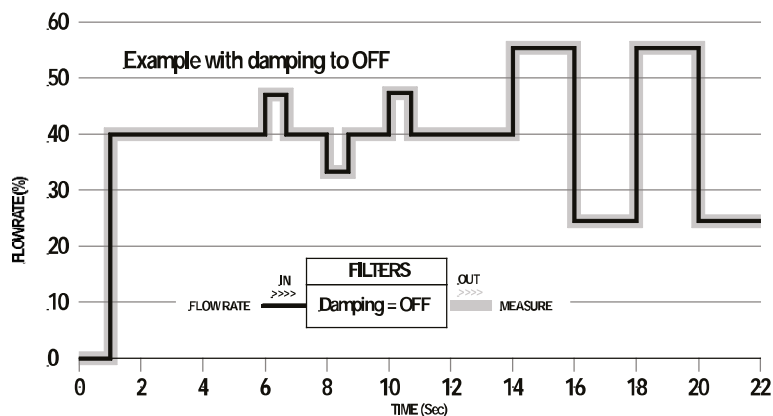

Damping function(OFF). the meter follows the trend of fast changes in flow.

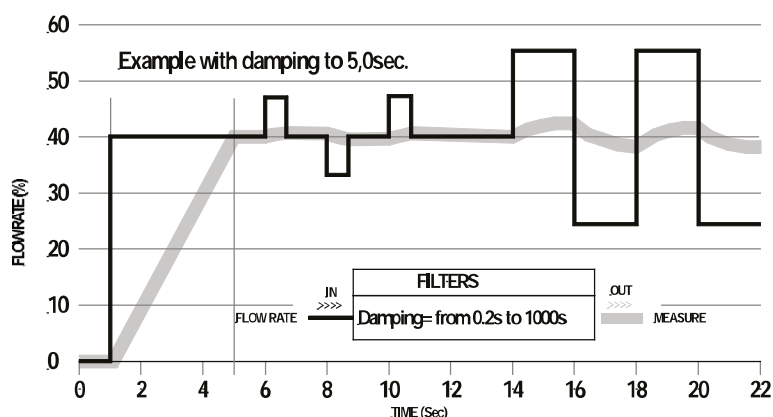

Damping mode based on time (fro 0.2s to 1000s) The measure is averaged over a number of samples determined by the value assigned to the dampening function. When the damping parameter is expressed in seconds, the filter works damping the measurement noise and sudden change of flow rate. Increasing the parameter of damping increases the stability of the measurement.

(POS. 4.2) *Cut-off threshold* [Cut-off=% xxx] **AL3** [MFCUT]

Setting the low flow cutoff threshold. This function is useful to avoid that flows close to zero, due to the electrical noises from tiny movements of liquid (due for example to vibrations of the pipe) which cause an increasing of the totalizers. The allowed range for this function is 0-25% of full scale set. For most applications a value between 0.5 and 1% is recommended.

(POS. 4.3) *Calibration verify* [Cal.verify=ON] **AL3** [ACAVE]

This function enables an automatic verification of board's coefficients. As the converter performs continuously a large number of tests, we recommend to use this function only in presence of wide range of temperature. Instead it is NOT recommended to use it when the instrument is used in metering applications (batch).

(POS. 4.4) *Automatic scale change enable* [Autorange=ON/OFF] **AL3** [ARNGE]

Enables the automatic change of scale. The meter may have two different working ranges in order to suit to the variable process conditions. In order to get the best results out of this function it is important range N.2 (Fs2) if enabled is bigger than N.1 (Fs1). When the flow rate increases and reaches the 100% of the full scale 1, then the meter automatically switches to scale 2. When the flow rate decreases again reaching a value on scale 2 equal to the 90% of full scale N.1, then the active scale is 1 again. Allowed values for this parameter: ON/OFF.

Notice: when the autorange is enabled, is not allow to use the manual range change (POS. 6.6 see page 28).

This function does NOT increase the accuracy of the measure; its aim is to increase the resolution of 4/20 mA when the meter work at very low flow rates (typical case the flow rate of water distribution with daytime flow much higher than the night flow).

(POS. 4.5) *High immunity INPUTS* [H.imm. inp.] **AL4** [HIINP]

The HIINP function (INPut High Immunity filter) introduces a hardware filter to be used ONLY IN CASE OF ABSOLUTE NECESSITY, when the measure is absolutely unstable or it is NOT possible to make the measure, and every possible attempt to reduce or eliminate the noise do not give a positive result, with particular attention of instrument ground connection. When this function is activated (HIINP = ON) the measure will be influenced by an unavoidable error estimated around 1%.

MENU 4 - MEASURE: ONLY MCP FUNCTIONS

Measure Filter Cut-off Threshold 2 [MCP ONLY] **AL3** [MFCT2]

Setting the low flow cutoff threshold, it is similar to the function in 4.2. The value of this function is NOT visible on display but only with MCP command.

Dynamic sample analysis [MCP ONLY] **AL4** [DYNSA]

Reserved to the service

Dynamic sample time [MCP ONLY] **AL4** [DYNST]

Reserved to the service

MENU 5 - ALARMS

(POS. 5.1) **Maximum direct flow rate threshold** [Max+=XXXXX] **AL3** [FRAXP]

Maximum value alarm set for direct flow rate set (expressed in technical units). When the flow rate value exceeds such a threshold, then an alarm message is generated. Setting this parameter to zero disables the alarm generation.

(POS. 5.2) **Maximum reverse flow rate threshold** [Max-=XXXXX] **AL3** [FRAXN]

Maximum value alarm set for reverse flow rate set (expressed in technical units). When the flow rate value exceeds such a threshold, then an alarm message is generated. Setting this parameter to zero disables the alarm generation.

(POS. 5.3) **Minimum direct flow rate threshold** [Min+=XXXXX] **AL3** [FRANP]

Minimum value alarm set for reverse flow rate set (expressed in technical units). When the flow rate value falls below such a threshold, then an alarm message is generated. Setting this parameter to zero disables the alarm generation.

(POS. 5.4) **Minimum reverse flow rate threshold** [Min-=XXXXX] **AL3** [FRANN]

Minimum value alarm set for reverse flow rate set (expressed in technical units). When the flow rate value falls below such a threshold, then an alarm message is generated. Setting this parameter to zero disables the alarm generation.

(POS. 5.5) **Hysteresis** [Hysteresis=% XX] **AL3** [ATHYS]

Hysteresis threshold set for the minimum and maximum flow rate alarms. The value of this parameter is expressed as percentage of the full scale value and may be set from 0 to 25%.

(POS. 5.6) **Current output value in case of failure** [mA V.alarm =% XXX] **AL3** [OCACV]

The output current signal can be specified by the user in case of failure of either, empty pipe, coils interrupted, or ADC error. The signal current is set as a percentage (0 to 125%) of the 0/4-20mA current. 125% corresponds to 24mA and does not depend on the selected range (0-20/4-20mA).

The NAMUR NE43 recommendation asks for a alarms signalling value for the current output lower than 3.6mA (<18%) or bigger than 21mA (>105%). It would then be preferable to set the value of this function at the 10%, so that the current value in case of the a.m. cases would be 2 mA, allowing the following diagnostics:

- current < 2mA - 5%: line interrupted, power supply failure or faulty converter;
- 2mA -5% * current * 2mA + 5%: hardware alarm;
- 4mA * current * 20mA: normal working range;
- 20mA < current * 22mA: out of range, measure above 100% f.s.

(POS. 5.7) **Frequency output value in case of failure** [Hz V.alarm=%XXX] **AL3** [OFACV]

This function is active with POS. 7.1 see page 28 and POS. 7.2 see page 28 enable to (FREQ.+, FREQ.-, FREQ.±) To set the frequency value assigned to the on/off output in one or more of the following failure cases:

- Empty pipe; Coils interrupted ; ADC error. Allowable range is from 0 to 125% of the frequency full scale value. Although there are no specific rules regulating cases such as these, it would be convenient to use the failure information as follows:
- 0% Hz * frequency * 100% f.s.: normal working range;
- 100% f.s. < frequency * 110% f.s.: overflow, measure above the 100% of the f.s.;
- 115% f.s. * frequency * 125% f.s.: hardware alarm condition.

MENU 6 - INPUTS

(POS. 6.1-2) *T.direct(pos)flowtot./part reset enable* [T/P+/RESET=ON/OFF] **AL3** [VTTPE] [VTPPE]

When one of this function is enabled, the related totalizer + may be reset through the on/off input.

(POS. 6.3-4) *T.rev.(neg)flowtot./part reset enable* [T/P-/RESET=ON/OFF] **AL3** [VTTNE] [VTPNE]

When one of this function is enabled, the related totalizer - may be reset through the on/off input.

(POS. 6.5) *Totalizers counting lock command* [COUNT LOCK= ON/OFF] **AL3** [TCLIE]

Totalizers counting lock command enable. When this function is active, applying a voltage on the on/off input terminals the system stops the totalizers no matter which is the flow rate.

(POS. 6.6) *Measure zero lock input enable* [Meas.lock=ON/OFF] **AL3** [MSLIE]

When this function is active (ON), applying a voltage on the on input terminals, the measurement is stopped, the meter will display zero flow.

(POS. 6.7) *Calibration Func. input enable* [Calibration=ON/OFF] **AL3** [CALIE]

When this function is active, applying a voltage on the on/off input terminals the meter performs a autozero calibration cycle. ATTENTION: If the voltage pulse is less than 1 sec., the meter performs a calibration cycle to compensate possible thermal drifts. If the voltage pulse is more 1 sec, the meter performs a zero calibration measure. To perform the calibration it is absolutely necessary for the sensor to be full of liquid and that the liquid is perfectly still. Even very small movement of the liquid may affect the result of the calibration, and, consequently, the accuracy of the system.

(POS. 6.8) *Flow rate range change inp.* [RANGECHANGE=ON/OFF] **AL3** [SRCIE]

Range change external command enable. When this function is enabled, applying a voltage on the on/off input terminals the meter switches to the second measuring range (Fs2).

N.B.: the autorange doesn't allow to use the manual range change see (POS. 4.4 see page 28).

MENU 7 - OUTPUTS

(POS. 7.1) Output 1 function selection [Out1=XXXXXX] **AL3** [OUT1F]

Function choice corresponding to digital Output 1. The functions are listed in the table below.

(POS. 7.2) Output 2 function selection [Out2=XXXXXX] **AL3** [OUT2F]

Function choice corresponding to digital Output 2. The functions are listed in the table below.

FUNCTIONS FOR OUTPUTS 1 AND 2

- OFF: DISABLE
- MAX AL. +: MAX DIRECT FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- MIN AL. +: MIN DIRECT FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- MAX AL.-: MAX INVERSE FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- MIN AL.-: MIN INVERSE FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- MAX/MIN-: MAX/MIN INVERSE FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- MAX/MIN+/-: MAX/MIN DIRECT FLOW RATE OUTPUT (ENERGIZED = AL. OFF)
- P.EMPTY: EMPTY PIPE ALLARM OUTPUT (ENERGIZED = AL. OFF)
- AL.SYSTEM: SUM OF ALL ALARMS "energized interrupted " AND "error input signal "
- OVERFLOW: OUT OF RANGE ALLARM OUTPUT (ENERGIZED = FLOWRATE OK)
- ALL ALARMS: SUM OF ALL ALARMS POSSIBLE
- MANUAL: OUTPUT MAY TAKE A STATE EMPLOYEE FROM AN EXTERNAL CONTROL (MCP,MODBUS, ecc)
- FLOW RATE SIGN.: FLOW DIRECTION (ENERGIZED WHEN FLOW IS NEGATIVE)
- SCALE: INDICATION SCALE
- FREQ.+: FREQUENCY POSITIVE FLOWRATE
- FREQ.-: FREQUENCY NEGATIVE FLOWRATE
- FREQ.+/-: FREQUENCY POSITIVE/NEGATIVE FLOWRATE
- PULSES.+: PULSE POSITIVE FLOW RATE
- PULSES.-: PULSE NEGATIVE FLOW RATE
- PULSES+/-: PULSE NEGATIVE/POSITIVE FLOW RATE

(POS. 7.3-4) Current output option and range [Out mA1/2=X_XX XXX] **AL3** [AO1CF] [AO2CF]

This function sets the current output 1 and 2. This function is optional and will not appear unless the option has been requested. There are three fields to modify for this function:

- Scale zero: 4 or 0mA
- Full scale: 20 or 22mA
- Field: + = positive, - = negative, blank = both, -0+ = central zero scale



The values corresponding to the scale points are shown in the following chart:

CURRENT VALUES IN mA ASSOCIATE TO THE % FULL SCALE VALUE					
POSSIBLE FIELD	REVERSE FLOW VALUE		ZERO	DIRECT FLOW VALUE	
	≤-110%	-100%		+100%	≥+110%
Out.mA = 0 ÷ 20 +	0	0	0	20	20
Out.mA = 0 ÷ 22 +	0	0	0	20	22
Out.mA = 4 ÷ 20 +	4	4	4	20	20
*Out.mA = 4 ÷ 22 +	4	4	4	20	21.6
Out.mA = 0 ÷ 20 -	20	20	0	0	0
Out.mA = 0 ÷ 22 -	22	20	0	0	0
Out.mA = 4 ÷ 20 -	20	20	4	4	4
Out.mA = 4 ÷ 22 -	21.6	20	4	4	4
Out.mA = 0 ÷ 20	20	20	0	20	20
Out.mA = 0 ÷ 22	22	20	0	20	22
Out.mA = 4 ÷ 20	20	20	4	20	20
Out.mA = 4 ÷ 22	21.6	20	4	20	21.6
Out.mA = 0 ÷ 20 -0+	0	0	10	20	20
Out.mA = 0 ÷ 22 -0+	0	1	11	21	22
**Out.mA = 4 ÷ 20 -0+	4	4	12	20	20
Out.mA = 4 ÷ 22 -0+	2	4	12	20	22

In hardware alarm conditions "HARDW AL." (interrupted coils, empty pipe, measure error) the current value is programmed by the function "mA v.fault" (pos. 5.6) and it is expressed as percentage of a fixed current range, where: 0% = 0mA and 110% = 22mA.

* Example 1: out 4-22 +

** Example 2: out 4-20 -0+

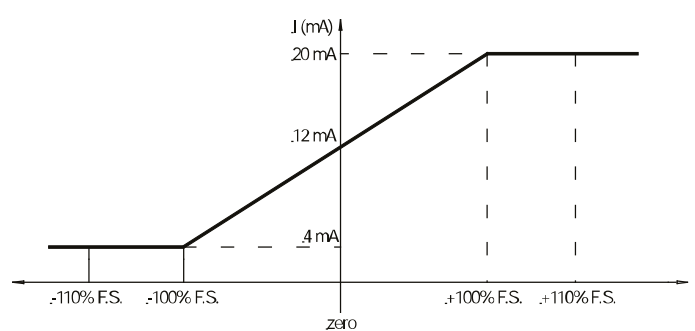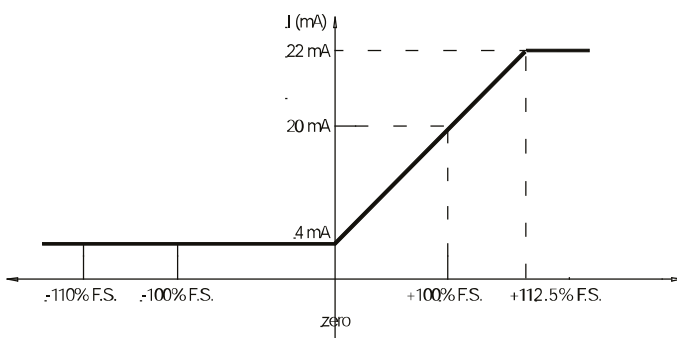

(POS. 7.5) Analog Output1 full scale

[A1S= dm/s x.xxxx]

AL3 [AO1FS]

It allows to set the full scale value for analog output 1 **independently** from the main scale of the instrument.

(POS. 7.6) Analog Output2 full scale

[A2S= dm/s x.xxxx]

AL3 [AO2FS]

It allows to set the full scale value for analog output 2 **independently** from the main scale of the instrument.

MENU 8 - COMMUNICATION

(POS. 8.1) Hart Preamble	[HART pr.=XXXXXX]	AL3	[HARTP]
---------------------------------	-------------------	------------	---------

Number of preamble (Hart function)

(POS. 8.2) Hart O.C	[HART O.C=ON/OFF]	AL3	[HRTOC]
----------------------------	-------------------	------------	---------

Hart bus output control 4-20mA.



(POS. 8.3) Device Address	[Dev. Addr=XXXXXX]	AL3	[DVADD]
----------------------------------	--------------------	------------	---------

Device communication address number.

(POS. 8.4) Modbus Speed	[Speed=XXXXXX]	AL3	[MDBSP]
--------------------------------	----------------	------------	---------

Modbus link speed.

(POS. 8.5) Modbus Parity	[Parity=XXXXXX]	AL3	[MDBPA]
---------------------------------	-----------------	------------	---------

Modbus link parity.

(POS. 8.6) Modbus Delay	[Delay=XXXXXX]	AL3	[MDBDL]
--------------------------------	----------------	------------	---------

Modbus replay delay.

(POS. 8.7) Modbus chars Timeout	[C. timeout=X]	AL3	[MDBCT]
--	----------------	------------	---------

Maximun delay between chars (frames).

MV110 MODBUS PROTOCOL

RS485 HARDWARE CONNECTION

For the hardware connection see the relative section in this manual and MODBUS manual.

DATA WORD FORMAT

The data bytes travelling in serial form on the communication line are enclosed in words which have a fixed length of 10 bits:

1 START BIT

8 DATA BITS = 1 DATA BYTE

1 STOP BIT

Each word contains one byte of data plus additional bits which serve to synchronies and make the communication safer. These extra bits added automatically in the transmission phase by the transmitter integrated circuit. In the reception phase, the reverse operation is executed by the receiver integrated circuit: the eight data bits are extracted and the others eliminated. These operation are executed entirely on a hardware level. The 8 data bits must be serialised starting from bit 0 (the least significant one).

COMMUNICATION SPEED

The millennium series instruments have 4 communication speeds:

4800 bps

9600 bps

19200 bps

38400 bps

❑ SERIAL PORT SETTINGS

Serial port setting:

Data bits: 8

Parity: Manu < 7-Communication >, function - < Parity >

Stop bits: 1

Flow control: none (no control lines no xon/xoff characters used)

❑ GENERAL DESCRIPTION

All data are sent in group of 16 bits registers. The format used is BIG ENDIAN, MSB byte is sent first, LSB is sent last. When a variable is more than 16 bits in size, it uses two adjacent registers. The totalizer values are expressed as integer numbers. For the correct representation of the value in case there is a fractional part, the decimal dot must be placed in the position specified by the next variable register following the totalized value. All values relative to the flow rate are averaged. The number of samples that compose the average value varies depending on the measure sample rate and the MODBUS reading requests. Example: measure sample rate = 50 Hz, MODBUS reading frequency = 10 Hz, Number of samples used for average calculation = $50/10 = 5$.

Read process variable : COMMAND 04.

ADDRESS	SIZE	TYPE OF DATA	MEANING
0000-0001	2 REGISTERS 32 BITS	FLOAT	full scale flow rate in the unit of measure chosen (as can be seen in the display of the instrument)
0002-0003	2 REGISTERS 32 BIT	FLOAT	flow rate value in percentage
0004-0005	2 REGISTERS 32 BITS	FLOAT	flow rate value in the unit of measure chosen
0006-0007	2 REGISTERS 32 BITS	FLOAT	Flow speed in the unit of measure chosen (m/s or ft/s)
0008-0009	2 REGISTERS 32 BITS	UNSIGNED LONG	Totalizer T+ value
0010	1 REGISTER 8+8 BITS	TWO BYTES	First byte (MSB): number of overflows recorded, second byte (LSB): number of decimal places
0011-0012	2 REGISTERS 32 BITS	UNSIGNED LONG	Totalizer P+ value
0013	1 REGISTER 8+8 BITS	TWO BYTES	First byte (MSB): number of overflows recorded, second byte (LSB): number of decimal places
0014-0015	2 REGISTERS 32 BITS	UNSIGNED LONG	totalizer T- value
0016	1 REGISTER 8+8 BITS	TWO BYTES	First byte (MSB): number of overflows recorded, second byte (LSB): number of decimal places
0017-0018	2 REGISTERS 32 BITS	UNSIGNED LONG	Totalizer P- value
0019	1 REGISTER 8+8 BITS	TWO BYTES	First byte (MSB): number of overflows recorded, second byte (LSB): number of decimal places
0020	1 REGISTER 8+8 BITS	TWO BYTES	first byte (MSB): process flags 1, (LSB): process flags 2
0021	1 REGISTER 16 BITS	UNSIGNED SHORT	Number of measure samples used for to calculate the latest read average value of flow rate
0022	1 REGISTER 16 BITS	UNSIGNED SHORT	Equivalent resistance measured between electrode E1 and the common point, in kilo ohm
0023	1 REGISTER, 16 BITS	UNSIGNED SHORT	equivalent resistance measured between electrode E2 and the common point, in kilo ohm
0024	1 REGISTER, 16 BITS	SIGNED SHORT	voltage measured between electrode E1 and the common point, in millVolts
0025	1 REGISTER, 16 BITS	SIGNED SHORT	voltage measured between electrode E2 and the common point, in millVolts
0026	1 REGISTER, 16 BITS	UNSIGNED SHORT	voltage measured at rechargeable terminals, in milliVolts
0027	1 REGISTER, 16 BITS	UNSIGNED SHORT	residual battery capacity in percentage
0028	1 REGISTER, 16 BITS	SIGNED SHORT	CPU temperature in the unit of measure chosen
0029	1 REGISTER, 16 BITS	SIGNED SHORT	Board temperature T1 the unit of measure chosen
0030	1 REGISTER, 16 BITS	SIGNED SHORT	Board temperature T2 the unit of measure chosen
0031	1 REGISTER, 16 BITS	SIGNED SHORT	Flow sensor coil's temperature the unit of measure chosen
0032	1 REGISTER, 16 BITS	UNSIGNED SHORT	latest sensor test result code
0033	1 REGISTER, 16 BITS	UNSIGNED SHORT	number of alarms currently active

Meaning and value of the process flags 1 returned with the register 0020 (MSB):

- ❑ bit 7 (MSB): flow rate alarm MIN (flow rate below the minimum threshold set)
- ❑ bit 6: flow rate alarm MAX (flow rate over the maximum threshold set)
- ❑ bit 5: flow rate sign (1 = negative)
- ❑ bit 4: flow rate below the cut-off value
- ❑ bit 3: measure range active (0= range 1, 1= range 2)
- ❑ bit 2: flow rate measure reset value status (1= measure is forcibly reset to zero)
- ❑ bit 1: volume counters lock status (1= counters are locked)
- ❑ bit 0 (LSB): internal use, no meaning

Meaning and value of the process flags 2 returned with the register 0020 (LSB):

- bit 7 (MSB): flow rate overflow (value greater than full scale)
- bit 6: pulse channel #2 overflow (frequency greater than maximum possible for the given parameters)
- bit 5: pulse channel #1 overflow (frequency greater than maximum possible for the given parameters)
- bit 4: measure signal amplitude out of A/D converter range
- bit 3: measure signal amplitude out of amplifier capability
- bit 2: input signal error (out of input chain capability)
- bit 1: coils excitation error
- bit 0 (LSB): pipe empty

Meaning and value of the sensor test flags returned with the register 0032:

- bit 15 (MSB): resistance at electrode E2 is outside the limits respect to the reference value
- bit 14 : resistance at electrode E1 is outside the limits respect to the reference value
- bit 13: coil time B is outside the limits respect to the reference value
- bit 12: coil time A is outside the limits respect to the reference value
- bit 11: coil temperature is outside the limits respect to the reference value
- bit 10: coil leakage current is outside the limit
- bit 09: coil driver output 2 voltage is out of tolerance during test phase 3
- bit 08: coil driver output 1 voltage is out of tolerance during test phase 3
- bit 07: coil driver output 2 voltage is out of tolerance during test phase 2
- bit 06: coil driver output 1 voltage is out of tolerance during test phase 2
- bit 05: coil driver output 2 voltage is out of tolerance during test phase 1
- bit 04: coil driver output 1 voltage is out of tolerance during test phase 1
- bit 03: coil driver power generator voltage is out of tolerance during test phase 2
- bit 02: coil driver power generator voltage is out of tolerance during test phase 1
- bit 01: coil driver power generator value is out of tolerance during test phase 2
- bit 00 (LSB): coil driver power generator value is out of tolerance during test phase 1

Reset totalizers: COMMAND 05.

ADDRESS	SIZE	TYPE OF DATA	COMMAND VALUE	MEANING
0000	1 REGISTER, 16 BITS	UNSIGNED SHORT	0xFF00 (HEX)	Reset the enabled totalizers (same totalizer enabled for reset from digital input).

Diagnostics: COMMAND 08.

ADDRESS	SIZE	TYPE OF DATA	FUNCTION / VALUE
0000	1 REGISTER, 16 BITS	UNSIGNED SHORT	Return query data
0001	1 REGISTER, 16 BITS	SIGNED SHORT	Restart communication
0004	1 REGISTER, 16 BITS	SIGNED SHORT	Activate listen mode
0010	1 REGISTER, 16 BITS	SIGNED SHORT	Clear counters and Diagnostic Register

ADDRESS	SIZE	TYPE OF DATA	FUNCTION / VALUE
0011	1 REGISTER, 16 BITS	UNSIGNED SHORT	Return Bus Message Count
0012	1 REGISTER, 16 BITS	UNSIGNED SHORT	Return Bus Communication Error Count
0013	1 REGISTER, 16 BITS	UNSIGNED SHORT	Return Bus Exception Error Count with CRC error
0014	1 REGISTER, 16 BITS	UNSIGNED SHORT	Return Server Message Count
0015	1 REGISTER, 16 BITS	UNSIGNED SHORT	Return Server No Response Count
0016	1 REGISTER, 16 BITS	UNSIGNED SHORT	Return Server NAK Count
0017	1 REGISTER, 16 BITS	UNSIGNED SHORT	Return Server Busy Count
0018	1 REGISTER, 16 BITS	UNSIGNED SHORT	Return Bus Character Overrun Count

MENU 9 - DISPLAY

- (POS. 9.1) **Language for all msn** [Language= ITA/EN] **AL1** [LLANG]
Choice of the language. There are 8 languages available: GB = English, IT = Italian, TR = Turkish, PL = Polish, DE = German, FR = French, PT = Portuguese, ES = Spanish.
- (POS. 9.2) **Display Contrast** [Contrast= x] **AL1** [DCNTR]
Display contrast set. The contrast can change according to the room temperature. The allowed range is from 0 to 9.
- (POS. 9.3) **KeyBoard Timeout Time** [Disp. time=s xxx] **AL1** [KBTMT]
This function set display/keyboard inactivity. The set values are from 020 to 255 second.
- (POS. 9.4) **Display refresh Frequency** [D.rate=Hz xx] **AL1** [DISRF]
Frequency of the display data update. This parameter effects only the display layout and not the response time of the meter itself. The possible choices are: 1/2/5/10 Hz.
- (POS. 9.5) **Display function number** [Disp.fn= x] **AL2** [DISFN]
This function sets the display of the page making it visible when you start the display. For each display page is associated with a number that corresponds to the position.
- (POS. 9.6) **Display function lock** [Disp.lock= x] **AL2** [DLOKE]
This function locks the scrolling of the display pages selected by the setting. POS. 9.5 see page 29 function.
- (POS. 9.7) **Partial totalizer** [Part. tot= ON] **AL2** [PTOTE]
This function enables the display of partial totalizer in visualization pages
- (POS. 9.8) **Negative totalizer** [Neg. tot= ON] **AL2** [NEGTE]
This function enables the display of negative totalizer in visualization pages
- (POS. 9.9) **Net totalizer** [Net. tot= ON] **AL2** [NVTTE]
This function enables the display of net totalizer in visualization pages
- (POS. 9.10) **Date and Time** [Disp.Date= ON] **AL2** [DATDE]
This function enables the display of date and time in visualization pages
- (POS. 9.11) **Quick start menu** [Quick start= ON] **AL2** [QSTME]
This function enables the quick start menu.

MENU 10 - DATA LOGGER

(POS. 10.1) Data logger enable	[D.logger en= /OFF]	AL3	[DLOGE]
This function enables data logger.			
The following functions are activated by [D.loder en= ON]			
(POS. 10.2) Unite of Measure	[Meas. units= ON]	AL3	[DLUME]
Measure unit recording enable			
(POS. 10.3) Field separator character	[Field separ.= ;]	AL3	[DLFSC]
This function will set the separator character between data logger data.			
(POS. 10.4) Decimal Separator Char.	[Decim.separ.= .]	AL3	[DLDSC]
This function will set the separator character between data logger number value.			
(POS. 10.5) Sample Interval	[Interv.= xx:xx:xx]	AL3	[DLGSI]
Sampling interval. This function set the log frequency. [Interv.= Hours : Minutes: Seconds]			
(POS. 10.6) Total direct totalizer	[Log T+= ON]	AL3	[DTTPE]
Enable logging of total direct totalizer.			
(POS. 10.7) Partial direct totalizer	[Log P+= ON]	AL3	[DTPPE]
Enable logging of partial direct totalizer.			
(POS. 10.8) Total reverse totalizer	[Log T-= ON]	AL3	[DTTNE]
Enable logging of total reverse totalizer			
(POS. 10.9) Partial reverse totalizer	[Log P-= ON]	AL3	[DTPNE]
Enable logging of partial reverse totalizer			
(POS. 10.10) Total Net totalizer	[Log TN= ON]	AL3	[DLTNE]
Enable logging of total net totalizer			
(POS. 10.11) Partial Net totalizer	[Log PN= ON]	AL3	[DLPNE]
Enable logging of partial net totalizer			
(POS. 10.12) Log Flow rate in measure unit	[Log Q(UM)= ON]	AL3	[DFTUE]
Enable logging of flow rate in measure unit			
(POS. 10.13) Log Flow rate in percentage	[Log Q(%)= ON]	AL3	[DFPCE]
Enable recording of the flow rate as a percentage of full scale value set.			
(POS. 10.14) Alarm events	[Log AL.EV= ON]	AL3	[DALEE]
Enable logging of alarm events			

(POS. 10.15) Sensor test result Enable logging of sensor test results	[Log STR= ON]	AL6	[DSTRE]
(POS. 10.16) Board temperatures Enable logging of board temperature	[Log BTS= ON]	AL6	[DBTSE]
(POS. 10.17) Internal board voltages Enable logging of internal board voltage	[Log IBV= ON]	AL6	[DIBVE]
(POS. 10.18) Electrodes DC voltages Enable logging of electrodes DC voltage	[Log EDC= ON]	AL6	[DEDVE]
(POS. 10.19) Electrodes AC voltages Enable logging of electrodes AC voltage	[Log AEC= ON]	AL6	[DEAVE]
(POS. 10.20) Electrodes source impedance Enable logging of electrodes impedance	[Log EIZ= ON]	AL6	[DESIE]
(POS. 10.21) Sensor coils values Enable logging of sensor coils value	[Log SCV= ON]	AL6	[DSCVE]


MENU 10 - DATALOGGER: ONLY MCP FUNCTIONS

LoG All Information Enable Log all events information. This function save in the event file all MCP commands.	[MCP ONLY]	AL6	[LGAIE]
---	------------	------------	---------

USING DATA LOGGER BY MCP INTERFACE


Data are stored on micro SD card; the organization is based on "tree-structure": the system create a daily folder where it save events and data logger . The data can be downloaded by MCP interface.

MCP INTERFACE

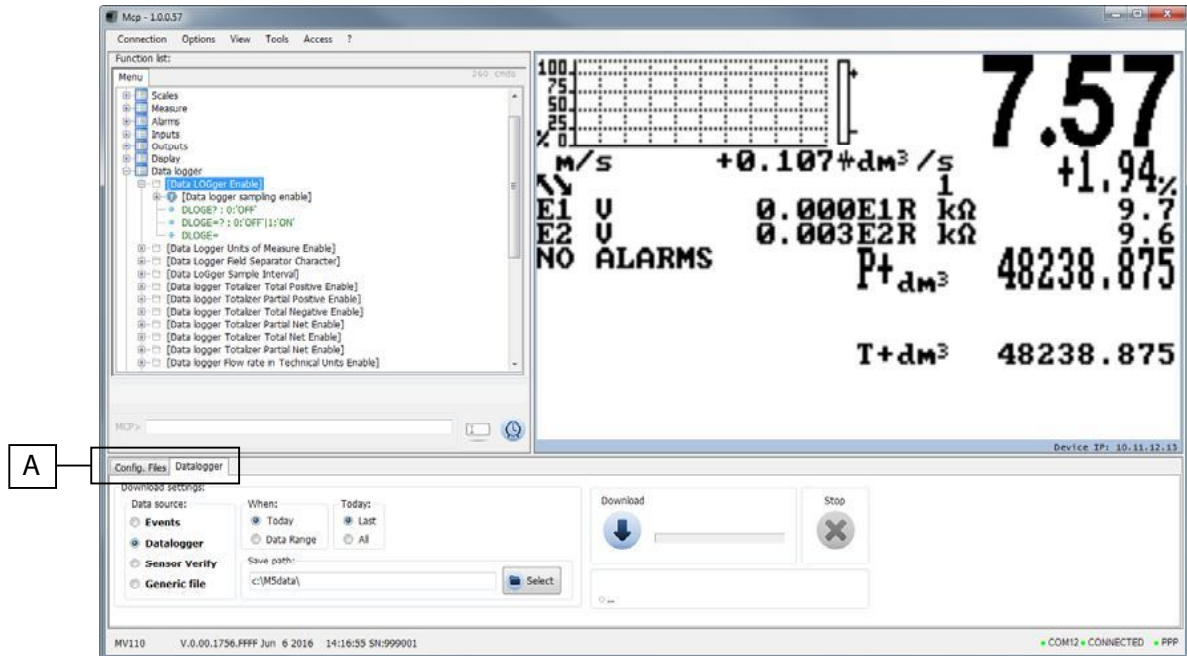

Click tab-control data logger to view files.

The sampling data backup depends on the value set by the POS function 10.4 page 25.

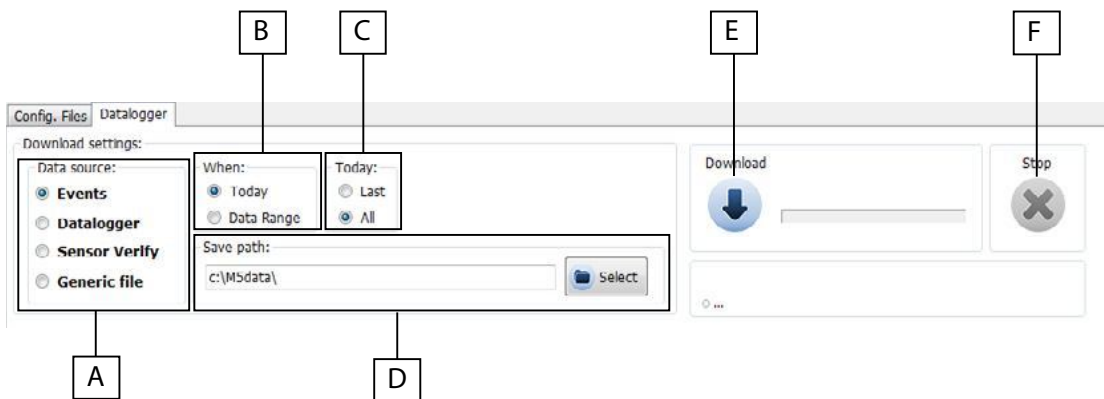

A=Data source

Events: Save the file system events (Example F-RAM hardware data [WORKING AREA] [SUCCESSFULLY LOADED])

Data logger: Save files of the enabled data logger function.

Sensor Verify: data logged by BIV function

Generic file:

B=When

Today; It indicates the download file for the current day

Data range; this option allows you to select the date range for download.

C=Today

Last; this option allows to download the latest files, recorder after the last download

All; this option allows the download of all the current day of the file

D=Save path:

This option allows you to save files to the folder on your PC


E=Download:

Button to start the download process

F=Stop:

Button to stop the download process

Example: Download Events

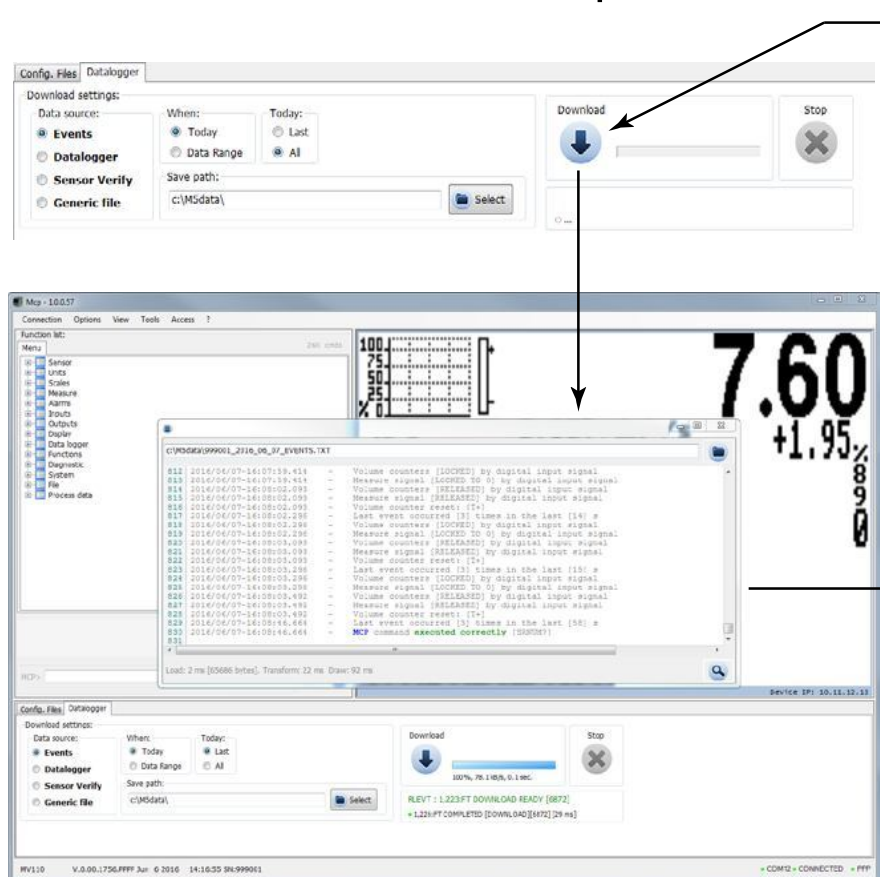

Per scaricare tutti gli eventi del giorno odierno in una cartella specifica, settare i seguenti parametri come segue:

- Data source:** Events
- When:** Today
- Today:** All
- Save path:** C:/.....

Impostati i parametri cliccare il tasto Download.

Terminato il Download, viene visualizzata una finestra contenente la lista degli eventi in data odierna. Il file viene salvato in formato txt nella cartella specificata per il download.

Example: Download Data Logger

Note: it is recommended the date synchronization between converter and PC to perform correctly the events and logger reading operations.



Per scaricare tutti gli eventi del giorno odierno in una cartella specifica, settare i seguenti parametri come segue:

Data source: Events

When: Today

Today: All

Save path: C:/.....

Impostati i parametri premere il tasto Download.

View downloaded files setting download data logger.

Note: The fields are in a fixed position, regardless if the above fields are active or not. The disabled fields are empty (delimited by the separator but without data).

N° Record. View progressively the number of registered records.	A NRECORD n°	1 0
Date. The recording date viewing for each record.	B DATE dd/mm/yy	1 00/00/00
Hours. Time recording viewing for each record.	C HOURS 00:00:00 hms	1 00:00:00 hms
Total positive totalizer value. Form Fields when the send flag is active on the totalizer T+.	D T+ UIM 0 hms	1 0 hms
Partial positive totalizer value. Form Fields when the send flag is active on the totalizer P-.	E P- UIM 0 hms	1 0 hms
Total negative totalizer value. Form Fields when the send flag is active on the totalizer T-.	F T- UIM 0 hms	1 0 hms
Partial negative totalizer value. Form Fields when the send flag is active on the totalizer P-.	G P- UIM 0 hms	1 0 hms
Total net totalizer value. Form Fields when the send flag is active on the totalizer TN.	H TN UIM 0 hms	1 0 hms
Partial net totalizer value. Form Fields when the send flag is active on the totalizer PN	I PN UIM 0 hms	1 0 hms
Flow rate. Form Fields present when the send flag is on the flow in units of measurement.	J UIM FLOWRATE 0 hms	1 0 hms
Flow rate %. Form fields present when the flag of alarm recording is active (only N ° of present total alarms)	K UIM FLOWRATE % 0 %	1 0 %
N ° active alarms. Form fields present when the flag of alarm recording is active (only N ° of present total alarms)	L UIM NACTIVE-ALARM AL 0	1 0
Loss of current measured during insulation test. Available value when recording the sensor test data is active.	M UIM CPII 0 ms	1 0 ms
Time rise A. Available value when recording the sensor test data is active.	N UIM TIRISE A 0 ms	1 0 ms
Time rise B. Available value when recording the sensor test data is active.	O UIM TIRISE B 0 ms	1 0 ms
Sensor test error code. Available value when recording the sensor test data is active.	P UIM CETS ERR 0	1 0

Visualization of downloaded file. Access Level 2 (diagnostic level) is required in order to download this type of file.

Voltage measured on electrode E1. Form fields when is active the recording of data on the input voltage (diagnostic value).	V 0	AD AE U.I. E1V
Voltage measured on electrode E2. Form fields when is active the recording of data on the input voltage (diagnostic value).	V -0.023	AF AG U.I. EZV
Differential voltage between the two electrodes. Form fields when is active the recording of data on the input voltage (diagnostic value)	V 0	AH AI U.I. D0(E1-E2)
Common mode voltage in the electrodes. Form fields when is active the recording of data on the input voltage (diagnostic value).	V 0	AJ AK U.I. V0(E1+E2)/2
Noise at low frequency measured on the electrodes. Form fields when is active the recording of data on the input signal noise levels (diagnostic value).	V 0	AL AM U.I. CMLFNOISE
Differential low frequency noise measured on the electrodes. Form fields when is active the recording of data on the input signal noise levels (diagnostic values).	V 0	AN AO U.I. DIFLFNOISE
Low-frequency noise measured input ADC. Form fields when is active the recording of data on the input signal noise levels (diagnostic values).	mV 0	AP AQ U.I. ADCLFNOISE
High frequency noise measured input ADC. Form fields when is active the recording of data on the input signal noise levels (diagnostic values).	mV 0	AR AS U.I. ADCHFNOISE
Measured equivalent resistance on the electrode 1. Form fields when is active the recording of data on the electrode resistance measurements (diagnostic values).	kOhm 0	AT AU U.I. E1R
Measured equivalent resistance on the electrode 2. Form fields when is active the recording of data on the electrode resistance measurements (diagnostic values).	kOhm 0	AV AW U.I. E2R
Coils excitation current. Form fields when is active the recording of data related to the sensor excitation circuit measures (diagnostic value)	mA 0	AX AY U.I. EXCITATIONCUR
Measured resistance of the excitation circuit (coil + cable). Form fields when is active the recording of data relative to the sensor excitation circuit measures (diagnostic values).	ohm 0	AZ BA U.I. RCOLS
Temperature measured on the sensor coils (indirect measurement). Form fields when the data transmission flag is active relative to the sensor excitation circuit measures (diagnostic values).	°C 0	BB BC U.I. TCOLS
Temperature T1 (sheet sensor 1). Form fields when the data transmission flag on board the internal temperature measurement is active (diagnostic values).	°C 0	BD BE U.I. T1
Temperature T2 (sheet sensor 2). Form fields when the data transmission flag on board the internal temperature measurement is active (diagnostic values).	°C 0	BF BG U.I. T2
CPU temperature. Form fields when the data on the card's internal power supply voltage measurements flag is ON (diagnostic value).	°C 0	BH BI U.I. TCPU
Primary power supply of CPU. Form fields when the data on the card's internal power supply voltage measurements flag is ON (diagnostic value).	V 0	BJ BK U.I. VCPU
Positive supply voltage of analog circuits. Form fields when the data on the card's internal power supply voltage measurements flag is ON (diagnostic values).	V 0	BL BM U.I. AVCC+
Negative supply voltage of the analog circuits. Form fields when the data on the card's internal power supply voltage measurements flag is ON (diagnostic values).	V 0	BN BO U.I. AVCC-
Voltage measured on the battery B1 (NOT rechargeable battery). Fields when the data on the card's internal power supply voltage measurements flag is ON (diagnostic values).	V 0	BP BQ U.I. BATT1V
Voltage measured on the battery B2 (or rechargeable battery). Form fields when the data on the card's internal power supply voltage measurements flag is ON (diagnostic values).	V 0	BR BS U.I. BATT2V
% Battery charge. Form fields when the data on the card's internal power supply voltage measurements flag is ON (diagnostic values).	% 0	BT BU U.I. %BATTERYCHARG

Example: Sensor Verify

The function "Sensor Verify" creates the "STESTLOG.CSV" file, according to the following conditions:

- 1) Activate the SDC / RTC option in group "HW Config" (by factory see the order code)
- 2) Activate the "BIV" in the group "PRODUCT CODE" (by factory see the order code)
- 3) Activate the "Sens.verify" function in the "Sensor" menu

Activated such conditions, the converter will perform every hour a measure of sensor's parameters and record a line of the file "STESTLOG.CSV"; it is possible even a manual verification by the command "sens.verify" on the menu "Diagnostic" or through the MCP command "SVERC".



Per scaricare tutti gli eventi del giorno odierno in una cartella specifica, settare i seguenti parametri come segue:

Data source: Events


When: Today

Today: All

Save path: C:/.....

Impostati i parametri premere il tasto Download.

Example: Generic File

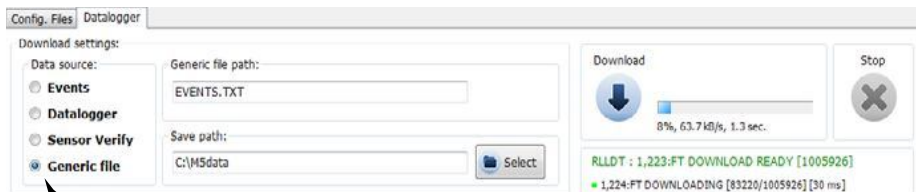

Questa Funzione permette di selezionare un file contenuto nella memoria SD del convertitore e scaricarlo. Nella sezione "Generic file path" indicare il nome del file contenuto nella SD e indicare in "Save path" il percorso di salvataggio del file stesso. Impostati tali valori procedere con il download del file cliccando sul tasto "download".

MENU 11 - FUNCTION

The following functions are activated by first pressing the "ENTER" and then the "ESC" when the screen appears "confirm" to start the function.

(POS. 11.1) <i>Total direct totalizer reset</i>	[T+ RESET= ON]	AL3	[VTTPR]
--	-----------------------	------------	----------------

Reset total direct totalizer for direct flow rate (+)

(POS. 11.2) <i>Partial direct totalizer reset</i>	[P+ RESET= ON]	AL3	[VTPPR]
--	-----------------------	------------	----------------

Reset total partial totalizer for direct flow rate (+)

(POS. 11.3) <i>Total reverse totalizer reset</i>	[T- RESET= ON]	AL3	[VTTNR]
---	-----------------------	------------	----------------

Reset total reverse totalizer for direct flow rate (-)

(POS. 11.4) <i>Partial reverse totalizer reset</i>	[P- RESET= ON]	AL2	[VTPNR]
---	-----------------------	------------	----------------

Reset partial reverse totalizer for direct flow rate (-)

(POS. 11.5) <i>Load factory default sensor</i>	[Load sens.f.def= ON]	AL3	[LFDSD]
---	------------------------------	------------	----------------

This function resets the parameters of the sensor factory default. To Load the saved files see function (11.7).

(POS. 11.6) <i>Load factory default converter</i>	[Load conv.f.def= ON]	AL3	[LFDSD]
--	------------------------------	------------	----------------

This function resets the parameters of the converter factory default. o Load the saved files see function (11.8).

(POS. 11.7) <i>Save sensor factory default</i>	[Save sens.f.def= ON]	AL6	[SFDSD]
---	------------------------------	------------	----------------

This function save the parameters of the sensor factory default.

(POS. 11.8) <i>Save convert factory default</i>	[Save conv.f.def= ON]	AL6	[SFDSD]
--	------------------------------	------------	----------------

This function loads the data from a converter to another.

(POS. 11.9) <i>Calibration Immediate</i>	[Calibration]	AL5	[CALIC]
---	----------------------	------------	----------------

Perform manually a board's calibration. Press Enter and the message " EXECUTE?" will be visualized on the display then press long the key Enter to proceed. Press any other key to delete the operation.

If the sensor table is valid, the calibration is performed also when one of the following parameter has been change:

1. SENSOR DIAMETER -> Menu Sensor1
2. SENSOR MODEL -> Menu Sensor1
3. Exc. CURRENT -> Menu Sensor1
4. S. Freq. -> Menu Sensor1

To check the calibration status, active or inactive, type the command MCP Calic? and check as follows:

- CALIC = 1 calibration in progress
- CALIC = 0 calibration terminated

MENU 11 - FUNCTION: ONLY MCP FUNCTIONS

<i>Save sensor reference data</i>	[MCP ONLY]	AL4	[SRFDS]
--	-------------------	------------	----------------

Save conv.f.def= ON. "meter data" page 70

MENU 12 - DIAGNOSTIC

(POS. 12.1) *Self Test Diagnostic* [Self Test] **AL3** [ATSIC]

Meter auto-test function. This function stops the normal functions of the meter and performs a complete test cycle on the measure input circuits and on the excitation generator. To activate this function, after select it, push key Enter, at the question: "CONFIRM EXEC.?" Long Push the same key to start auto-test, or any other key for delete operation. At the end of operation the converter will revert to one of the initial visualization pages. This function is automatically performed when switching on the device. This function restarts the converter.

(POS. 12.2) *Test display* [Test display] **AL1** NO MCP COMMAND

This function allows to do a physical test the graphic display. During this operation, 4 sequences are displayed to test the correct functioning of the device.

(POS. 12.3) *Sensor verify* [Sens. verify] **AL3** [SVERC]

This function perform a manual sensor verification (if BIV is active)

(POS. 12.4) *Flow rate simulation* [Flow sim=ON] **AL3** [MSIEN]

Flow rate simulation enabling. With this function it is possible to generate an internal signal that simulates the flow rate, allowing the outputs and all the connected instruments test. After enabling it, a '▲▼' appears in the top left of the screen and the flow rate simulation can be:

- set: by pushing the key Enter from one of visualization pages, to set the required % flow rate (Fl. rate=%) and the same key to confirm the value;
- finished: by pushing the key Enter from visualization pages and then by long pushing the same key.

(POS. 12.5) *Diagnostic measures* [Display measures] **AL5** DMVLS

This Function shows the values of the various internal parameters as listed below :

```

UCPU:U          5.01  LFN_COM:U      0.0000
UPS:U           5.41  LFN_DIF:U      0.0000
VUSB:U          4.53  HFN_ADC:BU     0.0000
+AVCC:U         +10.1 LFN_ADC:BU     0.0001
-AVCC:U          -9.9  MEAS_NB:BU     0.0000
VBATT:U         0.000  CAL_I:MU       16.5000
IBATT:A         0.000  CAL_II:MU      16.7700
VIN1:U          -8.071  CAL_G:MU       16.3300
VIN2:U          -8.065  CAL_O:MU       16.3300
VIN_C:U         -8.068  CAL_C:MU       16.3300
VIN_D:U         -0.006  CAL_R0:MU      16.3300
C_C:MA         25.00  CAL_R1:MU      16.3300
C_U:U           5.00  CAL_R2:MU      16.3300
C_UPK:U         5.50  CAL_R3:MU      16.3300
C_R:Q          201.9  SVS_F:MHz      0.0000
C_PWR:W         0.126  CURR_K:MU      0.0000
C_T:°C         -      PROC1:%%       46.0000
C_RT:MS        0.00  PROC2:%%       7.0000
C_LK:MA        0.000  PROC3:%%       3.0000
C_ST:           1     PROC4:%%       29.0000
S_UER_RSLT:    0000  PROC5:%%       12.0000
E1R:kΩ         0.0   CPU_T:°C       +33.12
E2R:kΩ         0.0
    
```

(POS. 12.6) *Disp, comm. Diagnostic values* [Disp. comm. vars] **AL5** DCVLS

Create a list of diagnostic values on the instrument communication.

```

PPP link status → PPP_STATUS: NETW E_IP_HDR5: 3
MCPI socket status → MCPI_S: ESTABLISH E_IP_HDR6: 33
RxCNT: 1477149 E_IP_HDR7: 0000
TxCNT: 6515456 E_IP_HDR8: 0000
E_SR_LINK: 0 E_IP_HDR9: 0000
E_PAKLEN: 0 E_TCPHDR1: 0000
E_NETLAYR: 0 E_TCPHDR2: 0000
E_TSPLAYR: 0 E_UDPHDR1: 0000
E_ARPHDR1: 0 E_UDPHDR2: 0000
E_ARPHDR2: 0 E_UDPHDR3: 920
E_IP_HDR1: 0 E_ICMPHDR: 0
E_IP_HDR2: 0
E_IP_HDR3: 0
E_IP_HDR4: 0
    
```

Following are the states for the PPP link and MCPI to connect the device.

PPP link status:

- "UNDT" = undetermined
- "DEAD" = dead, link down, persistent condition
- "LCP" = LCP phase, transition condition
- "AUTH" = Authentication phase, transition condition
- "IPCP" = IP and DNS addressess assign phase, transition condition
- "NETW" = network established (normal persistent condition when the link is UP)
- "TERM" = link termination request, transition condition

MCPI link status:


- "CLOSED" = socket closed
- "ACCEPT" = socket awaiting for new connection
- "ESTABLISH" = link established
- "CLS_WAIT" = waiting for closure
- "LAST_ACK" = lask ACK sent
- "FIN_WAIT" = (see TCP/IP RFC documentation)
- "TIME_WAIT" = (see TCP/IP RFC documentation)

(POS. 12.7) Display graphs

[Display graphs]

AL5 NO MCP COMMAND

This function displays graphs of input Z, C. current, C. Volt, C.Load, Input 1, Input 2, Input1-Input 2, Analog to Digital Converter.

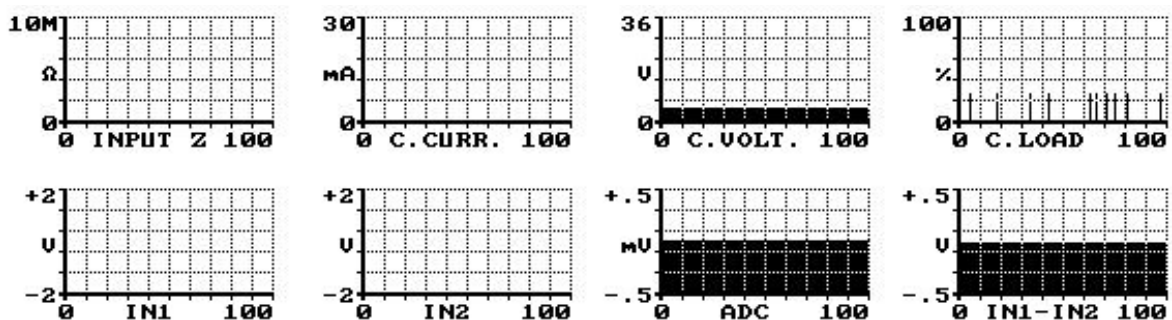

(POS. 12.8) Generic sensor set

[Gen.sens. set]

AL5 NO MCP COMMAND

Automatic finding of a parameter set for a generic sensor.

MENU 13 - SYSTEM

(POS. 13.1) Daylight saving time [Dayl. Saving= ON] **AL2** [DYSTE]
Daylight saving time change.

(POS. 13.2) Time zone [Time zone=h+xx.xx] **AL2** [TZONE]
Set time for geographic area

(POS. 13.3) Date and Time [xxxx/xx/xx-xx:xx] **AL2** [DTIME]
Set to system date and time

(POS. 13.4-5-6-7-8-9) Access level n° code [Ln xxxxxxxx] **---** [L1ACD]-> [L6ACD]

This function enables or disables, for each access level code, the main menu functions.
Each level unlocks the functionality of the lower level. (Function 13.10 Restricted access level see page 30)
L1 code= ***** Access level value code 1 L4 code= ***** Access level value code 4
L2 code= ***** Access level value code 2 L5 code= ***** Access level value code 5
L3 code= ***** Access level value code 3 L6 code= ***** Access level value code 6

(POS. 13.10) Restricted access level [Restr. access= ON] **AL6** [RSARE]
Enable Or disable access level code. If active displays only the functions related to the level entered access.


IP ADDRESS SETTING (13.11-12-13)

(POS. 13.11) Device IP address [XXX.XXX.XXX.XXX] **AL3** [DIPAD]
Device IP network edress

(POS. 13.12) Client IP address [XXX.XXX.XXX.XXX] **AL3** [CIPAD]
Client IP network adress

(POS. 13.13) Network mask [XXX.XXX.XXX.XXX] **AL3** [NETMS]
Network mask.

Caution: Changes to the functions of the points 13.11-13.12-13.13 are enabled after the drive device restart (see function 12.1 Self test for restart converter).

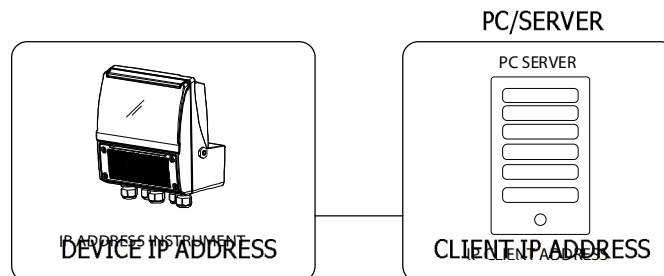


(POS. 13.14) Coefficient KT [KF=X.XXXXX] **AL6** [CFFKT]
Gain correction coefficient (calculated automatically)

(POS. 13.15) Coefficient KS [KF=X.XXXXX] **AL5** [CFFKS]
Correction coefficient constant instrumental

(POS. 13.16) Coefficient KR	[KR=X.XXXXX]	AL5	[CFFKR]
------------------------------------	---------------------	------------	----------------

Correction coefficient constant instrumental

DIGITAL ANALOG CONVERTER (Correction Parameters)(13.17-18-19-20)

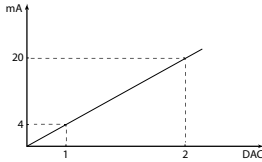

The diagram shows how the DAC4-20mA parameters are setup. The DAC1 value corresponds to 4 mA corresponding to a zero flow rate, while the value of 20mA corresponds to a 100% of the flow rate.

(POS. 13.17) DAC1 4mA	[DAC1 4mA =XXXXX]	AL5	[C1CP1]
------------------------------	--------------------------	------------	----------------

DAC1 out 4mA calibration point. (current output1 calibration point 1)

(POS. 13.18) DAC1 20mA	[DAC1 20mA=XXXXX]	AL5	[C1CP2]
-------------------------------	--------------------------	------------	----------------

DAC1 out 20mA calibration point. (current output1 calibration point 2)

(POS. 13.19) DAC2 4mA	[DAC1 20mA=XXXXX]	AL5	[C2CP1]
------------------------------	--------------------------	------------	----------------

DAC2 out 4mA calibration point. (current output2 calibration point 1)

(POS. 13.20) DAC2 20mA	[DAC2 20mA=XXXXX]	AL5	[C2CP2]
-------------------------------	--------------------------	------------	----------------

DAC2 out 20mA calibration point (current output2 calibration point 2)


(POS. 13.21) Stand-BY	[STAND-BY]	AL3	[SSTBY]
------------------------------	-------------------	------------	----------------

Enable the converter standby state. It is enable by selecting chargeable battery in hw confing.

(POS. 13.22) Firmware Update	[FW update]	AL4	[FWUPD]
-------------------------------------	--------------------	------------	----------------

Enable firmware update. The firmware can be upload to the SD card (name.file). MCP interface is activated by the command FWUPD = name.file

MENU 13 - SYSTEM: ONLY MCP FUNCTIONS

Unique Identity KEY	[MCP ONLY]	AL0	[UIKEY]
Device Unique Identity key			
HardWare SET	[MCP ONLY]	AL0	[HWSET]
Device hardware configuration			
HardWare CODE	[MCP ONLY]	AL0	[HWCOD]
Device hardware code			
Calibr. Exec. status Memory	[MCP ONLY]	AL6	[CALXM]
Calibration Execution status Memory. This function checks the instrument's internal calibration status. CALXM=1 instrument calibrated correctly CALXM=0 Invalid calibration / Calibration not completed (invalid calibration (if the function is zero, start the calibration function, MCP CALIC command).			
RTC Real time clock	[MCP ONLY]	AL2	[RTCAC]
RTC is used to set a correction factor for the internal clock. For setting the correction date and time with MCP press 			
Function CODE Selection	[MCP ONLY]	AL0	[FCODS]
Select the function code			
FuNction Enable State Selection	[MCP ONLY]	AL6	[FNESS]
Select the enable state of function			
All FuNctions State Selection	[MCP ONLY]	AL6	[AFNSS]
Select enable state of ALL function			
Quick Start FuNction Selection	[MCP ONLY]	AL6	[QSFNS]
Select function for quick start menu			
Quick Start All Functions Selection	[MCP ONLY]	AL6	[QSAFS]
Select ALL function converter for quick start menu.			
Quick start function Status LiST	[MCP ONLY]	AL6	[QSLST]
List quick start group functions			
Function enable Status LiST	[MCP ONLY]	AL6	[FSLST]
List enable status of functions			

<i>Volume Totalizer Total Negative Set</i>	[MCP ONLY]	<i>AL4</i>	[VTTNS]
Totaliz.T- value set			
<i>Volume Totalizer Partial Negative Set</i>	[MCP ONLY]	<i>AL4</i>	[VTPNS]
Totaliz.P- value set			
<i>Volume Total Positive Overflow Set</i>	[MCP ONLY]	<i>AL4</i>	[VTPOS]
Totaliz.T+ overflow value set			
<i>Volume Partial Positive Overflow Set</i>	[MCP ONLY]	<i>AL4</i>	[VPPOS]
Totaliz.P+ overflow value set			
<i>Volume Total Negative Overflow Set</i>	[MCP ONLY]	<i>AL4</i>	[VTNOS]
Totaliz.T- overflow value set			
<i>Volume Partial Negative Overflow Set</i>	[MCP ONLY]	<i>AL4</i>	[VPNOS]
Totaliz.P- overflow value set			
<i>CPU MaX.recorded temperature</i>	[MCP ONLY]	<i>AL6</i>	[CPUMX]
CPU max.recorded temperature			
<i>CPU MiN.recorded temperature</i>	[MCP ONLY]	<i>AL6</i>	[CPUMN]
CPU min.recorded temperature			
<i>Board T1 MaX.recorded temperature</i>	[MCP ONLY]	<i>AL6</i>	[BT1MX]
T1 max.recorded temperature			
<i>Board T1 MiN.recorded temperature</i>	[MCP ONLY]	<i>AL6</i>	[BT1MN]
T1 min.recorded temperature			
<i>Board T2 MaX.recorded temperature</i>	[MCP ONLY]	<i>AL6</i>	[BT2MX]
T2 max.recorded temperature			
<i>Board T2 MiN.recorded temperature</i>	[MCP ONLY]	<i>AL6</i>	[BT2MN]
T2 min.recorded temperature			
<i>Calibration OFset Register 0</i>	[MCP ONLY]	<i>AL6</i>	[COFR0]
Calibration offset register 0			
<i>Calibration OFset Register 1</i>	[MCP ONLY]	<i>AL6</i>	[COFR1]
Calibration offset register 1			

Calibration GAin Register 0	[MCP ONLY]	AL6	[CGAR0]
Calibration gain register 0			
Calibration GAin Register 1	[MCP ONLY]	AL6	[CGAR1]
Calibration gain register 1			
Calibration GAin Register 2	[MCP ONLY]	AL6	[CGAR2]
Calibration gain register 2			
Calibration GAin Register 3	[MCP ONLY]	AL6	[CGAR3]
Calibration gain register 3			
Calibration GAin Register C	[MCP ONLY]	AL6	[CGARC]
Calibration gain register C			

MENU 14 - FILE (ONLY MCP)

<i>File Transfer ABOrt</i>	[MCP ONLY]	<i>AL2</i>	[FTABR]
Abort the current File Transfer			
<i>File Transfer STAtE</i>	[MCP ONLY]	<i>AL0</i>	[FTSTA]
Show the File Transfer state			
<i>Read Last EVenTs</i>	[MCP ONLY]	<i>AL2</i>	[RLEVT]
Read the latest system events			
<i>Read All EVenTs</i>	[MCP ONLY]	<i>AL2</i>	[RAEVT]
Read all current system events			
<i>Read Last Logged DaTa</i>	[MCP ONLY]	<i>AL2</i>	[RLLDT]
Read the latest logged data			
<i>Read All Logged DaTa</i>	[MCP ONLY]	<i>AL2</i>	[RLLDT]
Read all current logged data			
<i>Read Last Sensor Verify Data</i>	[MCP ONLY]	<i>AL2</i>	[RLSVD]
Read the latest sensor ver. data			
<i>Read All Sensor Verify Data</i>	[MCP ONLY]	<i>AL2</i>	[RASVD]
Read all sensor verify data			
<i>File SEND</i>	[MCP ONLY]	<i>AL2</i>	[FSEND]
Set file name for read operation			
<i>File ReCeivE</i>	[MCP ONLY]	<i>AL5</i>	[FRCVE]
Set file name for write operation			
<i>File ReCeive APpend mode</i>	[MCP ONLY]	<i>AL5</i>	[FRCAP]
Set file name for write-append			
<i>File OFFSet position</i>	[MCP ONLY]	<i>AL2</i>	[FOFFS]
Set file offset position			
<i>ConFiGuration file WRite</i>	[MCP ONLY]	<i>AL2</i>	[CFGWR]
Save the configuration to a file			
<i>ConFiGuration file ReaD</i>	[MCP ONLY]	<i>AL2</i>	[CFGRD]
Read the configuration from file			

<i>FuNction list file WRite</i>	[MCP ONLY]	<i>AL2</i>	[FNCWR]
Save the functions list to file			
<i>Function Enable Status WRite</i>	[MCP ONLY]	<i>AL6</i>	[FESWR]
Save function enable status to file			
<i>Quick Start function Status WRite</i>	[MCP ONLY]	<i>AL6</i>	[QSSWR]
Save quick start function enable.			

MENU 15 - PROCESS DATA (ONLY MCP)

<i>OUTput 1 Set</i>	[MCP ONLY]	<i>ALO</i>	[OUT1S]
Set value for digital output 1			
<i>OUTput 2 Set</i>	[MCP ONLY]	<i>ALO</i>	[OUT2S]
Set value for digital output 2			
<i>Digital INput 1 Status</i>	[MCP ONLY]	<i>ALO</i>	[DIN1S]
Digital input 1 status read			
<i>Flow Rate Full Scale in chosen Units</i>	[MCP ONLY]	<i>ALO</i>	[FRFSU]
F.rate f.scale in chosen units			
<i>Flow Rate Value PerCentage</i>	[MCP ONLY]	<i>ALO</i>	[FRVPC]
Flow rate value in percentage			
<i>Flow Rate Value Percentage without cut-off</i>	[MCP ONLY]	<i>ALO</i>	[FRVPX]
F.rate in perc.without cut-off			
<i>Flow Rate Value Binary without cut-off</i>	[MCP ONLY]	<i>ALO</i>	[FRVBX]
F.rate in binary.without cut-off			
<i>Flow Rate Value Technical Unit</i>	[MCP ONLY]	<i>ALO</i>	[FRVTU]
F.rate value in unit of measure			
<i>Volume Totalizer Total Positive Value</i>	[MCP ONLY]	<i>ALO</i>	[VTTTPV]
Totaliz.T+ read value			
<i>Volume Totalizer Partial Positive Value</i>	[MCP ONLY]	<i>ALO</i>	[VTPPV]
Totaliz.P+ read value			
<i>Volume Totalizer Total Negative Value</i>	[MCP ONLY]	<i>ALO</i>	[VTTNV]
Totaliz.T- read value			
<i>Volume Totalizer Partial Negative Value</i>	[MCP ONLY]	<i>ALO</i>	[VTPNV]
Totaliz.P- read value			
<i>Volume Totalizer Total Positive Overflow</i>	[MCP ONLY]	<i>ALO</i>	[VTTPO]
Totaliz.T+ number of overflows			
<i>Volume Totalizer Partial Positive Overflow</i>	[MCP ONLY]	<i>ALO</i>	[VTPPO]
Totaliz.P+ number of overflows			
<i>Volume Totalizer Total Negative Overflow</i>	[MCP ONLY]	<i>ALO</i>	[VTTNO]
Totaliz.T- number of overflows			

<i>Volume Totalizer Partial Negative Overflow</i>	[MCP ONLY]	<i>ALO</i>	[VTPNO]
Totaliz.P- number of overflows			
<i>Board TeMPeratures</i>	[MCP ONLY]	<i>ALO</i>	[BTMPS]
Board temperatures			
<i>CPU temperature</i>	[MCP ONLY]	<i>ALO</i>	[CPUTP]
CPU temperature			
<i>Sensor CoiLs TemPerature</i>	[MCP ONLY]	<i>ALO</i>	[SCLTP]
sensor's coils temperature			
<i>LiQuid VELOCITY</i>	[MCP ONLY]	<i>ALO</i>	[LQVEL]
Liquid velocity			
<i>AVerAGe process data Samples Number</i>	[MCP ONLY]	<i>ALO</i>	[AVGSN]
N.of samples for averaged values			
<i>ALARM status</i>	[MCP ONLY]	<i>ALO</i>	[ALARM]
Active alarm(s) status			
<i>Sensor TeSt Result Code</i>	[MCP ONLY]	<i>ALO</i>	[STSRC]
Sensor test result code			
<i>Main power status</i>	[MCP ONLY]	<i>ALO</i>	[MPWRS]
Status of main power supply			
<i>INput RESistance</i>	[MCP ONLY]	<i>ALO</i>	[INRES]
Equivalent Input resistance			
<i>INput VoLTageS</i>	[MCP ONLY]	<i>ALO</i>	[INVLS]
Electrodes input voltages			
<i>System Battery Voltage</i>	[MCP ONLY]	<i>ALO</i>	[SBVLT?]
View battery voltage			
<i>System Battery Charge Status</i>	[MCP ONLY]	<i>ALO</i>	[SBCHS?]
View system battery charge status			
<i>Measure BUFFers</i>	[MCP ONLY]	<i>ALO</i>	[MBUFF]
Measure buffers data read			
<i>SEquence Number</i>	[MCP ONLY]	<i>ALO</i>	[SEQNB]
Sequence number			


METER DATA

This function allows the import of data from one converter to another up to level 4 included. The hardware configurations and the corresponding calibration values are not restored. The "data import" procedure can be performed **one time only**, since the directory, according to the board's SERIAL NUMBER, will be renamed.


OPERATING PROCEDURE TO CHANGE THE CONVERTER BOARD




Remove the 4 screws (see "MV110 construction" page10) to remove the main housing. Attention of any electrical cables.

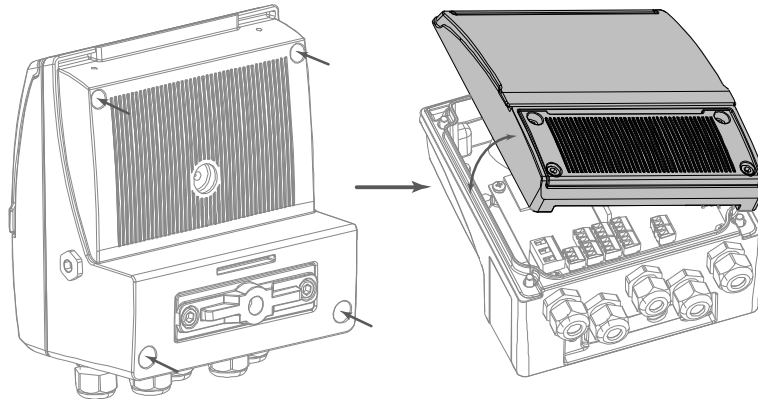

Remove the 4 screws (see "MV110 construction" page10) to remove the MV110 board. Attention of any electrical cables. Remove the SD card and insert the new MV110 board.

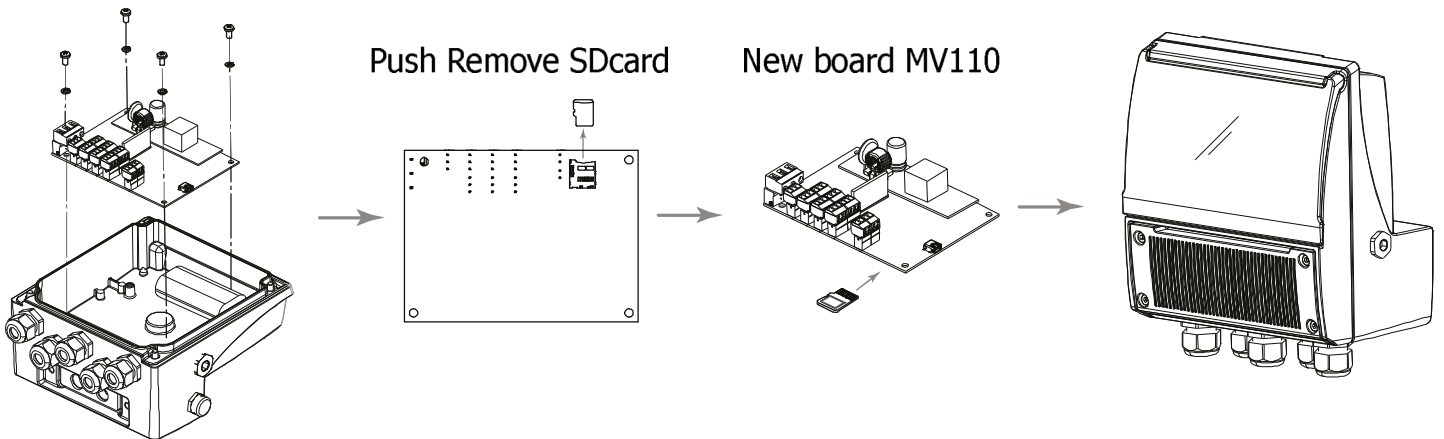

Assembled the card turn on the converter and enable [Save Conv. F. def.] function to restore data.

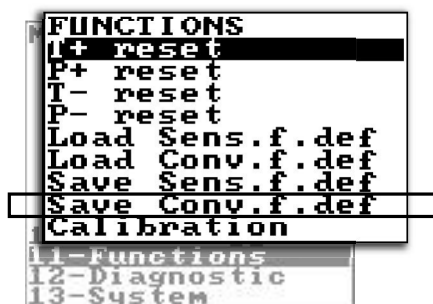

View function "11.8 Save converter factory default values" page 79

B.I.V. (BUILT-IN VERIFICATOR)

BIV, abbreviation for Built In Verificator, is available as option for MV110 converters and must be enabled by the manufacturer. It is also necessary that the SD card is activated to store saved data. The analysis of collected data performed by a dedicated IsoBIV software running on another device (PC). The simplicity of test procedures minimize the risk of handling errors; maximum safety and reliability thanks to the traceable factory calibration and internal references complement the safety by design principle with minimal failure rates
IsoBIV allows to create and print a report as validation of device functionality/measure error.

Operation and Conditions of Use.

The system is based on periodic measurements performed every hour or using a manual command (MCP command = SVERC). The sensor parameters are measured and compared with previously measured and stored reference values. Each time the system performs a series of measurements on the sensor and records them in a file called "STESTLOG.CSV", which resides in the main directory of the SD memory of the converter.

The sensor test can also be carried out without the active BIV system, but in this case only the presence of isolation losses and the overall good functioning of the sensor such the coil resistance, the excitation current and the rising times of the current within the generic limits that guarantee operation. Instead if BIV is active, the measurements are deeper and the measured values are tested by comparing them with a set of characteristic sensor parameters measured at the time of installation.

Saving Reference Values (Characteristic Parameters)

After sensor installation, the parameters that will be used as reference for the BIV system and the IsoBIV data analysis software must to be measured.

The characteristic values of the coil circuits are saved in the converter memory at the factory before to ship the instrument. For the reference measure of the electrodes circuits, there is a specific function that perform the measures of voltage and resistance at the installation site. This function is managed ONLY by the IsoBIV program, which through a simple wizard will set the converter to perform the measures in the specific measurement point where the meter is installed.

To activate BIV, these functions must be verified:

- [ASVFE=1]** : It enable the sensor's automatic test every hour. The ASVFE function in Menu 1 with access level 3 can be also activated using the instrument's display.

This feature can be enabled even if the SD card is not installed and if the BIV function is not active; in such a case the sensor file is NOT created and any alarms will be generated either if the data deviation from the reference data is outside the sesnor's limits.


Practically, in the absence of the necessary hardware permissions, this function is useful to test the insulation of the coils.

Opening and reading manually the files STESTLOG.CSV

The list below describes the steps for saving and reading STESTLOG.CSV file.

❑ OPEN INTERFACE STARTING THE PROGRAM MCP 


❑ FOLLOW THE STEPS HERE BELOW

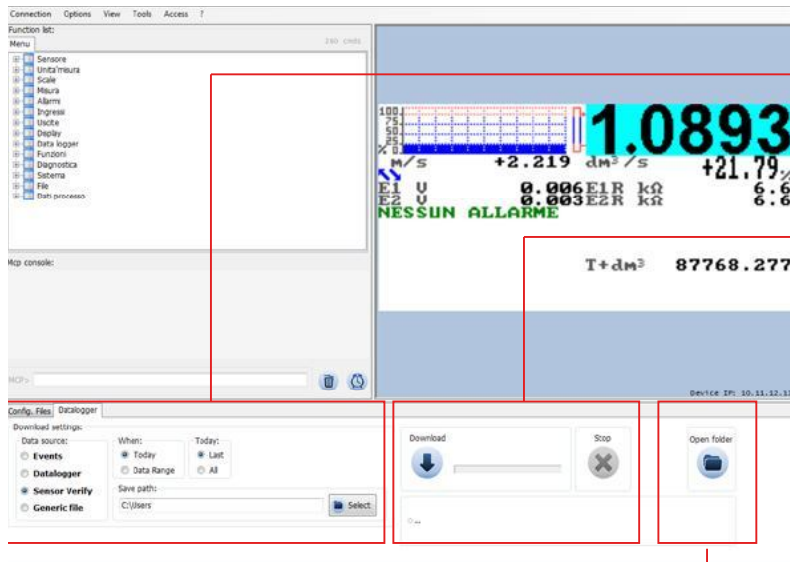

- 1
 - Select Sensor Verify
 - Choose the date or reference period of the which one wants to carry out the evaluation of the data
 - Choose the directory where to save the file
- 2
 - Press Download to download the file.
 - Press Download to download the file.
 - At the end of the download the stestlog.csv file will be automatically opened by the program

Search for the consultation of the files inside of the drive SD card.

Path structure for searching the files in the SD card of the converter

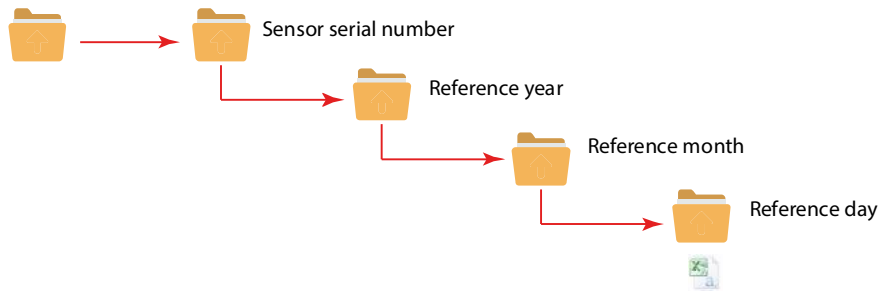

□ READING AND MEANING OF FILE STESTLOG.CSV



A	Registration Number
B	Data
C	Hour
D	Error code in hexadecimal format (0 = no error)
E	The temperature unit (degrees F or C) (#) (*)
F	CPU temperature
G	The unit of voltage CPU (V) (#)
H	Voltage measured on the electrode E1
I	The unit of voltage E1 (V) (#)
J	Reference voltage electrode E2
K	The unit of voltage E2 (V) (#)
L	Differential voltage E1-E2
M	The unit of voltage (V) (#)
N	Common mode voltage (E1 + E2) / 2
O	The unit of resistance (ohm) (#)
P	Resistance measured between E1 and the common
Q	The unit of resistance (ohm) (#)
R	Resistance measured between E2 and the common
S	The unit of voltage (V) (#)
T	Common mode noise at low frequency
U	The unit of voltage (V) (#)
V	Differential mode noise at low frequency
W	The unit of voltage (mV) (#)
X	Mode ADC noise at low frequency differential
Y	The unit of voltage (mV) (#)
Z	Mode ADC noise high frequency differential
AA	The unit of voltage (V) (#)
AB	Analog circuitry positive supply voltage
AC	The unit of voltage (V) (#)
AD	Negative supply voltage analog circuits
AE	The unit of current (mA) (#)
AF	Excitation current of the coils
AG	The unit of resistance (ohm) (#)
AH	Measurement of the sensor coil resistance
AI	The temperature unit (degrees F or C) (#) (*)
AJ	Temperature of the sensor coils
AK	The unit of current (mA) (#)
AL	The coil leakage current (insulation fault)
AM	Unit of measure of time (ms) (#)
AN	Rise time current phase A
AO	Unit of measure of time (ms) (#)
AP	Rise time current phase B

NOTE:

(#): The units are registered only if the appropriate function of the DATA LOGGER is active. Otherwise the field is empty.
 (*): The temperature values can be expressed in degrees F or C, depending on the drive configuration

Standard and internal check to the instrument limits


The measured data are compared with the reference values previously stored. The variation of different variable measured, shall be within the following range:

- Coil temperature (using resistance reading): within limits compatible with the lining material
- Current up times: change% detected resistance coils + 10% (tolerance range)
- Resistance between electrodes and common: between 0.3 and 3.0 times the reference early strength
- Leakage current (insulation test): less than 0.1 mA

If the values deviate beyond these limits it is generated and displayed a coded alarm. The alarm remains active and visible on the display until next test (max. 1 hour).

SOFTWARE ISOBIV

The IsoBiv software allows analysis and processing of STESTLOG.CSV file data.

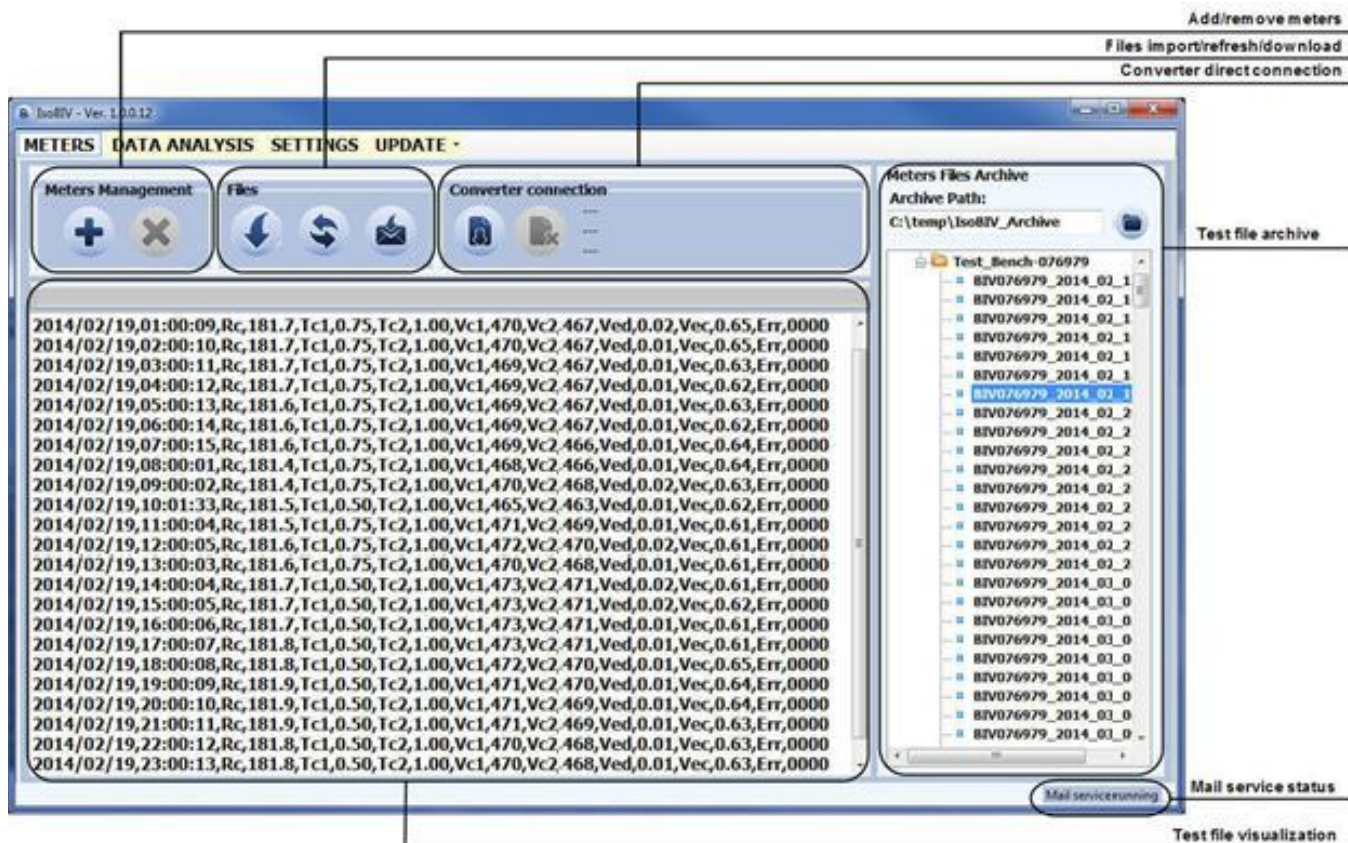

For further information, refer to the manual of ISOBIV software.

ALARM MESSAGES (CAUSES AND ACTIONS TO BE TAKEN)

MESSAGE	CAUSES	ACTION TO TAKE
NO ALARMS	All works regularly	---
[000] SYSTEM RESTART	---	---
[001] INTERNAL PS FAIL	Internal supply voltage error	Contact the service
[002] CLOCK NOT SET	System Clock not set	Set the system clock from the converter menu 13 (see also MCP function).
[003] SD CARD FAILURE	SD card not found or unreadable	check and/or replace SD card
[005] F-RAM ERROR	Error writing / reading Flash-RAM	Contact the service
[006] EXCITATION ERROR	The excitation of the sensor coils resulting from cable is interrupted	Check the connecting cables to the sensor.
[007] SIGNAL ERROR	The measure is strongly effected by external noise or the cable connecting the converter to the sensor is broken.	Check the status of the cables connecting the sensor, the grounding connections of the devices and the possible presence of noise sources.
[008] PIPE EMPTY	The measuring pipe is empty or the detection system has not been properly calibrated.	Check whether the pipe is empty or repeat the empty pipe calibration procedure.
[009] FLOW>MAX+	The flow rate is higher than the maximum positive threshold set.	Check the maximum positive flow rate threshold set and the process conditions.
[010] FLOW>MAX-	The flow rate is higher than the maximum negative threshold set.	Check the maximum negative flow rate threshold set and the process conditions.
[011] FLOW<MIN+	The flow rate is lower than the minimum positive threshold set.	Check the minimum positive flow rate threshold set and the process conditions.
[012] FLOW<MIN-	The flow rate is lower than the minimum negative threshold set.	Check the minimum negative flow rate threshold set and the process conditions.
[013] FLOW>FULL SCALE+	The flow rate is higher than the full scale positive value set on the instrument.	Check the full scale positive value set on the instrument and the process conditions.
[014] FLOW>FULL SCALE-	The flow rate is higher than the full scale negative value set on the instrument.	Check the full scale negative value set on the instrument and the process conditions.
[015] PULSE1>RANGE	The pulse generation output 1 of the device is saturated and cannot generate the sufficient number of impulses.	Set a bigger unit of volume or, if the connected counting device allows it, reduce the pulse duration value.
[016] PULSE2>RANGE	The pulse generation output 2 of the device is saturated and cannot generate the sufficient number of impulses.	Set a bigger unit of volume or, if the connected counting device allows it, reduce the pulse duration value.
[017] CALIBR.ERROR	Calibration Error	Contact the service
[018] SYSTEM FREQ.ERR	System Freq. Error	Contact the service
[019] B.DATA NOT INIT	Uninitialized data system	Contact the service
[020] FL.SENSOR ERROR	Flow rate sensor error	Contact the service
[021] BATTERY LOW	(Rechargeable) battery depleted	Contact the service to Replace the battery
[022] BATTERY V>MAX	Battery voltage (rechargeable)> max. Allowed	Contact the service to Replace the battery
[023] BATTERY I>MAX	Battery charge current> max. allowed	Contact the service to Replace the battery
[024] MAIN PS V.ERR	Main supply voltage (+ 5V) out of tolerance.	Contact the service
[025] USB VOLTAGE ERR	Voltage of USB connection out of tolerance.	Contact the service
[026] SDC ALMOST FULL	SD card space <500 MB.	For more information see function "12.9 Sd card status informations" page30.
[027] SDC FULL	SD card out of memory	Memory Full. You can not save logger. Contact the service to replace the SD memory.
[028] BATT.TEMP.CRIT	The battery can not be charged. The temperature is out of range (detected temperature <0 C° or temperature >50°)	Wait for the normal temperature reset. View Environmental Use Conditions "Environmental Use Conditions" page5.

ERROR CODE TEST SYSTEM OF SENSOR

The codes are in hexadecimal format, the meaning is given for each bit. There are several possible error simultaneous combinations (more bits active) then that will give the combined numerical codes.

CODE	ANOMALIES DESCRIPTION	ACTION TO TAKE	
0000	NO ERROR	---	
0001	SENSOR TEST INSULATION: Generator power too low	Contact the service	
0002	SENSOR TEST INSULATION: Generator power too high		
0004	SENSOR TEST INSULATION: Phase 1 generator voltage too low		
0008	SENSOR TEST INSULATION: Phase 1 generator voltage too high		
0010	SENSOR TEST INSULATION: Phase 1 terminal voltage coils 1 too low		
0020	SENSOR TEST INSULATION: Phase 1 terminal voltage coils 2 too low		
0040	SENSOR TEST INSULATION: Phase 2 generator voltage too low		
0080	SENSOR TEST INSULATION: Phase 2 generator voltage too high		
0100	SENSOR TEST INSULATION: Phase 2 terminal voltage coils 1 too low		
0200	SENSOR TEST INSULATION: Phase 2 terminal voltage coils 2 too low		
0400	SENSOR TEST INSULATION: Insulation loss, leakage current out of tolerance		Check: <input type="checkbox"/> wiring between sensor converter <input type="checkbox"/> conditions of use <input type="checkbox"/> set parameters If the problem persists contact the service
0800	TEST TEMPERATURE (RESISTANCE) COILS: Temperature (resistance) out of tolerance		
1000	TEST TIME GETTING ON CURRENT PHASE (A): Value out of tolerance		
2000	TEST TIME GETTING ON CURRENT PHASE (B): Value out of tolerance		
4000	TEST RESISTANCE INPUTS ELECTRODES: Input value 1 out of tolerance		
8000	TEST RESISTANCE INPUTS ELECTRODES: Input value 1 out of tolerance		